


# DTV Software Upgrade

**※ When S/W upgrading, be careful not to turn off TV as corruption of data will cause TV to malfunction.**


**※※ Warning – Please do not use USB on other TVs. Format USB after software upgrade.**

1) Firstly, Turn off TV, put the given Memory stick into USB port (USB Port usually placed on Left-side panel) and then, turn on TV

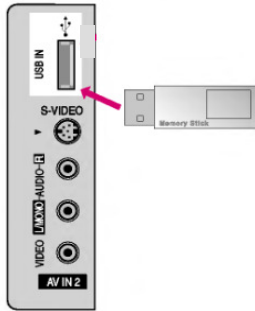

2) TV will automatically display Pic. 1.

(If you can't see Pic.1, please ring to 1800 506 154)

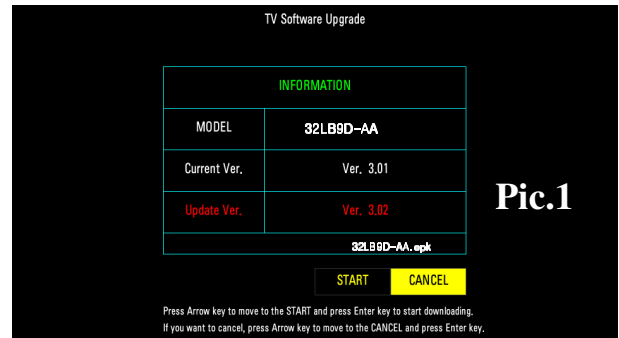


3) Using “Remote Controller”, move to “Start” and press “OK”




4) TV will copy files of “USB” into “TV” memory like

Pic.2.(The below screen shows for 2~4minutes so


**Do not Touch TV and Remote controller)**

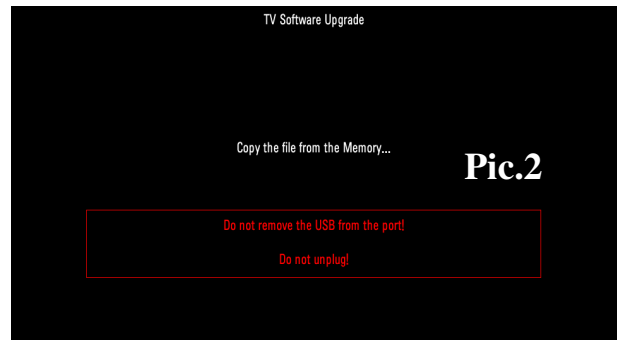

5) Upgrading on the flash memory in TV like Pic.3.

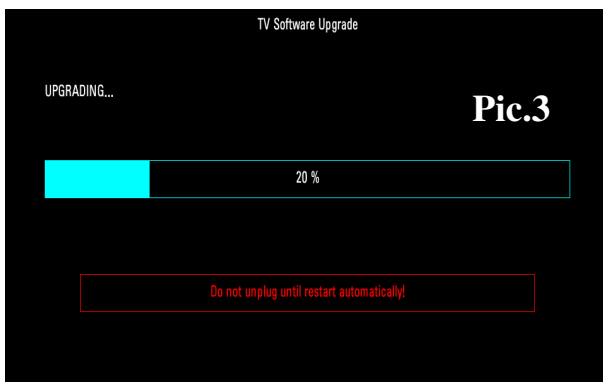

6) Once completed upgrading, TV will automatically Restart.

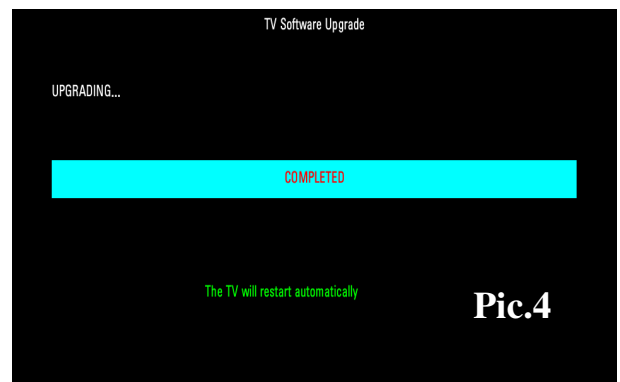

**★★Ref) Password : “0000” and then follow installation procedure**