 
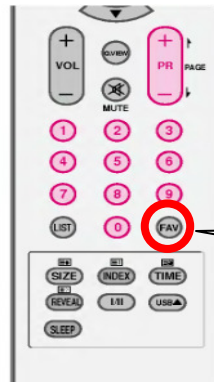


DTV Software Upgrade

※ When S/W upgrading, be careful not to turn off TV as corruption of data will cause TV to malfunction.

※※ Warning – Please do not use USB on other TVs. Format USB after software upgrade.

1) Firstly, Turn off TV, insert Memory stick into USB port (USB Port usually placed on Left-side panel) and then turn on TV

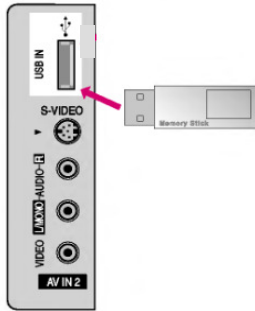

2) Press “MENU” button, Use down arrow to highlight “OPTION” and then, Press “FAV” button 7(Seven) times.

Press “7” times



4) Using “Remote Controller”, move to “Start” and press “OK”

5) TV will copy files from “USB memory stick” to “TV memory”. See Pic.2.

(The below screen will be displayed for 2~4minutes)



★★Do not Touch TV and Remote controller★★

3) TV will automatically display Pic. 1 in 1~2 minutes .
(If you can't see Pic.1, please ring to 1800 506 154)

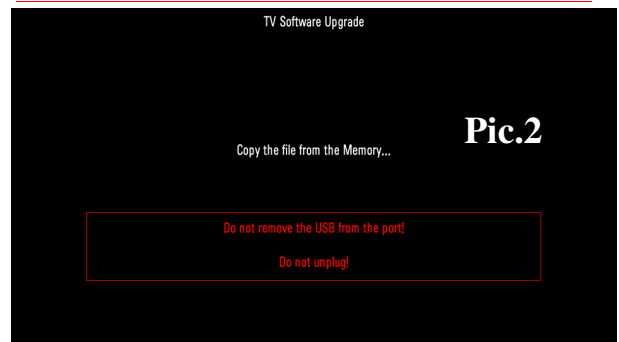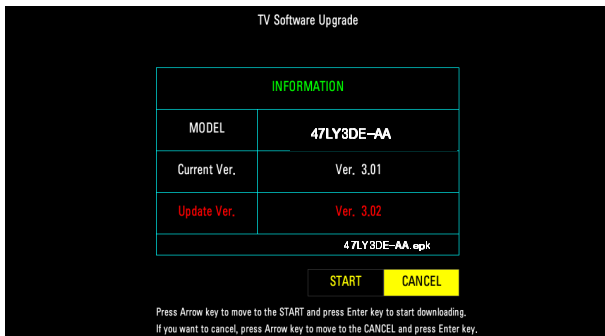

7) Once completed upgrading, TV will automatically Restart.

6) Upgrading on the flash memory in TV like Pic.3.

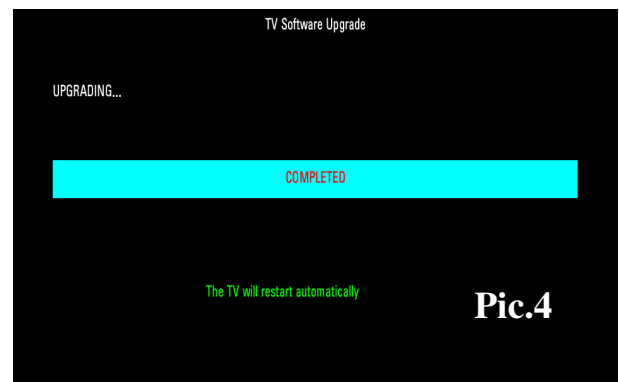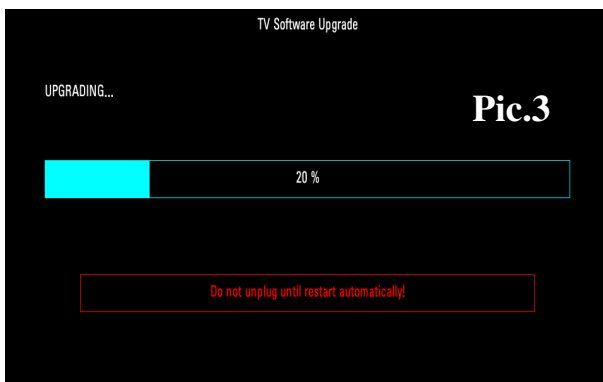

★★Ref) Password : “0000” and then follow installation procedure