



Washing Machine

OWNER'S MANUAL

MODEL : WP-1250R(S)(P)/WP-1270R(S)(P)
WP-1350R(S)(P)

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this
information to your dealer when you require service.
This washing machine is designed and manufactured for
household use only.

CONTENTS

SAFETY MEASURE.....	3~4
PARTS IDENTIFICATION.....	4~5
INSTALLATION.....	6~7
PREPARATIONS BEFORE WASHING.....	8
HOW TO WASH.....	9
HOW TO RINSE.....	10~11
HOW TO SPIN.....	11
AFTER FINISHING.....	12
REFERENCE.....	12
CARE AND MAINTENANCE.....	13~14
TROUBLESHOOTING GUIDE.....	14
SPECIFICATIONS.....	15

SAFETY MEASURE

- Manufacturer is not responsible for accidents caused by the user as a result of not following the user's guide.



CAUTION

In Operation

- Do not insert the hand in the spin dryer basket while the machine is in operation. (Do not let children climb on the machine or climb into the tub. Injury may occur.)




Installation Area

- Avoid area exposed to snow, rain, or where humidity is high. It may cause electric shock.



Switch Area

- Avoid watering on the switch area. It may cause electric shock or fire.

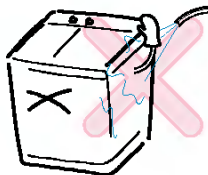


Spin Motor

- After continuous using spinning program 3 times, please stop spinning more than 1 hour. Otherwise the spin motor could be damaged or fired.


Volatile Material

- Do not use volatile material such as Benzene, Gasoline, bug killer. Do not leave strong alkaline substance such as bleach inside the tub. Damage on plastic surface and rubber parts may occur.

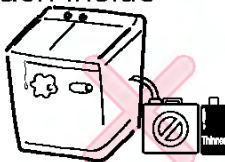

Heat

- Avoid electric heater, candle light, cigarette light, bug smoker, etc. near the machine. It may ignite or deform plastic part.

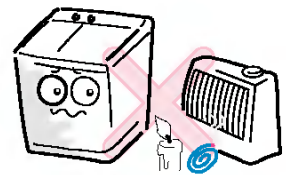

Electric Outlet

- Avoid connecting several electric devices to single outlet. It may cause fire.

Hard objects

- Remove pins, buckles and removable hard objects in the wash load to avoid damaging the tub before your washing

Power Cord

- If the power supply cord is damaged, it must only be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
- Be sure to earth the washer to prevent electrical shock.
- Do not install the washer in the humid spaces.



! CAUTION


Hot water

- Avoid using hot water over 50°C. It may deform plastic parts or cause malfunction.




Installation

- Install the washing machine on a horizontal support. Otherwise, it may cause vibration and noise.

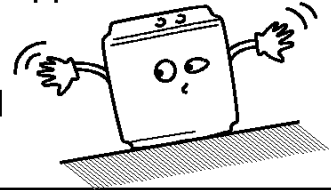


Power Cord


- Do not plug in the power supply cord when your hand is wet.

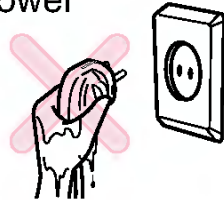

- Plug out the power supply cord when cleaning or not using the washing machine for a long time.

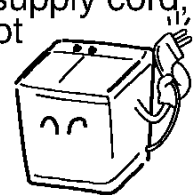

PARTS IDENTIFICATION

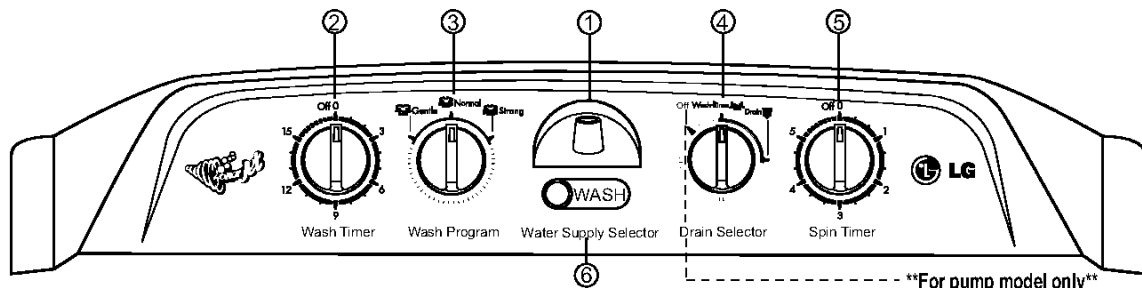

1. Water Supply Inlet

Connect here with the inlet hose from the water faucet to feed water to the tub.

2. Wash Timer

Select the desired time for washing or rinsing.

3. Wash Program

Set the selector to "Gentle", "Normal", "Strong" according to kind and quantity of the laundry.

4. Drain Selector

For Non-Pump Model

Select "WASH•RINSE" for washing and rinsing, and "Drain" to drain the water out of the tub.

5. Spin Timer

Select the desired time for spinning. The maximum limit is 5 min. Don't rotate the knob more than prescribed limit.

6. Water Supply Selector

Select "WASH" to supply water for washing and rinsing and "SPIN" for spin shower rinse.


※ Buzzer (Option : Inside)

It is electrically operated to facilitate you to know the completion of washing cycle.


For Pump Model

Select "WASH•RINSE" for washing and rinsing and "DRAIN" to drain the water out of the cabinet, and "OFF" to turn off the drain pump.

PARTS IDENTIFICATION

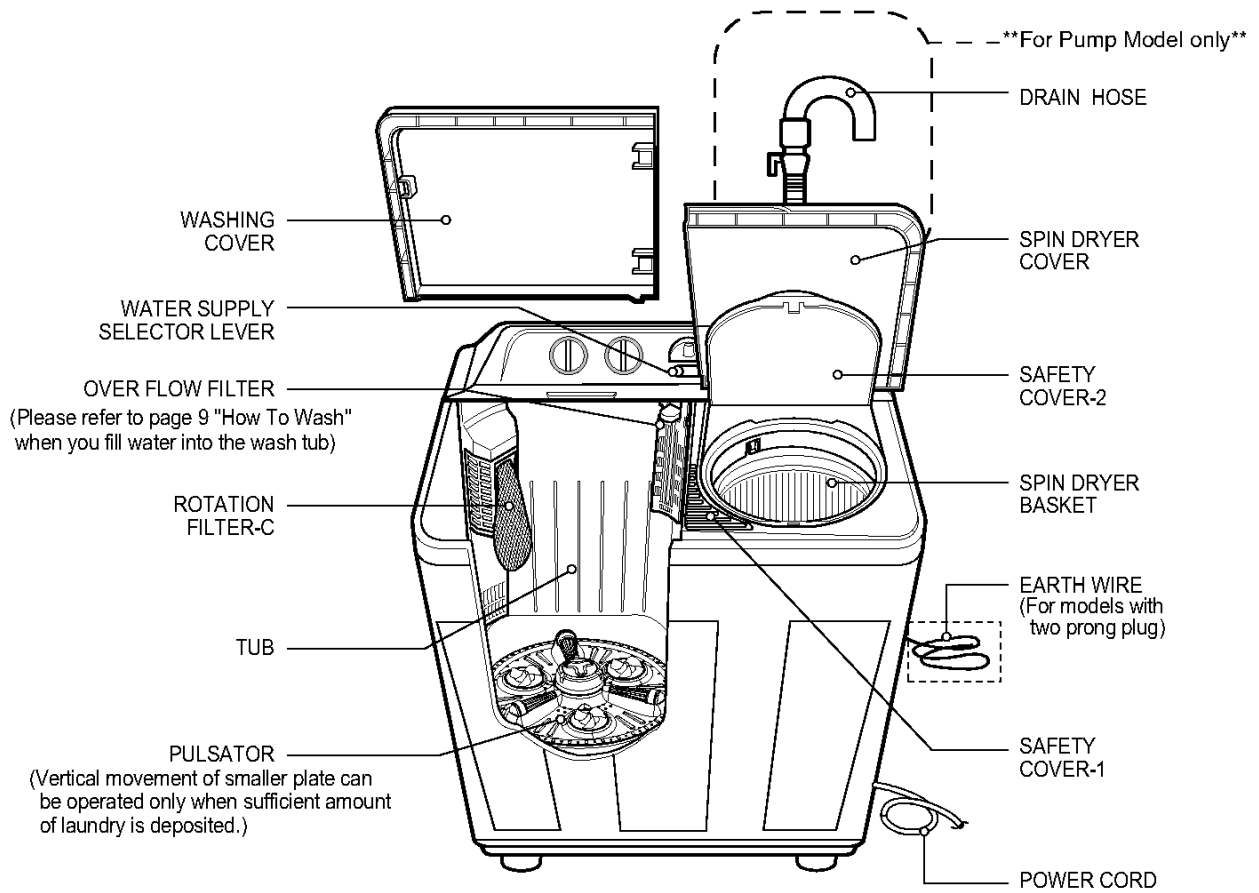



Accessories

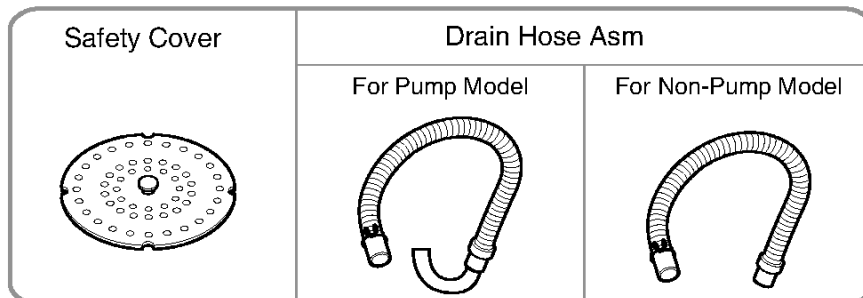

INSTALLATION



Installation area

- Set on flat and firm floor.
- Incorrect installation may cause severe noise and break down.
- Maintain more than 10cm between the side of drain hose and the wall.
- A carpet must not obstruct the ventilation openings.

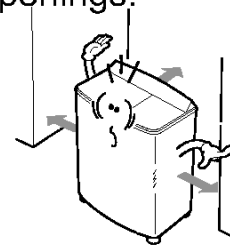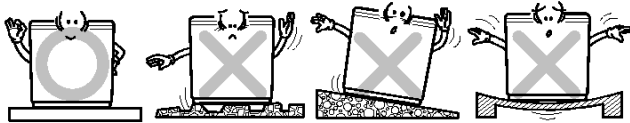




Connecting the drain hose

- Connect the drain hose to the outlet of the plunger valve located at the back side of the washing machine.
- Push the clamp toward the body of the washing machine as shown in the figure.

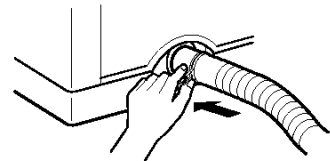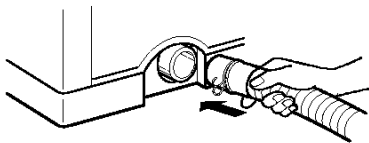


For Non-Pump Model Only

- Be sure to re-route the hose so that it is not kinked or has sharp bends which will prevent proper drainage.
- The level of the drain should be slightly lower than the lowest part of the washing machine in order to ensure proper and complete drainage.

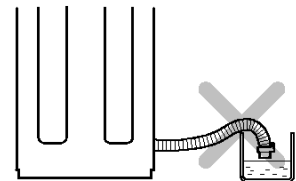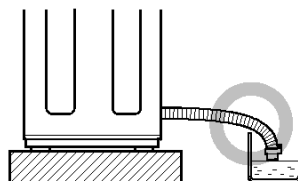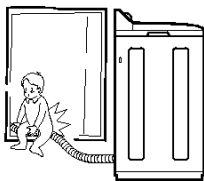

Connecting the earth wire


- Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer. Connect it to the metal water pipe. If the water pipe is made of plastic, it does not have the earth effect.
- Never connect the earth wire to the gas pipe, lightning arrester, telephone connector, etc.

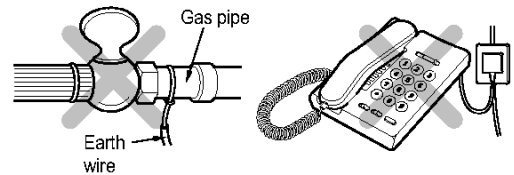


※ WARNING-THE APPLIANCE WITH TWO-PRONGED PLUG MUST BE GROUNDED.

Other earthing method


- After connect the earth wire to the earth copper plate, bury it at least 75cm deep under the wet ground.

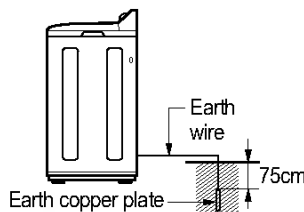

- Connect the earth wire to the earthing only outlet.

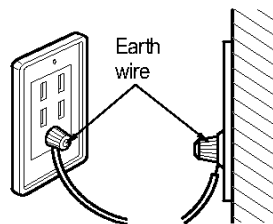


- When installing it in an area where earthing is not possible, purchase a short-circuit breaker (15mA at operation, 7.5mA at idle) and connect it to the outlet.

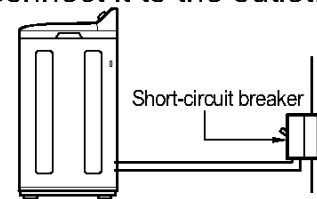


Connecting the power plug

- Insert the power plug into the outlet.
- Before connecting the power plug, check if the voltage setting of the washer matches the outlet voltage.
- If AC outlet with ground terminal is used, grounding is not needed. If not, never forget earthing (earthing method above).
- The appliance must be positioned so that the plug is accessible.

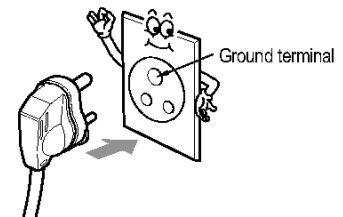

Voltage Change (only for dual voltage)

This washer is assembled for 220V, but can be changed from 220V to 110V(or 127V). Check your electrical source and follow the diagram below to convert voltage.

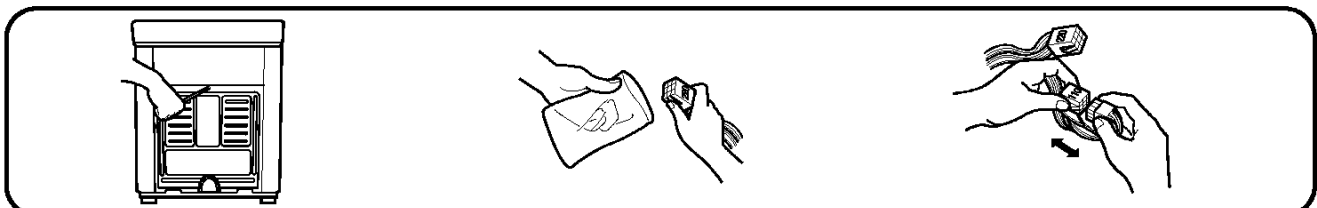


PREPARATIONS BEFORE WASHING

Preparation

- Connect the water supply hose to the water supply inlet.

- Set the water supply selector lever to "WASH" for washing and rinsing, to "SPIN" for interim spin rinse.

• Note: The water selector lever should not be placed near the center (as shown in Fig (A)) otherwise water will flow into the wash and spin tub simultaneously.)

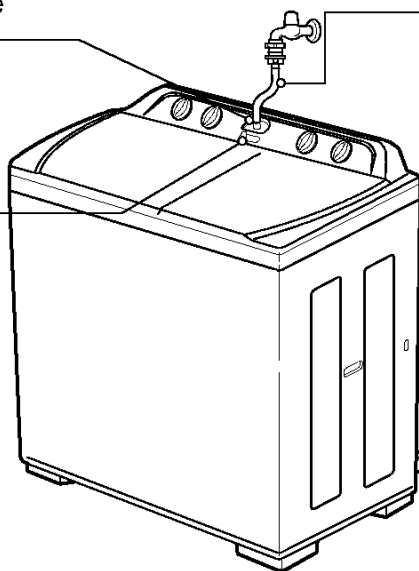

■ Inlet hose


■ Connect the power cord to the electrical outlet.

L Please see setting method at **Note** :


■ Drain hose
Hang up the drain hose.

Note :

For Pump Model
 $L \leq 1 \text{ m}$.

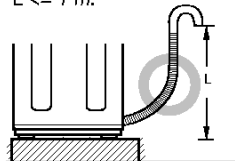

For Non-Pump Model
 $L = 0 \text{ m}$., Lay down drain hose on floor

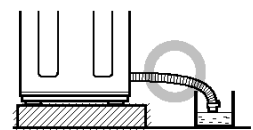


Before washing


- 1 Check the washing instruction labels on the clothing to be washing



- 2 Remove any objects from the pockets of the clothing. Object left in the pockets may damage the clothing or washing machine (especially cause clogging of the drain hose).

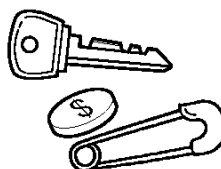


- 3 Separated washing is required for oiled or dyed laundry.

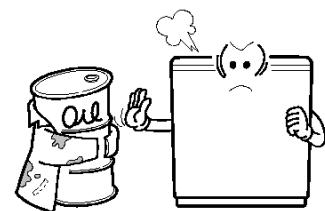


Note) • For better wash of lots of laundry, Putting more heavily-soiled laundry first is recommended.

HOW TO WASH

- 1** *For Non-Pump Model*
Set the drain selector to "WASH RINSE" Position.

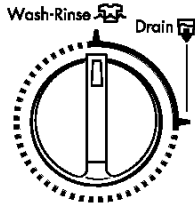


- For Pump Model*
Set as "OFF" Position.

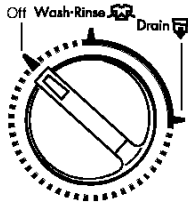


- 2** Set the water selector to "WASH"



- 3** Open water supply and fill water in the wash tub about halfway to the desired water level.

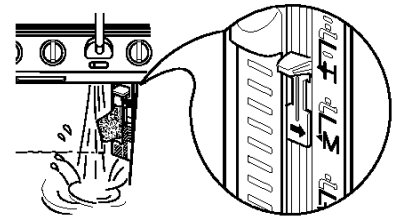


- 4** Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level which you want.

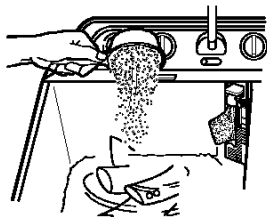


Refer to TABLE 2 in REFERENCE on page 12.

- 5** Select the wash program to "GENTLE", "NORMAL", or "STRONG" according to the kinds and quantity of the laundry

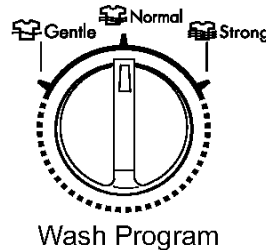

Refer to TABLE 2 in REFERENCE on page 12


- 6** Set the desired wash time.

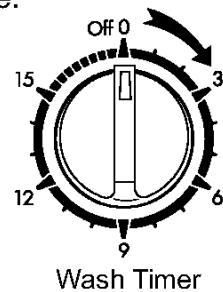


Refer to TABLE 2 in REFERENCE on page 12 for information on how to select the appropriate washing time.

- 7** When washing is finished, locate the drain selector to "DRAIN" position and drain the water out.

For Non-Pump model

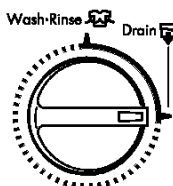


For Pump model

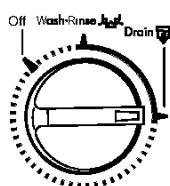

- 8** Spinning in the spin dryer basket.

Move the laundry into the spin dryer basket. Put the laundry down lightly. Place the safety cover horizontally on the laundry. Set the desired spin time with the spin timer.

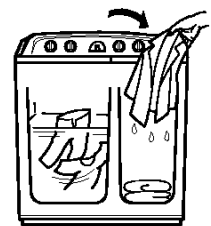


HOW TO RINSE


Economic water supply rinse

- Interim spin rinse prior to regular rinsing helps removing sudsy water from the laundry and improve rinsing efficiency. Also is helpful to water saving.


- 1** After washing.
- Move the laundry into the spin dryer basket.
 - Place the safety cover horizontally on the laundry.

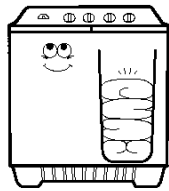


- 2** Set the water selector to "SPIN"

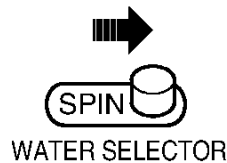


- 3** Supply the water to flow appropriately.
- 4** Stop water supply, close the safety cover-2 and spin dryer cover

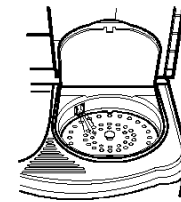

- 5** Set the desired spin time with the spin timer

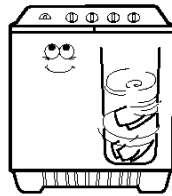


- 6** After interim spin rinse, move the laundry into the wash tub for rinsing.

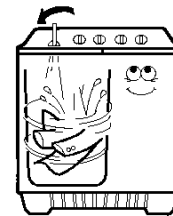


- 7** Set the drain selector to "WASH · RINSE" position and feed appropriate water quantity to the tub.




For Non-Pump model

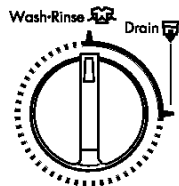


For Pump model

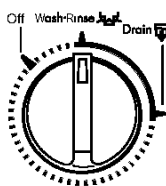

- 8** Set the rinse time with the wash timer.

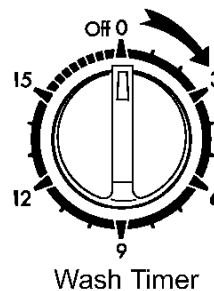





- 9** After rinsing, Move the laundry into the spin dryer basket and set the spin time with the spin timer.

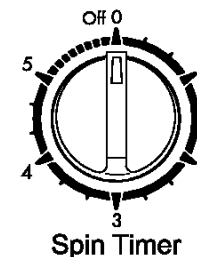

- 10** Move the laundry into the wash tub and repeat step 7 to 9 for more rinsing.



Continuous water supply rinse

- This overflowing rinse is helpful to improve rinsing efficiency and remove the lint.
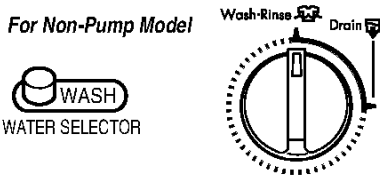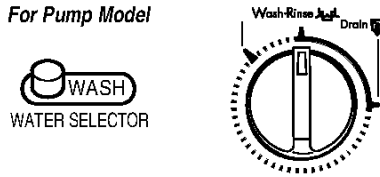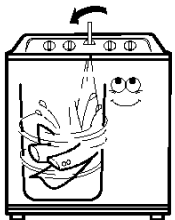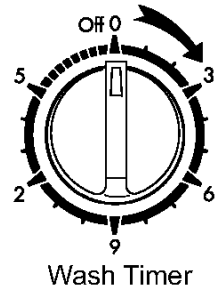
<p>1 Set the drain selector to "WASH•RINSE" position.</p> <p><i>For Non-Pump Model</i></p>  <p><i>For Pump Model</i></p> 	<p>2 Put the laundry into the wash tub and supply the water.</p> 	<p>3 Set the rinse time with the wash timer and feed water continuously during the rinsing.</p>  <p>Wash Timer</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

HOW TO SPIN

1. Put the laundry evenly into the spin dryer basket.
2. Put the laundry down lightly.
3. Place the safety cover horizontally over the laundry.
4. Close the spin dryer cover.
5. Set the spin timer according to the following table.

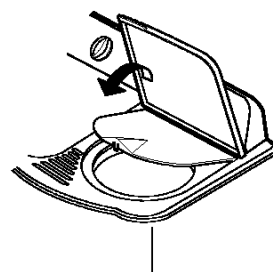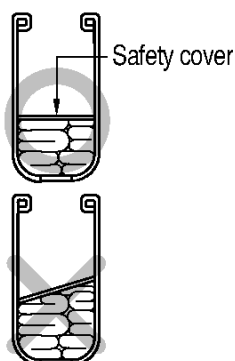


Spin time guide

Type of clothing	Spin time
Thin fabrics (synthetic fabrics, mixed fabrics)	1 minute
Sweaters (synthetic fabrics)	1~3 minutes
Cotton underwear	3~5 minutes
Sheets, towels	5 minutes

- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly, and then resume spinning.
- If spinning fail to stop within 15 seconds after the spin dryer cover is opened, the brake is out of order. Immediately stop using the machine and request repair service.

AFTER FINISHING

1. Remove the laundry from the spin dryer basket and close the spin dryer cover.
2. If there is water in the wash tub, set the drain selector to "DRAIN" in order to drain it out.
(For Pump Model Only : and then put it back to "OFF")
3. Disconnect the power cord from the electrical outlet.
4. Clean the washing machine. (Refer to CARE AND MAINTENANCE on page 13~14.)
5. Ensure without fail the drain selector is turned to "OFF" Position after using the machine. (For Pump Model Only)

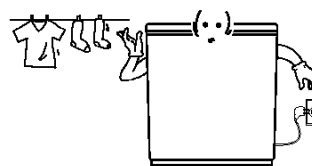

REFERENCE

TABLE 1. WEIGHT GUIDE FOR CLOTHES

Type of clothing	Type of fabric	Weight per piece
Under shirt	Cotton	150 g (53oz)
Handkerchief	Cotton	50 g (1.8oz)
Bath towel	Cotton	300 g (10.6oz)
Shirt	Mixed fabric	200 g (7.1oz)
Socks (1 pair)	Mixed fabric	50 g (1.8oz)
Pajama (shirt and pants)	Cotton	500 g (17.6oz)
Winter undershirt	Cotton	600 g (21.2oz)
Workclothes	Mixed fabric	800 g (28.2oz)
Blouse	Mixed fabric	200 g (7.1oz)

TABLE 2. GUIDE FOR WASHING

Type of fabric	Wash selector	Wash time	Water level	Amount of laundry (Kilograms)	Amount of water (Liters)	Amount of detergent (Grams)
Synthetics, Silk, Woolen, Knits	GENTLE	2~5 min.	S	0.5~4.5	43	40~45
			L	4.5~5.5	50	48~52
			M	5.5~6.5	58	56~60
			H	6.5~	67	65~70
Cotton, Linen	NORMAL	5~10 min.	S	0.5~4.5	43	40~45
			L	4.5~5.5	50	48~52
			M	5.5~6.5	58	56~60
			H	6.5~	67	65~70
Very soiled cotton and linen	STRONG	10~15 min.	S	0.5~4.5	43	40~45
			L	4.5~5.5	50	48~52
			M	5.5~6.5	58	56~60
			H	6.5~	67	65~70

- Note) • Amount of laundry is a weight of dry laundry.
• Detergent is a general synthetic detergent.

CARE AND MAINTENANCE

- Be sure to disconnect the power cord from the electric outlet before starting care and maintenance.


Washing machine

If the washing machine itself becomes dirty.

- The washing machine can be cleaned with a mild liquid detergent. Never use abrasive cleanser or chemicals such as benzene or thinner to clean the washing machine, because these materials will damage both the painted surfaces and the plastic parts.


Pulsator

- If a button or some other object gets caught in the pulsator.
 1. Take out the pulsator cap with "-" type driver.
 2. Use a screwdriver to loosen the screw in the center of the pulsator, and lift the pulsator straight up in order to remove the button or other object.
 3. Replace the pulsator and tighten the screw.
 4. Replace the pulsator cap.

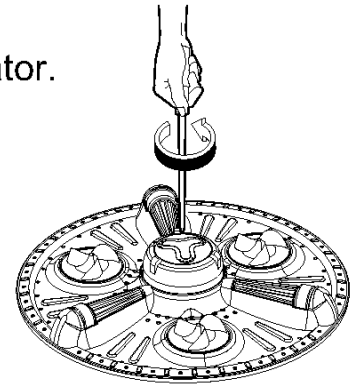

Rotation filter-C


1. Take out the rotation filter-C by pulling in the direction shown.
2. Turn the net over and rinse in water.
3. After cleaning, replace the rotation filter-C.

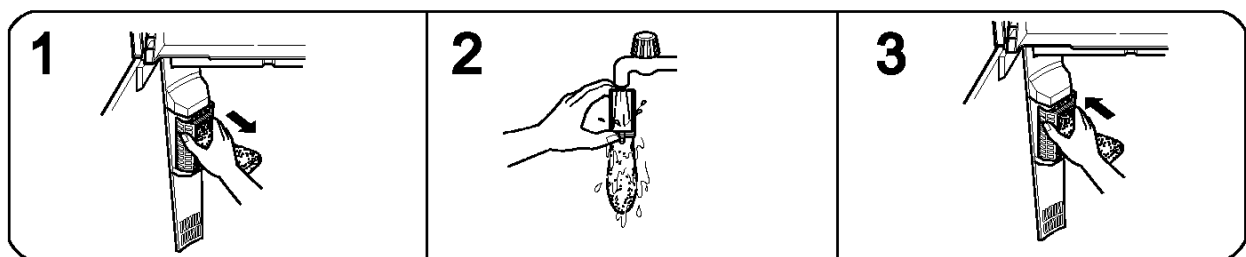

CARE AND MAINTENANCE

Overflow filter

1. Pull the overflow filter forward from the wash tub in the direction of the arrow.
2. Use a brush or your hand to remove all of the lints which has adhered to the overflow filter.
3. Insert the over flow filter back into the wash tub.

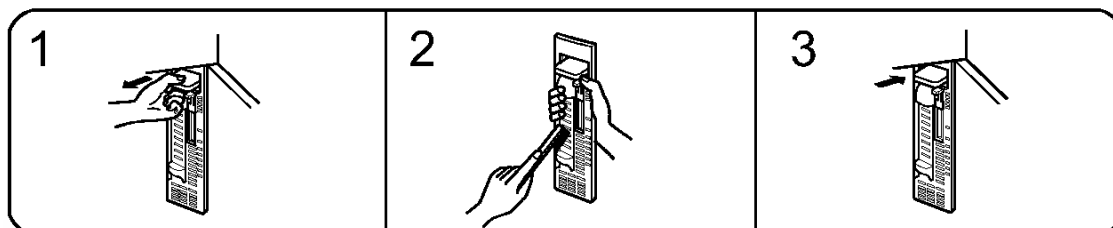

Spin dryer basket

- If clothing becomes trapped between the spin dryer basket and the spin tub.
 1. Take hold of the front of the safety cover-1 and pull the tub by the other hand.
 2. Pull the safety cover-1 upward and then remove the article of clothing.
 3. Close the safety cover-1, pressing down on it so that it fits securely into the spin tub.




TROUBLESHOOTING GUIDE

Before Requesting Service

Type of clothing	Checking point
Motor does not operate	<ul style="list-style-type: none"> • Is the power cord firmly plugged in? • Is the timer turned to a suitable point except "OFF"?
Spin dryer basket does not operate.	<ul style="list-style-type: none"> • Is there any clothing dropped between the basket and tub? • Is the spin dryer cover closed? • Is the laundry gathered to one side of the spin dryer basket?
No draining For Non-Pump Model	<ul style="list-style-type: none"> • Is there any lint stuck in the plunger valve? • Is the end of the drain hose guide located at an exceed height?
For Pump Model	<ul style="list-style-type: none"> • Is the drain pump operated?

SPECIFICATIONS

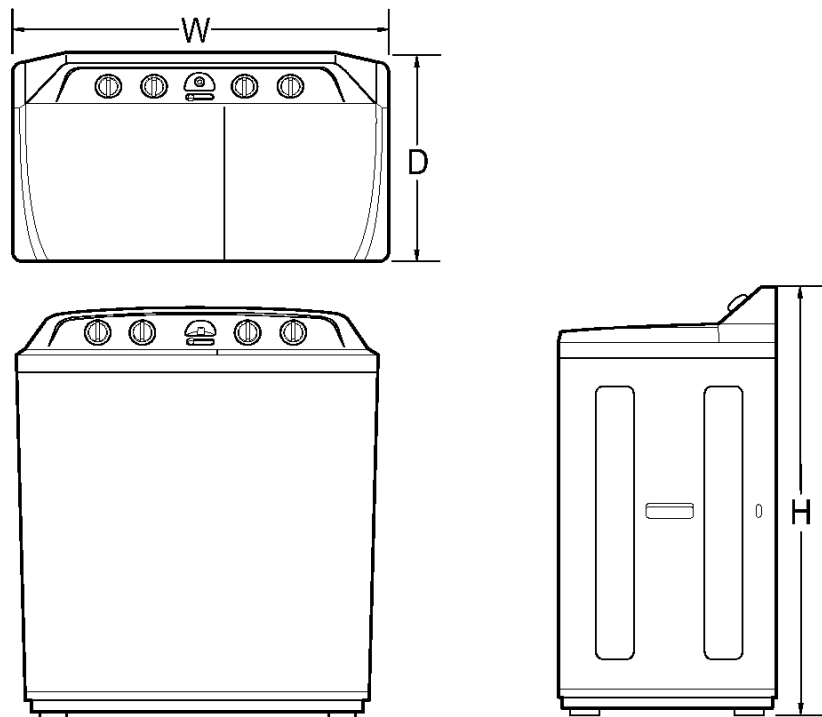

Power source	ON SPECIFICATION LABEL
Water Pressure	Less than 100kPa (1kgf/cm ²)
Water level	H : 67 l, M : 58 l, L : 50 l, S : 43 l
Dimensions	850x530x1017mm. (WxDxH)
Weight (Net) For Non-Pump	40.5kg
Weight (Net) For Pump	41.1kg

- How to read the manufactured month and year from the label stuck on the back of the product.

EX) 4 0 1 T W 0 0 0 0 1

└─ Serial No.
└─ Product code
└─ Month
└─ Year (The last digit of year)

NOTE