

Correction Sheets

The descriptions for the “**Lock (Parental Control) Settings**” on the owner’s manual (pages 23-24) are changed as follows due to software upgrade.

Lock (Parental Control) Settings



Notes:

- Lock System and TV Rating options are effective for digital TV program only.
- When you set the TV Rating, a program with a TV Rating beyond your rating setting cannot be recorded correctly. (Normal recording, Timer recording, etc.)
- The default TV Rating setting is to allow all programs to be viewed.

Lock System

You can lock certain unsuitable channels to prevent children from accessing them, or set a TV Rating, so that any digital TV program classified above that rating by the broadcaster will be restricted. If the [Lock System] is set to [OFF], TV Rating options are not effective.

The Lock System option is effective for TV Rating and Downloadable Rating options.

1. Select [Lock System] option then press ►.
2. To access the Lock Menu options, you must input the 4-digit password you created.
If you have not yet entered a password you are prompted to do so. Input a 4-digit password. Enter it again to verify. If you make a mistake, press CLEAR.
3. Select [ON] or [OFF] using the ▲ / ▼ buttons.
4. Press ENTER to confirm your setting.

Rating

Blocks playback of rated DVDs based on their content. Not all discs are rated.

1. Select [Rating] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select a rating from 1 to 8 using the ▲ / ▼ buttons.
[1]-[8]: Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.
[No Limit]: If you select [No Limit], parental control is not active and the disc plays in full.
4. Press ENTER to confirm your rating selection, then press HOME to exit the menu.

Note:

If you set a rating for the DVD Player/Recorder, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternate scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.

Set Password

You can enter or change password.

1. Select [Set Password] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
To change the password, press ENTER when the [Change] option is highlighted, then input old password. Input new password. Enter it again to verify.
To delete the password, select [Delete] option then press ENTER, then input old password. The password is deleted.
3. Press HOME to exit the menu.

If you forget your password

If you forget your password you can reset it using the following steps:

1. Press HOME and the Home menu appears.
2. Select [Setup] > [Start] and press ENTER.
3. Input the 6-digit number [210499]. When the message appears, select [OK] then press ENTER. The password will be reset.
4. Enter a new password as described above.

Note:

If you delete your password, all ratings will be reset to the default setting. The default setting is to allow all programs to be viewed in full.

Area Code

Enter the Area Code whose standards were used to rate the DVD video disc, based on the Area Code List in the owner’s manual.

1. Select [Area Code] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select the first character using ▲ / ▼ buttons.
4. Shift the cursor using ► buttons and select the second character using ▲ / ▼ buttons.
5. Press ENTER to confirm your area code selection, then press HOME to exit the menu.

TV Rating-Children

Prevents children from watching certain children's TV programs according to the rating setting. This rating applies only to TV programs for children. Unless you block TV programs intended for mature audiences in the TV Rating – General menu, your children could view those programs.

1. Select the [TV Rating-Children] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select the [Age] or [Fantasy Violence] option then press ►.

[Age]: Selection applies regardless of content category of rating.

[Fantasy Violence]: Selection applies if TV programs include rating for Fantasy Violence.

4. Select a rating then press ENTER.

[TV-Y]: All Children.

[TV-Y7]: Directed toward children age 7 and older.

[Blocking Off]: Permits all programs.

TV Rating-General

Blocks TV programs that you or your family may not wish to watch, based on the rating scheme set.

1. Select the [TV Rating-General] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select the [Age], [Dialogue], [Language], [Sex], or [Violence] option then press ►.

[Age]: Selection applies regardless of content category of rating.

[Dialogue]: Selection applies if TV programs have rating for dialogue.

[Language]: Selection applies if TV programs have rating for language.

[Sex]: Selection applies if TV programs have rating for sex.

[Violence]: Selection applies if TV programs have rating for violence.

4. Select a rating then press ENTER.

[TV-G]: General audience.

[TV-PG]: Parental guidance suggested.

[TV-14]: Parents strongly cautioned.

[TV-MA]: Mature audience only.

[Blocking Off]: Permits all programs.

TV Movie Rating

Blocks movies according to the movie ratings restrictions so children cannot view certain movies. You can set the ratings to block out all the movies with ratings above a specified level. Keep in mind that the movie ratings apply only to movies shown on TV, not TV programs such as soap operas.

1. Select the [TV Movie Rating] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select a rating then press ENTER.

[G]: General audiences
All ages admitted.

[PG]: Parental guidance suggested.
Some material may not be suitable for children.

[PG-13]: Parents strongly cautioned
Some material may not be appropriate for children under 13.

[R]: Restricted under 17 requires accompanying parent or adult guardian.

[NC-17]: No one 17 and under admitted.

[X]: No one 17 and under admitted (Adult only).

[Blocking Off]: Permits all programs.

Downloadable Rating

The rating information can be updated if a TV station sends the downloadable rating information.

Note:

Downloadable Rating is a technology that allows digital TV stations to create and deliver new rating systems in the future if they choose.

1. Select the [Downloadable Rating] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select a rating title or TV rating then press ►.
4. Select a rating then press ENTER.

Notes:

- If rating information is not downloaded from a TV station, the Downloadable Rating option will not be available.
- Rating information is automatically downloaded while watching DTV channels. It may take several seconds.
- The Downloadable Rating option is available for use after rating information is downloaded from a TV station. However, depending on the information from a TV station, it may not be available for use.
- Rating levels may differ depending on the broadcasting station.
- The default option name and Downloadable Rating changes depending on the downloaded information.
- The on-screen display for Downloadable Rating options will appear with a language that TV station sends.
- The rating titles (For example: Humor, etc) and TV ratings (For example: MH, H, VH, etc) may differ depending on the TV station.

TV Rating-CELR (for Canadian program)

(CELR: Canadian English Language Rating system)

1. Select the [TV Rating-CELR] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select a rating then press ENTER.

[E]: Exempt TV program includes: news, sports, documentaries and other information program, talk shows, music videos, and variety program.

[C]: Program intended for children under age 8.

[C8+]: Program generally considered acceptable for children 8 years and over to watch on their own.

[G]: General audience.

[PG]: Parental guidance.

[14+]: Program contains themes or content which may not be suitable for viewers under the age of 14.

[18+]: Adult program.

[Blocking Off]: Permits all programs.

TV Rating-CFLR (for Canadian program)

(CFLR: Canadian French Language Rating system)

1. Select the [TV Rating-CFLR] option then press ►.
2. Follow step 2 as shown in [Lock System] above.
3. Select a rating then press ENTER.

[E]: Exempt TV program

[G]: General - Program intended for audience of all ages.

[8 ans+]: Not recommended for young children.

[13 ans+]: Program may not be suitable for children under the age of 13.

[16 ans+]: Program is not suitable for children under the age of 16.

[18 ans+]: Program restricted to adults.

[Blocking Off]: Permits all programs.