

LG Tritan™



Touch UI
(Touch Screen)



Customizing the
Home Screens



Transferring Music



Connecting *Bluetooth*®
Wireless Technology



Document Viewer



Browsing the Web



Accelerometer



Taking a Picture



Recording a Video

Quick Start Guide www.LGmobilephones.com/Tritan



LG

Life's Good

Getting to Know Your Phone



1. Camera Lens
2. Volume Up/Down
3. Lock/Unlock Key
4. microSD™ Memory Port
5. Micro USB/Charging Port
6. Camera Key
7. Speaker
8. Earpiece
9. Proximity Sensor

10. Light Sensor
 11. Headphone Jack
 12. Function Key
 13. Shift Key
- Change Capitalization:
Abc (Sentence Case)
ABC (ALL UPPERCASE)
abc (all lowercase)

14. Space Key
15. Symbols Key
16. Enter Key
17. Clear & Back Key
18. Talk Key
19. Clear & Back/
Speakerphone Key
20. Power/End Key
21. Scrolling Key

LG Tritan's design puts everything you need at your fingertips, including customizable home screens, Flash UI for clear images and fun animations, and an accelerometer, all easily accessible with the large 3.0" touch screen and a slide-out four-line QWERTY keyboard.


Navigate the Home Screens

1. Use the tip of your finger to access features on your phone. You only need a soft tap with the sensitive touch screen.
2. To move from one home screen to another, press and *drag* horizontally across the touch screen. The display will rotate to the next home screen.

Search Contacts

1. From a home screen, tap the **Contacts Icon** .
2. Enter the name of the desired contact with the virtual QWERTY keyboard.

Note: The touch screen is automatically locked when the phone is left inactive. To unlock the touch screen, tap the **Unlock Icon**  or press the **Unlock/Lock Key**  located on the left side of the phone.

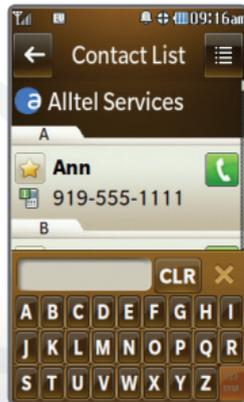

Customizing the Home Screens

Make your LG Tritan truly fit your style by customizing the home screens with shortcuts to your favorite features, media, and websites.

Widget Home Screen

Quickly access shortcuts to tools, menus, web bookmarks, and Alltel applications through the customizable **Widget Home Screen**.

Contacts Home Screen

Add commonly used contacts to the **Contacts Home Screen**. Tap a picture ID to place a call, send a text message, or edit contact information.

Multimedia Home Screen

The **Multimedia Home Screen** hosts shortcuts to multimedia files such as pictures, videos, and music.



Transferring Music

Transform your LG Tritan into a portable music player. Copy music, pictures, and other media files to a microSD card and access them anywhere you go!

1. From standby mode and with the phone unlocked, insert a microSD card* into the port located on the left side of the phone.
2. Connect your LG Tritan to your PC with a USB data cable.
3. Tap **USB Mass Storage**.
4. Tap **Yes**.
5. While connected in mass storage mode, you may drag and drop files and folders through Windows Explorer as if your phone were an external hard drive.




**Requires microSD card (sold separately) and USB data cable (included with phone).*

Ready to go wireless? With *Bluetooth* wireless technology, you can pair your LG Tritan with headsets, speakers, printers, and much more.

1. Set your *Bluetooth* accessory into pairing mode.*
2. From standby mode and with the phone unlocked, tap the **Menu Icon** .
3. Tap the **Settings Subcategory Icon** .
4. Tap **Bluetooth** .
5. Tap **Search**.
6. If *Bluetooth* wireless technology is off, you will be prompted to turn it on by tapping **Yes**.
7. Tap the name of the device with which you want to pair.
8. Enter the four-digit passcode* (typically 0000) using the virtual keypad and tap **OK**.
9. When pairing is complete, tap **Yes** to connect to your device.

**Refer to your Bluetooth accessory's user guide for information about initiating pairing mode and the passcode if asked (typically 0000).*

Note: *Bluetooth* accessories sold separately.

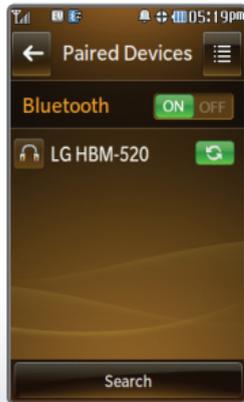

Document Viewer

With the LG Tritan, there's no need to be tied down to a computer. View your vital documents on the go with the handy Document Viewer.



1. The Document Viewer allows you to view Microsoft® Word, Excel®, and PowerPoint® files and Adobe® Acrobat® files. With one of these files stored on a microSD card, insert the card in the port located on the left side of the phone.
2. From standby mode, tap the **Menu Icon** .
3. Tap the **Multimedia Subcategory Icon** .
4. Tap **My Stuff**, then tap **Documents**.
5. Tap the **Options Icon** , and then tap **Memory Manager**.
6. Select **External Memory**.
7. Tap the document you wish to view.



Browsing the Web

Want to check your favorite websites without carrying around a laptop? LG Tritan's tabbed browsing feature lets you view up to three web pages at once!

1. From standby mode and with the slide open, tap the **Alltel Web Icon** .
2. Tap **www**, and then tap the **http:// Field**.
3. Enter a web address using the QWERTY keyboard. When you are finished, tap **Done**.
4. If you'd like to view another website without closing the current one, tap the next blank browser tab at the top of the screen. You can then enter another web address following the same steps as previously outlined.
5. To quickly navigate between browser simply tap the tab you wish to view.

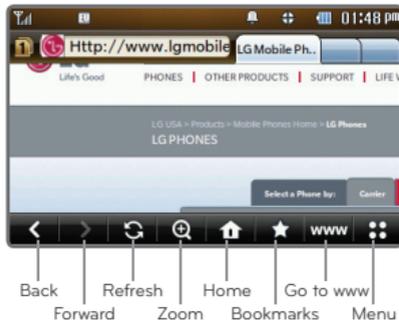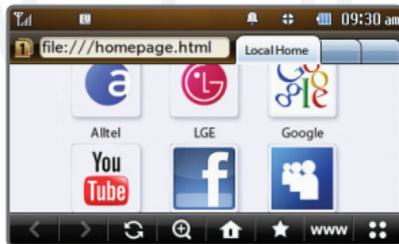

Accelerometer

Horizontal or vertical display? Your LG Tritan includes the new accelerometer feature, which rotates the display from landscape to portrait to suit your needs!

To adjust the user interface, simply rotate the phone. The vertical view is ideal for traditional phone use while the horizontal view is optimized for messaging and web browsing with the QWERTY keyboard.

Enjoy music, photos, and messaging in any direction with LG Tritan!



Taking a Picture

Capture every moment with LG Tritan's 3.0 megapixel camera with auto focus.

1. From standby mode and with the phone rotated horizontally, press and hold the **Camera Key** .
2. To access customizable settings, tap the **Settings Icon** .
3. To enable auto focus, lightly press and hold the **Camera Key** . When your image is in focus, the viewfinder will turn green.
4. When you're ready, press the **Camera Key**  to take your picture.



Recording a Video

Catch all the action with LG Tritan's 3.0 megapixel camcorder!

1. From standby mode and with the phone rotated horizontally, quickly press the **Camera Key** .
2. Tap **Record Video**.
3. Tap the **Recording Icon**  to begin recording your video.
4. When you are ready to stop recording, tap the **Stop Recording Icon** .



Optional Accessories



Bluetooth Stereo Headset
(HBS-250)



Bluetooth Solar Speakerphone
(HFB-500)



Bluetooth Headset
(HBM-310)



Bluetooth Headset
(HBM-520)



Maximize your phone with these cutting-edge accessories at www.LGmobilephones.com/Tritan.

All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. Copyright © 2009 LG Electronics, Inc. ALL RIGHTS RESERVED. LG is a registered trademark of LG Electronics, Inc. Features and specifications are subject to change without prior notice. The use of non-LG accessories will void the warranty and may result in damage to the phone, the phone exploding, or other dangerous conditions. microSD™ is a trademark of SanDisk. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics MobileComm, U.S.A., Inc. is under license. Other trademarks and trade names are those of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately.



Mixed Sources

Product group from well-managed forests and controlled sources and recycled wood based products

www.fsc.org Cert no. XXX-XXX-XXX
© 1996 Forest Stewardship Council