



F7200

User Guide



Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Copyright © 2005 LG Electronics, Inc. ALL RIGHTS RESERVED.

All materials used herein, including but not limited to trademarks, service marks, and all other commercially valuable rights, properties and products are owned by and proprietary to LG Electronics, Inc. and may not be reproduced, republished, redistributed or disseminated, either in whole or in part, without the express written permission of LG Electronics, Inc.

All other marks are proprietary to their respective owners. Features and specifications are subject to change without prior notice.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
2. The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
3. This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
4. The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
5. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
6. The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER :

1. Defects or damages resulting from use of the product in other than its normal and customary manner.
2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
4. That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
5. Products which have had the serial number removed or made illegible.

6. This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
7. Damage resulting from use of non-LG approved accessories.
8. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
9. Products operated outside published maximum ratings.
10. Products used or obtained in a rental program.
11. Consumables (such as fuses).

3. STATE LAW RIGHTS :

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

4. HOW TO GET WARRANTY SERVICE :

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit www.lgeservice.com. Correspondence may also be mailed to:

LG Electronics MobileComm U.S.A., Inc.

201 James Record Road Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE

ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

ENGLISH



F7200

User Guide

Table of Contents

Unpacking	9	Adjusting the Volume.....	23
For Your Safety	10	Answering a Call	23
Your Phone	14	Using the speakerphone.....	23
Phone Components.....	14	Vibrate Mode (Quick)	23
Your Phone's Features	15	Signal Strength	23
Display Information	16	Entering Text	24
Getting Started	18	Selecting Functions and Options.....	27
Installing the SmartChip.....	18	 	
Charging the Battery	19	Address Book	27
Turning Your Phone On and Off.....	21	 	
Access Codes	21	In-Call Menu	28
 		During a Call	28
General Functions.....	22	Making a Second Call	28
Making a Call	22	Swapping Between Two Calls	28
Making a Call by Send Key.....	22	Answering an Incoming Call	28
Making International Calls	22	Rejecting an Incoming Call.....	28
Ending a Call	22	Muting the Microphone	28
Making a Call From the Contact	22		

Multiparty or Conference Calls..... 29

Making a Second Call	29
Setting up a Conference Call	29
Activate the Conference Call on Hold	29
Adding Calls to the Conference Call	29
Private Call in a Conference Call	29
Ending a Conference Call	29

Menu Tree 30**Recent Calls..... 32**

Missed Calls	32
Dialed Calls	32
Received Calls	32
Delete Recent Calls.....	32
Call Duration.....	33
Data Information	33

Messaging..... 34

IM.....	34
---------	----

Text Messages..... 38

New Message	39
Inbox.....	40
Sent	40
Drafts.....	40
Settings.....	40
Delete All	41

Multimedia Messages 41

New Message	41
Inbox.....	41
Outbox.....	42
Sent	42
Drafts.....	43
Settings.....	44

Voice Mail..... 44

Listen Voice Mail.....	44
Voice Mail Number	44

Download Messages 45

Inbox.....	45
Receive	45

Chat	45
Templates.....	45
Text.....	45
Multimedia	46
Business Card.....	46
Check Memory	46
 Games & Apps	 47
Shop Games	47
Games & Apps	47
Favorites	47
Information.....	48
Check Memory	48
Java Version	48
 MEdia Mall.....	 49
Shop Ringtones	49
Shop Games	49
Shop Graphics	49
Shop Multimedia	49
Shop Applications	49

MEdia Net Home	49
 MEdia Net.....	 50
MEdia Net Home	50
Favorites	51
Go to URL	51
Network Profile	51
Cache Settings	52
Security Certificates	52
Information.....	52
 Push to Talk (PTT).....	 53
PTT Contacts	57
Add Contact	59
Add Group	59
PTT Settings	60
Pending Invitations	60
 My MEdia	 61
Favorites.....	61

Games & Apps	61
Ringtones/Audio	61
Graphics	61
Multimedia	62
Tools.....	62
Alarm Clock.....	62
Calendar	63
Voice Memo	64
Calculator	64
Notepad	65
World Clock.....	66
Unit Converter.....	66
 Address Book	 67
Contacts.....	67
New Contact.....	68
Speed Dial List.....	68
Voice Dial List	68
Caller Groups.....	69

Copy All Contacts	70
Delete All Contacts	70
Set Save Location	70
Information.....	71
 Settings.....	 72
Sounds	72
Shop Ringtones	72
Ringtones.....	72
Volume	72
Ring Alert Type	72
Message Alert Tones	72
Key Tones	72
Slider Tone	73
Voice Memo	73
 Display	 73
Wallpaper	73
Backlight Timer	73
Languages	73
Menu Style	73

Date & Time	74
Set Date	73
Date Format.....	74
Set Time	74
Time Format	74
Auto Update	74
Call	74
Call Forwarding	74
Answer Mode	75
Send My Number	75
Call Waiting	75
Minute Minder	75
Voice Dial	75
Auto Redial.....	76
Send DTMF Tones.....	76
Security	76
Request PIN Code.....	76
Auto Key Lock.....	77
Fixed Dial Number.....	77
Change Codes.....	77

Connection	78
GPRS Attach	78
Network Profile	78
Reset Network Profile	78
Reset Default	78

Q&A	79
----------------------	-----------

Safety Guidelines.....	82
-------------------------------	-----------

Glossary	98
-----------------------	-----------

Unpacking

 
Check to make sure that you have all the parts shown below.




Handset



Standard Battery

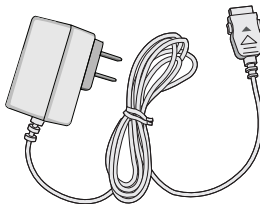

Travel Adapter

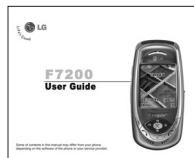 

User Guide

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to, or misuse of, the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F or greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby inadequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 82 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not dispose of your battery by fire or with hazardous or flammable materials.

- ▶ Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
- ▶ Store the battery in a place out of reach of children.
- ▶ Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not use a hand-held phone while driving.
- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- ▶ Never store your phone in temperatures less than -4°F or greater than 122°F.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- ▶ Do not use your phone in high explosive areas as the phone may generate sparks.
- ▶ Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- ▶ Do not disassemble the phone.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

For Your Safety

- ▶ Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not hold or let the antenna come in contact with your body during a call.
- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the

safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5cm) back of the phone.

Between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5cm) body and the back must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters,

and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain be used. Body-worn maintain 0.6 inches(1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

For more information about RF exposure, visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received,

including interference that may cause undesired operation.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).
- ▶ Do not incinerate.

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Your Phone

Phone Components



Your Phone's Features

1. Earpiece

2.10. Left soft key/Right soft key: Each of these keys perform the functions indicated by the text on the display immediately above them.

3. Side keys: These keys are used to control the volume of ringtone in standby mode and speaker volume during a call.

4. Send key: You can dial a phone number and answer incoming calls. Press this key in standby mode to quickly access the most recent incoming, outgoing and missed calls.

5. Alphanumeric keys: These keys are used to dial a number in standby mode and to enter number or characters in edit mode.

6. Microphone: Can be muted during a call for privacy.

7. Display screen: Displays phone status icons, menu items, Web information, pictures and more in full color.

 
8. Navigation key: Use for quick access to phone functions.

9. Confirmation key: Long press will launch the WAP browser. Allows you to select and confirm menu options.

11. Message key: Use to retrieve or send text messages.

12. End/Power key: Allows you to power the phone on or off, end calls, or return to Standby Mode.


13. Clear key: Allows you to delete the characters entered or return you to the previous screen.

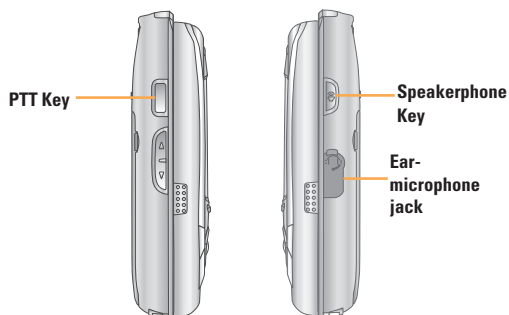

Backlight

 A backlight illuminates the display and the keypad. When you press any key or open the folder, the backlight turns on. It turns off if no key is pressed within a given period of time, depending on the **Backlight Timer** menu option. After one minute, the display turns off to conserve your battery power. To specify the length of time the backlight is active, set the **Backlight Timer** menu option (Menu 9.2.2). See page 73 for further details.



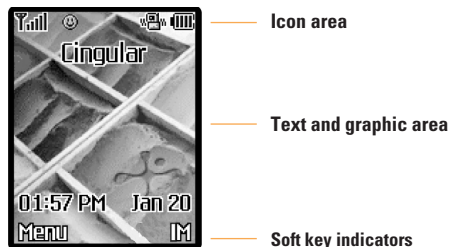







Display Information












Area	Description
First line	Displays various icons. See page 17
Middle lines	Display messages, instructions and Any information that you enter, such As number to be dialed.
Last line	Shows the functions currently Assigned to the two soft keys.

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text message.
	Indicates the receipt of a MMS message.
	Indicates the receipt of a voice mail.
	Indicates that the vibration ringer has been set.
	Indicates the Quiet menu in Profiles.

Icon	Description
	Indicates the Headset menu in Profiles.
	Indicates the speakerphone has been activated.
	Indicates that the status of PTT is Available .
	Indicates that the status of PTT is Unavailable.
	Indicates that the status of PTT is Do Not Disturb.
	Indicates the Car menu in Profiles.
	Indicates the General menu in Profiles.
	Indicates that you can use the download message service.
	Indicates the Schedule function.


Getting Started

Installing the SmartChip

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

 
⚠ Important!

The plug-in SmartChip and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SmartChip out of the reach of small children.

1. If necessary, switch off the phone by holding down the  key until the power-off image displays.
2. Remove the battery. To do so:
 - ① Pull and hold the battery lock above the battery toward the top of the phone.
 - ② Lift the battery away, as shown.



3. Slide the SmartChip into the SIM card socket so that it locks the card into place. Make sure that the notched corner is bottom left and the gold contacts of the card face into the phone.

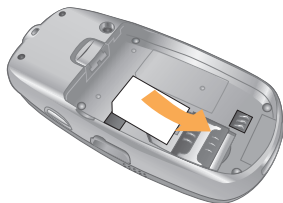

- ⚠ **Note** When you need to remove the SmartChip, slide it, as shown, and take it out of the socket.



4. Place the battery so that the tabs on the end align with the slots at the bottom of the phone.



5. Press the battery until it clicks into place. Make sure that the battery is properly installed before switching the phone on.

 


Charging the Battery

Use of unauthorized accessories could damage your phone and invalidate your warranty.

To use the travel charger provided with your phone:

1. With the battery in position on the phone, connect the lead from the travel adapter to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the adapter to a standard AC wall outlet. Only use the travel adapter that comes included with the package.

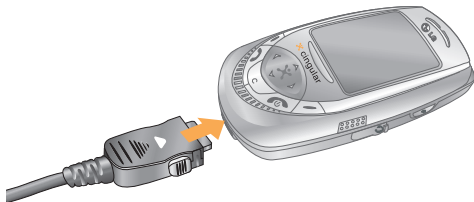


⚠ Warning

You must unplug the adapter before we remove the battery from the phone during charging; otherwise, the phone could be damaged.

Getting Started

 3. When charging is finished, disconnect the adapter from the power outlet and from the phone by pressing on the gray tabs on both sides of the connector while pulling the connector out.

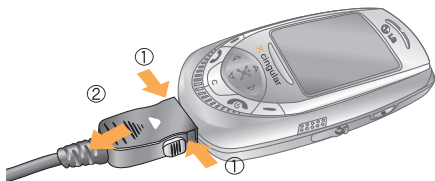


Notice

- ▶ If your phone is powered on while charging, you'll see the bars in the battery indicator icon cycle. When the battery is fully charged, the bars in the battery indicator icon will flash on and off
- ▶ If your phone is powered off, the display will show the charging status. **'Charging'** or **'Full'** will be displayed.

 
If the battery fails to charge completely:

- ▶ After turning the phone on and off, please attempt to recharge the battery.
- ▶ After detaching and reattaching the battery, please attempt to recharge the battery.


Turning Your Phone On and Off

1. Slide the keypad down.
2. Hold down the  key until the phone switches on.
3. If the phone asks for a PIN, enter the PIN and press the left soft key **[OK]**. For further details, see page 76.

The phone searches for your network and after finding it, the idle screen, illustrated below, appears on both displays. Now, you can make or receive a call.

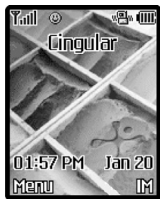

- Note** The display language is preset to English at the factory. To change the language, use the Languages menu option (Menu 9.2.3). For further details, see page 73.

4. When you wish to switch the phone off, hold down the  key until the power-off image displays.

Access Codes





You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes can be changed by using the **Change Codes** feature (Menu 9.5.4).

Security code (4 to 8 digits)



The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Restore Factory Settings menu. The security code default setting can be modified from the Security Settings menu.

General Functions



Making a Call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code. To edit a number on the display screen, press the right/left navigation keys to move the cursor to desired position or simply press the  key to erase one digit at a time.
- ▶ Press and hold the  key to erase the entire number.
3. Press the  key to call the number.
4. When finished, press the  key.


Making a Call by Send Key

1. Press the  key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation key.
3. Press the  key.

Making International Calls

1. Press and hold the  key for the international prefix.
The '+' character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

Ending a Call

When you have finished a call, press the  key.

Making a Call From the Contacts

You can store names and phone numbers dialed frequently in the SmartChip as well as the phone memory known as the Contacts.

You can dial a number by simply looking up a name in the contact list. For more details on the Contacts feature, please refer to page 67.



Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the ring volume using the side keys.


Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Address Book) is displayed.

1. Open the Slide and press the  key or the left soft key to answer an incoming call. If Any Key has been set as the answer mode (Menu 9.4.2), any key press will answer a call except for the  key or the right soft key.


Notice

- ▶ To reject an incoming call, press and hold the side keys on the left side of the phone.
- ▶ If Slide Open has been set as the answer mode (Menu 9.4.2), you do not need to press any key. You can answer the call simply by opening the slide.

2. End the call by closing the phone or pressing the  key.

Notice You can answer a call while using the Address Book or other menu features.


Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the  key. The loudspeaker is automatically deactivated when you end the call.


Warning

Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

Vibrate Mode (Quick)

Vibrate Mode can be activated by pressing and holding down  key.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator () on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, creating scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.


T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode


This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)


Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press  key until 123 mode is displayed.

Symbolic Mode

This mode allows you to enter special characters.

 
 
 **Notice** you can select a different T9 language from the menu option. The default setting on the phone is T9 disabled mode.

Changing the Text Input Mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. If you want to change modes, press and hold down the  key. The available modes are displayed.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.


1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.

- ▶ The word changes as letters are typed - ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.


Example: Press    to type **Good**

Press     [down navigation key] to type **Home**

 - ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.

3. Complete each word with a space by pressing the  key.

To delete letters, press . Press and hold down  to erase entire words.




Notice To exit the text input mode without saving your input, press . The phone returns to the previous menu level.

Using the ABC Mode

Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:

- ▶ Once for the first letter
- ▶ Twice for the second letter
- ▶ And so on

2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the display.

Notice Refer to the table below for more information on the characters available using the keys.

Key	Characters in the Order Display	
	Upper Case	Lower Case
1	. , - ¿ ? ¡ ! @ 1	. , - ¿ ? ¡ ! @ 1
2	A B C Á Ã Ç 2	a b c á ã ç 2
3	D E F É 3	d e f é 3
4	G H I Í 4	g h i í 4
5	J K L 5	j k l 5
6	M N O Ó Ñ 6	m n o ó ñ 6
7	P Q R S 7	p q r s 7
8	T U V Ú Ü 8	t u v ú ü 8
9	W X Y Z 9	w x y z 9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)


Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example).



Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the  key. Use the navigation keys to select the desired symbol and press the **[OK]** key.

Selecting Functions and Options / Address Book

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.



Press the left soft key to access the available Menu.

Press the right soft key to access the Instant Messaging.

You can store phone numbers and their corresponding names in the memory of your SmartChip.

In addition, you can store up to 255 numbers and names in the phone memory.

The SmartChip and phone memory, although physically separate, are utilized like a single entity known as the Contacts. (See page 67 for details)

In-Call Menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [**Options**].


During a Call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.


Making a Second Call

You can get a number you wish to dial from the Address Book to make a second call. Press the left soft key then select Contact List.


Swapping Between Two Calls

To switch between two calls, press the left soft key or  key, and then select **Swap**.


Answering an Incoming Call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call Waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call Waiting** (Menu 9.4.4).

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing . You can end the current call and answer the waiting call by pressing the left soft key and then selecting **Active call** menu of **End call**.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key, which is the [**Menu**] key and selecting the **Reject call** or by pressing the  key.



Muting the Microphone

You can mute the microphone during a call by pressing the [**Menu**] key then selecting **Mute** or right soft key [**Mute**]. The handset can be unmuted by pressing the **Unmute** menu or right soft key [**Unmute**]. When the handset is muted, the caller cannot hear you, but you can still hear them.

Multiparty or Conference Calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls may be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add calls to the multiparty call.


Making a Second Call

You can make a second call while currently on a call. Enter the second number and press the . When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

Setting up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

Activate the Conference Call on Hold

To activate a conference call on hold, press the left soft key, and then press the  key.


Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the  key.

Menu Tree

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

1. Recent Calls (see page 32)

1.1 Missed Calls

1.2 Dialed Calls

1.3 Received Calls

1.4 Delete Recent Calls

1.5 Call Duration

1.5.1 Last Call

1.5.2 Dialed Calls

1.5.3 Received Calls

1.5.4 All Calls

1.6 Data Information

1.6.1 Web Data

1.6.2 Data Call

1.6.3 Total Data

2. Messaging (see page 34)

2.1 IM

2.2 Text Messages

2.2.1 New Message

2.2.2 Inbox

2.2.3 Sent

2.2.4 Drafts

2.2.5 Settings

2.2.6 Delete All

2.3 Multimedia Messages

2.3.1 New Message

2.3.2 Inbox

2.3.3 Outbox

2.3.4 Sent

2.3.5 Drafts

2.3.6 Settings

2.4 Voice Mail

2.4.1 Listen Voice Mail

2.4.2 Voice Mail Number

2.5 Download Messages

2.5.1 Inbox

2.5.2 Receive

2.6 Chat

2.7 Templates

2.7.1 Text

2.7.2 Multimedia

2.7.3 Business Card

2.8 Check Memory

3. Games & Apps (see page 47)

3.1 Shop Games

3.2 Games & Apps

3.3 Favorites

3.4 Information

3.4.1 Check Memory

3.4.2 Java Version

4. MEdia Mall (see page 49)

4.1 Shop Ringtones

4.2 Shop Games

4.3 Shop Graphics

4.4 Shop Multimedia

4.5 Shop Applications

4.6 MEdia Net Home

5. MEdia Net (see page 50)

5.1 MEdia Net Home

5.2 Favorites

5.3 Go to URL

5.4 Network Profile

5.5 Cache Settings

5.5.1 Clear Cache

5.5.2 Allow Cache

5.6 Security Certificates

- 5.7 Information
- 6. Push to Talk (PTT) (see page 53)**
 - 6.1 PTT Contacts
 - 6.2 Add Contact
 - 6.3 Add Group
 - 6.4 PTT Settings
 - 6.5 Pending Invitations
- 7. My MEdia (see page 61)**
 - 7.1 Favorites
 - 7.2 Games & Apps
 - 7.3 Ringtones/Audio
 - 7.4 Graphics
 - 7.5 Multimedia
 - 7.6 Tools
 - 7.6.1 Alarm Clock
 - 7.6.2 Calendar
 - 7.6.3 Voice Memo
 - 7.6.4 Calculator
 - 7.6.5 Notepad
 - 7.6.6 World Clock
 - 7.6.7 Unit Converter
- 8. Address Book (see page 67)**
 - 8.1 Contacts
 - 8.2 New Contact
 - 8.3 Speed Dial List
 - 8.4 Voice Dial List
 - 8.5 Caller Groups
 - 8.6 Copy All Contacts
 - 8.7 Delete All Contacts
 - 8.8 Set Save Location
 - 8.9 Information
- 9. Settings (see page 72)**
 - 9.1 Sounds
 - 9.1.1 Shop Ringtones
 - 9.1.2 Ringtones
 - 9.1.3 Volume
 - 9.1.4 Ring Alert Type
 - 9.1.5 Message Alert Tones
 - 9.1.6 Key Tones
 - 9.1.7 Slider Tone
 - 9.1.8 Voice Memo
 - 9.2 Display
 - 9.2.1 Wallpaper
 - 9.2.2 Backlight Timer
 - 9.2.3 Languages
 - 9.2.4 Menu Style
 - 9.3 Date & Time
 - 9.3.1 Set Date
 - 9.3.2 Date Format
 - 9.3.3 Set Time
 - 9.3.4 Time Format
 - 9.3.5 Auto Update
 - 9.4 Call
 - 9.4.1 Call Forwarding
 - 9.4.2 Answer Mode
 - 9.4.3 Send My Number
 - 9.4.4 Call Waiting
 - 9.4.5 Minute Minder
 - 9.4.6 Voice Dial
 - 9.4.7 Auto Redial
 - 9.4.8 Send DTMF Tones
 - 9.5 Security
 - 9.5.1 Request PIN Code
 - 9.5.2 Auto Key Lock
 - 9.5.3 Fixed Dial Number
 - 9.5.4 Change Codes
 - 9.6 Connection
 - 9.6.1 GPRS Attach
 - 9.6.2 Network Profile
 - 9.6.3 Reset Network Profile
 - 9.7 Reset Default

Recent Calls

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

Missed Calls

Menu 1.1

This option lets you view the last 10 unanswered calls. You can also:

- View the number if available and call it, or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Dialed Calls

Menu 1.2

This option lets you view the last 20 outgoing calls (called or attempted). You can also:

- View the number if available and call it or save it in the Address Book

- Enter new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Received Calls

Menu 1.3

This option lets you view the last 20 incoming calls. You can also:

- View the number if available and call it, or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Delete Recent Calls

Menu 1.4

Allows you to delete **Missed**, **Dialed call** and **Received** lists. You can delete all call lists at one time.

Call Duration**Menu 1.5**

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times. The following timers are available:

Last Call**(Menu 1.5.1)**

Length of the last call.

Dialed Calls**(Menu 1.5.2)**

Length of the outgoing calls.

Received Calls**(Menu 1.5.3)**

Length of the incoming calls.

All Calls**(Menu 1.5.4)**

Total length of all calls made and incoming calls since the timer was last reset.

- ⓘ **Note** The actual time invoiced for calls by your service provider may vary, depending upon network features, rounding-off for billing, and so forth.

Data Information**Menu 1.6**

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

- ⓘ **Notice GPRS** General Packet Radio Service

Web Data**(Menu 1.6.1)**

You can check the data volume and the duration through WAP.

Data Call**(Menu 1.6.2)**

You can check the data volume and the duration through GPRS by using an external device such as a serial port.

Total Data**(Menu 1.6.3)**

You can check the total amount of data through WAP and an external device.

Messaging

IM

Instant Messaging feature can only be used with the support of the network operator or communities such as AIM, ICQ. For Instant Messaging users, a valid User ID and Password will be required in order to login and exchange messages as well as checking the online status.

There are three ways to use the Instant Messaging feature.

1. When the idle screen is displayed, press the right soft key [IM].
2. Through the Main Menu.
3. Through the IM hotkey (the right navigation key). Short pressing the hotkey will bring up the IM client and long pressing the hotkey will automatically begin the login process for the IM community selected previously. The menu items below might not appear since not all IM communities support the various options. Also the menu strings may appear differently based on the selected IM communities.

* The keywords such as User ID, Login and Contact will be used as general terms in IM menus according to the currently selected communities such as AIM and ICQ.

Menu 2.1

Offline Menu

Login

This allows users to login by filling in the User ID and Password.

- 🔔 **Notice** There is no need to type the User ID and Password all the time if only Login process is successful and they are saved. This feature is optional.

Saved Conversations

This is where a user can view saved conversations.

Settings

- ▶ **Screen Name:** You may select the Screen Name to be used while in the Group chat service.
- ▶ **Availability:** You may select your availability status (Available to Not Available, vice versa).
- ▶ **Mood:** You may select your current mood as in appy, Sad, Angry, Jealous, Invincible, In Love, Sleepy, etc.
- ▶ **Status Text:** You may set your current status in free text format.
- ▶ **Save Password:** You may save your password in Login input.

- ▶ **Power-on Login:** You may start login automatically after 20 seconds or so if you save a valid password and then reset your mobile.

IM Information

Instant Messaging Client Information (Client Name, Version Number) is displayed.

Online Menu / 1 to 1 conversation

After successful Login, a contact list with contacts will appear on screen. Depending on the cursor location in the contact list, following menu options will be available.

When cursor is located on a Conversations List

- ⚡ **Note** Conversations List contains not only contact which conversation is already opened but also unknown contact.
- ▶ **View/Hide Conversations:** This provides the option to view or hide contacts from the selected list.
- ⚡ **Note** When you select left/right navigation Key or Confirm Key on the Contact List, it offers the ability to view or hide conversations.
- ▶ **Saved Conversations:** You may view or delete the stored conversation session.

Settings

- **Screen Name:** You may select the Screen Name to be used while in the Group chat service.
- **Availability:** You may select your availability status (Available to Not Available).
- **Mood:** You may select your current mood as in Happy, Sad, Angry, Jealous, Invincible, In Love, Sleepy, etc.
- **Status Text:** You may set your current status in free text format.
- **Watcher List:** You may view contacts who can access your presence information.
- **View Options:** You may offer the ability to show all contacts or only online contacts.
- ▶ **Logout:** This begins the Logout process.

When cursor is located on a Conversation

- ▶ **View:** View allows you to converse with the selected Unknown Contact and contact which conversation is already started. It shows conversation of the contact which conversation is already started.

Messaging

- ▶ **End Conversation:** This close the selected conversation. If an unknown contact was selected, that contact is deleted also.
- ▶ **Block/Unblock Contact:** This allows you to block/unblock the selected Conversations Contact.
- ▶ **Add To List:** This allows you to add the Unknown Contact to the Contact List. After the selecting the contact list, you may add the Unknown Contact and once completed it is automatically deleted from the Conversations List.
- ▶ **View information:** This allows you to view information. It provides User ID, Mood, Status Text.
- ▶ **Refresh Contact:** This refreshes the presence information of the selected contact.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.
- ▶ **Join New Group:** This allows you to join a new Group Chat. In order to join, Group ID is required.
- ▶ **Search Group:** You can join after searching the Group Name or Group Topic.
- ▶ **Create Group:** A new group chat can be created after typing in the Group ID and the Welcome Note.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

Menu options available in a Group Chat screen

- ▶ **Send:** This sends the typed message to all active members within the Group Chat.
- ▶ **Invite Others:** This allows you to invite another contact to the group chat. You can use the contact list within the menu or by inviting based on the search results. Maximum invitee number is 6. (This is only if it's been created by yourself.)
- ▶ **Back To List:** This brings the screen back to the contact list.
- ▶ **Leave Group:** When leaving the active group chat session, the buffer is cleared.

Online Menu / Group Chat

When cursor is located on a Group Conversations List

- ▶ **View/Hide Groups:** You can select to view or hide the Group Chat List.

- ▶ **Delete Group:** This deletes the entire active group chat, only if it's been created by yourself. (This is only if it's been created by yourself.)
- ▶ **Show Members:** This displays current members who have joined the active group chat session.
- ▶ **Save Conversation:** This stores currently active conversation.
- ▶ **T9 Languages:** This selects the T9 predictive mode Language.

When cursor is located on a Contact List

- ▶ **View/Hide Contacts:** This provides the option to view or hide contacts from the selected list.
- ▶ **Rename List:** This renames the selected contact list.
- ▶ **Add List:** This adds a new contact list.
- ▶ **Add Contact:** This adds a new contact to the selected contact list, in the meantime this searches contact on the basis of E-mail Address, First Name, Last Name.
- ⓘ **Note** The device only can support a maximum of 30 contacts and therefore not all their contacts will be visible on the phone if they have more than 30.

- ▶ **Send To Others:** This offers the ability to send a message to unknown contact. When selected, User ID must be typed in prior to starting an IM session or conversation.
- ▶ **Delete List:** This deletes the selected contact list.
- ▶ **Blocked List:** This list is the blocked contacts.
- ▶ **Refresh List:** This refreshes the presence information of the contacts within the contact list.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

When cursor is located on a Contact

- ▶ **Chat/View:** Chat will display a screen where conversation with selected Contact can take place / View shows conversation of the contact which conversation is already started.
- ▶ **Set/Clear Alert:** When the user sets this contact as "Set Alert", if presence information of the selected contact is changed to online from offline afterwards, it alerts as the icon and sound.
- ▶ **Block/Unblock Contact:** This allows or blocks conversation with the selected Contact.

Messaging

- ▶ **Add Contact:** This adds a new contact to the selected contact list, in the meantime this searches contact on the basis of E-mail Address, First Name, Last Name.
- ▶ **Delete Contact:** This deletes the selected Contact.
- ▶ **View Information:** This allows you to view information. It provides User ID, Mood, Status Text.
- ▶ **Refresh Contact:** This refreshes the presence information of the selected contact.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

Menu options available in the Conversation screen

- ▶ **Send:** Typed message can be sent.
- ▶ **Back To List:** This brings the screen back to the contact list.
- ▶ **End Conversation:** This ends the active conversation and clears the conversation buffer.
- ▶ **Block/Unblock Contact:** This allows or blocks conversation with the selected Contact.
- ▶ **Save Conversation:** Stores currently active conversation.

 


- ▶ **View Information:** This allows you to view information. It provides User ID, Mood, Status Text.
- ▶ **T9 Languages:** This selects the T9 predictive mode Language.

Note

- Within the conversation screen, you can insert Symbol, Emoticon and Text Template by using the right soft key.
- In the conversation window, you can use a side key or up/down navigation key for scrolling conversation.
- Maximum number of characters supported by a message is 500 characters for receiving and 160 characters for sending.
- The presence information might not update in real time so the "Refresh List"/"Refresh Contact" option can be used for most up to date status.

Text Messages

Menu 2.2

Your phone receives voice mail notification messages and Short Message Service (SMS) messages. Voice mail and SMS are network services. Please contact your service provider for more information. When the  icon appears, you have received a new voice mail. When the  icon appears, you have received a new text message. If the message memory is full, an error message is displayed, the  icon

flashes and you cannot receive any new messages. Use the **Delete** option in the **Inbox** (Menu 2.2.2) to delete obsolete messages. Once there is space in the memory any undelivered SMS messages will be received (provided sufficient space is available).

New Message (Menu 2.2.1)

You can write and edit text messages of up to 918 characters.

1. Type in a message using key presses. For details on how to enter text, refer to page 24 (**Entering Text**).
2. After completing the message, select the required option by pressing the right soft key [**Options**].

The following options are available.

- ▶ **Send to Number:** Enter the phone number or select the number from the address book.
- ▶ **Send to Email:** Enter the email or select the email from the address book.
- ▶ **Save to Drafts:** Save the message so that it can be sent later.
- ▶ **Set T9:** Set on and off for the T9 Input mode.

- ▶ **Set Input Languages:** Choose between English, Spanish or French T9 language. For details on how to enter text, refer to page 25 (**Using the T9 Mode**).

- ▶ **Clear Text:** Deletes the written message.

- ▶ **Cancel:** Exit the text editor.

The following options are available.

(Press the right soft key **Insert**)

- ▶ **Symbol:** Attache special characters.
- ▶ **Picture:** Send and receive text messages that contain pictures, known as Enhanced Messaging Service. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
- ▶ **Animation:** Attaching an animation in a message can be done through EMS(Enhanced Messaging Service).
- ▶ **Sound:** Attach sounds that are available for short message.
- ▶ **Text Template:** Use the text templates already set in the phone.
- ▶ **Contact:** Attach a phone number.
- ▶ **Business Card:** Attach your name card.

Inbox

(Menu 2.2.2)

Received text messages, page messages, and email lists may be searched and the contents may be viewed. Received messages are displayed from newest to oldest.

The following options are available.

- ▶ **Reply:** Replies to the received message.
- ▶ **Delete:** Deletes the selected message from the Inbox.
- ▶ **Forward:** Forwards a received message to other recipients. After recipients are entered, the message can be forwarded.
- ▶ **Call Back:** Call back the sender.
- ▶ **Extract:** Extract picture, sound, text webpage and email address from the message.

Sent

(Menu 2.2.3)

View lists and contents of sent messages in this menu and also verify if transmission was successful.

The following options are available.

- ▶ **Forward:** Forwards the current message to other recipients.
- ▶ **Delete:** Deletes the selected message from the Outbox.

Drafts

(Menu 2.2.4)

This menu option shows the preset message list. Scroll through the list using the up/down navigation keys.

The following options are available.

- ▶ **Edit:** You can edit a selected message.
- ▶ **Delete:** Deletes the selected preset message.

Settings

(Menu 2.2.5)

This menu allows you to set up default SMS information.

- ▶ **Message Center Number:** Allows you to store or change the number of your email gateway required when sending text messages. You must obtain this number from your service provider.
- ▶ **Email Gateway:** Allows you to store or change the number of your email gateway required when sending text messages.
- ▶ **Subject:** If you set it to on, allows you to enter the subject.
- ▶ **Bearer Setting:** You can select GPRS or GSM. Contact your network operator or service provider for information related to setting a selected bearer, pricing and connection speed.
GSM Preferred/GPRS Preferred

Delete All

(Menu 2.2.6)

Allows you to delete all messages.

Multimedia Messages

Menu 2.3

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible multimedia message or e-mail features can receive and multimedia messages. Attach to add Symbol, Picture, Sound, Recorded Voice, Text Template.

New Message

(Menu 2.3.1)

The following options are available.

- **Send:** Support mutiple number and email addresses.
- **Preview:** To see the multimedia message you wrote.
- **Save:** Allows you to save multimedia messages in draft or as templates.
- **Delete:** Deletes the MMS message.
- **Slide Duration:** Allows you to set timer for slide and text.

- **Slide Format:** Allows you to make the message contents aligned right, left, top and bottom.
- **Add Slide:** Allows you to add a slide before or after current slide.
- **Remove Slide:** Deletes the selected slide.
- **Remove Image:** Deletes the current image.
- **Remove Sound:** Deletes the current sound.
- **Add Image:** Allows you to add a image before or after current image.
- **Add Sound:** Allows you to add a sound before or after current sound.

Inbox

(Menu 2.3.2)

You will be alerted when you have received messages. They will be stored in the Inbox. In the Inbox, you can identify each message by icons. For detail, see the icon directive below.

If the phone has 'no space for message', you can make space in each repository by deleting messages, media and applications.

- **Timer Stop:** Timer stop menu is displayed when you receive the message including various pictures. Usually, the pictures slide automatically. However, if you select this menu, you can see the next picture by pressing the left soft key manually.
- **Previous Slide:** View the previous page.
- **Restart:** Allows you to replay multimedia messages.
- **Save Message:** Allows you to save a multimedia message in draft or as template.
- **Save Items:** Allows you to extract picture and sound.
- **Details:** Allows you, to view information about received messages; Sender's address, Subject (only for multimedia message), Message date & time, Message type, Message size.
- **Reply:** Allows you to reply to the sender.
- **Reply All:** Allows you to reply to the senders.
- **Delete Message:** Allows you to delete the current message.
- **Forward:** Allows you to forward the selected message to other recipients.

Outbox

(Menu 2.3.3)

When you press the Send, the message moves to the Outbox and from there the message is sent. If the message fails to be sent from the Outbox, another attempt will be made. After two attempts the message will no longer be sent automatically. In order to send the message that has failed twice, you must either press the Send from the Options menu or simply turn off and on the phone which will trigger the automatic sending of the failed message.

- **Send:** Send the selected message.
- **Cancel:** Cancel the selected message from being sent.
- **Delete:** Delete the selected message.
- **Move to Drafts:** Cancel the sending of the message and move to Drafts:

Sent

(Menu 2.3.4)

Allows you to see sent messages here. For sent message, you can see the delivery status.

- **Timer Stop:** Timer stop menu is displayed when you receive the message including various pictures. Usually, the pictures slide automatically. However, if

you select this menu, you can see the next picture by pressing the left soft key manually.

- **Previous Slide:** View the previous page.
- **Restart:** Allows you to replay current messages.
- **Save Message:** Allows you to save multimedia message in draft or as template.
- **Save Items:** Save the item such as image or sound as an attachment in a message.
- **Details:** Allows you to view information about outbox messages; Subject (only for multimedia message), Message date & time, Message type, Message size.
- **Reply:** Allows you to reply to the current message.
- **Reply All:** Allows you to reply to the all messages.
- **Delete Message:** Allows you to delete the current message.
- **Forward:** Allows you to forward the current message to other recipients.

Drafts

(Menu 2.3.5)

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- **Send:** Support mutiple number and email addresses.
- **Preview:** To see the multimedia message you wrote.
- **Save:** Allows you to save multimedia messages in draft or as templates.
- **Delete:** Allows you to delete the image or sound.
- **Slide Duration:** Allows you to set timer for slide and text.
- **Slide Format:** Allows you to make the message contents aligned right, left, top and bottom.
- **Add Slide:** Allows you to add a slide before or after current slide.
- **Remove Slide:** Allows you to move to previous or next slide.
- **Remove Image:** Deletes the current image.
- **Remove Sound:** Deletes the current sound.
- **Add Image:** Allows you to add a image before or after current image.
- **Add Sound:** Allows you to add a sound before or after current sound.

Settings

(Menu 2.3.6)

Via this menu, you can set up default multimedia message information.

The following options are available:

- ▶ **Message Subject:** Enter the message title.
- ▶ **Slide Duration:** Display the duration of each page when writing the message.
- ▶ **Alignment:** Set the position of a message and text message.
 - **Image Bottom**
 - **Image Left**
 - **Image Top**
 - **Image Right**
- ▶ **Validity Period:** Set the duration for keeping messages on the network server.
- ▶ **Auto Download**
 - **On:** If you select this, messages are downloaded automatically on receipt.
 - **Off:** Defers downloading messages.
- ▶ **Message Center URL:** Enter the address of an MMS server to use the MMS service.
- ▶ **Network Profile:** For further details, see page 51.

Voice Mail

Menu 2.4

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).


Before using this feature, you must enter the voice server number obtained from your service provider.

When new voicemail is received, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the handset accordingly.

Listen Voice Mail

(Menu 2.4.1)

 Before using this feature, you must enter the voice server number obtained from your service provider (see menu option 2.4.2). You can then select this option and press the left soft key **[OK]** to listen to your messages.

You can quickly connect to the first voice server by pressing and holding the  key in Idle Mode.

Voice Mail Number

(Menu 2.4.2)

Allows you to change the voice mail server number, if necessary.

📌 **Note** Voice Mail is a network feature. Please contact your service provider for further details.

Download Messages

Menu 2.5

Inbox

(Menu 2.5.1)

You can order push messages from WAP service providers.

Push messages are notifications of, for example, news headlines and they may contain a text message or address of a WAP service. For availability and subscription, contact your WAP service provider. Service providers can update an existing push message every time a new push message is received. Messages can be updated even if you have moved them to another folder. Push messages expire and they are deleted automatically.

- ▶ **Information:** Shows the information of received push messages.
- ▶ **Load:** Allows you to connect to a specific site using the information in the received push message.
- ▶ **Delete:** Delete the selected push message.

Receive

(Menu 2.5.2)

You can set the option whether you will receive the message or not.

Chat

Menu 2.6

This menu option connects to Cingular's chat site.

Templates

Menu 2.7

There are 6 predefined messages in the list. You can view and edit the template messages or create new messages.

Text

(Menu 2.7.1)

- **Please call me back**
- **I'm late. I will be there at**
- **Where are you now?**
- **I'm on the way.**
- **Urgent! Please contact.**
- **I love you**

The following options are available.

- ▶ **Edit:** Allows you to write a new message or edit the selected template message.
- ▶ **Send Via**
 - **Text Messages:** Sends the selected template message by SMS.
 - **Multimedia Messages:** Sends the selected template message by MMS.
- ▶ **Delete:** Allows you to delete the selected template message.

Multimedia

(Menu 2.7.2)

For further details, see page 41.

- **Send:** Support multiple number and email addresses.
- **Preview:** To see the multimedia message you wrote.
- **Save:** Allows you to save multimedia messages in draft or as templates.
- **Delete:** Deletes the MMS message.
- **Slide Duration:** Allows you to set timer for slide and text.
- **Slide Format:** Allows you to make the message contents aligned right, left, top and bottom.
- **Add Slide:** Allows you to add a slide before or after current slide.
- **Remove Slide:** Deletes the selected slide.
- **Add Image:** Allows you to add a image before or after current image.
- **Add Sound:** Allows you to add a sound before or after current sound.
- **Delete Image:** Deletes the current image.
- **Delete Sound:** Deletes the current sound.

Business Card

(Menu 2.7.3)

This option allows you to make your own name card. Key in the Name, Mobile number, Office number, Fax number and E-mail address.

- ▶ **Edit:** Allows you to write a new message or edit the selected name card.
- ▶ **Send Via**
 - **Text Messages:** Sends the selected template message by SMS.
 - **Multimedia Messages:** Sends the selected template message by MMS.
- ▶ **Delete:** Allows you to delete the selected name card.

Check Memory

Menu 2.8

You can check the current memory status of each memory for Text and Multimedia.

Games & Apps

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Games & Apps menu where you can select, execute or delete. The Java program files saved in the phone are in .JAD and .JAR formats.

- ❗ **Note** The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.
- ❗ **Warning** Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Shop Games

Menu 3.1

This menu option connects to Cingular's game download site.

Games & Apps

Menu 3.2

Games & Apps menu displays the list of Java programs downloaded using the WAP. All previous downloaded programs can be selected, deleted or viewed in detail within the Games & Apps menu.

Favorites

Menu 3.3

When a new Java program is downloaded using the WAP, the address from which a download takes place is known as a bookmark. The Java menu includes a bookmark list for downloading Java programs and this bookmark list can be viewed from the Bookmarks menu.

- ▶ **Connect:** Selected address in the bookmark is used for data connection. After successful connection, desired Java program can be downloaded from the list.
- ▶ **View:** Detailed information on a bookmark can be viewed such as name of bookmark and address of bookmark.

- ▶ **Delete:** Selected bookmark is deleted. Deleted bookmark cannot be restored so caution is required when deleting bookmarks.
- ▶ **Edit:** Selected bookmark can be edited. Editing a bookmark is done in the order of URL → Title → Profile(Network Profile) → User ID → Password. When creating a new bookmark, same order is followed. The service provider can require user ID and password information, but if none is provided, no input is necessary.
- ▶ **New Favorite:** New bookmark is added. If there is no Bookmark, you get a display indicating that there is no Bookmark. Bookmarks can be added by pressing the left soft key [New].
- ▶ **Send URL:** Selected bookmark URL can be sent via SMS.
- ▶ **Delete All:** This deletes all of the selected bookmark as well as the bookmarks directory within the Games & Apps menu.
- ⚠ **Note** After selecting the Connect function to access the Java MIDlet Provider's server, you may choose one of many Java programs to download and install into your phone. Once connected to the server, the Go button can be pressed to view the JAD information

on a desired program. The Get button will begin the download and install process. The download and install process will take place simultaneously and once download is complete you can immediately run the Java program. The installed Java program can be selected to run at a later time from the **Games & Apps** menu.

Information

Menu 3.4

The downloaded programs using the WAP are stored in the phone memory. There is a maximum memory capacity in a phone and once you exceed this memory, you will not be able to store any more programs. The View Information menu allows you to check the available memory capacity in a phone.

Check Memory

(Menu 3.4.1)

Displays maximum memory capacity and total available memory information.

Java Version

(Menu 3.4.2)

Displays current Java version.

MEdia Mall

Shop Ringtones

Menu 4.1

This menu option connects to Cingular's ringtone download site.

Shop Games

Menu 4.2

This menu option connects to Cingular's game download site.

Shop Graphics

Menu 4.3

This menu option connects to Cingular's graphic download site

Shop Multimedia

Menu 4.4

This allows you to connect to
<http://mmsstore.cingular.com> URL and download multimedia contents

Shop Applications

Menu 4.5

This menu option connects to Cingular's application download site

MEdia Net Home


Menu 4.6

Connect to a homepage. The homepage may be the site which is defined in the activated profile. It will be defined by the Service Provider if you have not defined it in the activated profile.

You can access various WAP(Wireless Application Protocol) services such as banking, news, weather reports, and flight information. These services are specially designed for mobile phones and they are maintained by the WAP service providers.


Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your service provider to open an Internet account. To use the Web Browser, you must indicate your phone number via the **My numbers** menu option (See page 71 for further details.)

To launch the browser in standby mode, press and hold down the  key.

Once connected, the homepage is displayed. The content depends on the service provider.

You can open any WWW page by entering its URL address.

To exit the browser at any time, press the  key. The idle screen is displayed.

Navigating with the WAP Browser

You can surf the Internet using either the phone keys or the WAP Browser menu.


Using the Phone Keys

When surfing the Internet, the phone keys function differently from the phone mode.

Key	Description
up/down navigation key	Scroll each line of the content area

Using the WAP Browser Menu

There are various menu options available when surfing the Wireless Web.

 **Note** The WAP Browser menus may vary, depending on your version of the browser.

MEdia Net Home

Menu 5.1

Connect to a homepage. The homepage may be the site which is defined in the activated profile. It will be defined by the Service Provider if you have not defined it in the activated profile.

Favorites

Menu 5.2

Your phone may have some pre-installed favorites for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any site.

Options in the Favorites view

Options available in the Bookmarks are:

- **Connect:** Connect to the URL address to download the ringtone.
- **View:** View the URL address of the Favorites.
- **Delete:** Delete the URL address.
- **Edit:** Modify the Favorites.
- **Move to Folder:** Move the Favorites to other folder.
- **New Favorite:** Create new favorites in current folder.
- **New Folder:** Create new sub-folder.
- **Send URL:** Allows the stored URL under Favorites to be sent via SMS to another person.
- **Delete All:** Allows you to erase all favorites.

Go to URL

Menu 5.3

You can directly connect to the site you want. You need to enter a specific URL.

Network Profile

Menu 5.4

A Profile is the network information used to connect to the internet. Cingular supports three kinds of profiles: MEdia Net, Home and Roam.

MEdia Net is used to connect to the internet using GPRS, Home uses CSD (Circuit Switched Data) with Cingular gateways, and Roam uses CSD without the Cingular network.

Because Cingular also selects a bearer automatically according to the current network status, the user doesn't need to select any of them.

Each profile has submenus as follows:

MEdia Net

1. Activate
2. Edit
3. Rename
4. New Network Profile
5. Delete
6. Delete All

Home

1. Activate
2. Edit
3. Rename
4. New Network Profile
5. Delete
6. Delete All

Roam

1. Activate
2. Edit
3. Rename
4. New Network Profile
5. Delete
6. Delete All

- ▶ **Activate:** Set a current profile as a default.
- ▶ **Edit:** Edit the various items of the current profile.
- ▶ **Rename:** Revise the name of profile.
- ▶ **New Network Profile:** Create new profile.
- ▶ **Delete:** Delete the profile.
- ▶ **Delete All:** Allows all Profiles within the Access Point to be deleted so please take precaution prior to using this option.

ⓘ **Note** The changes using these options may affect the other application function.

Cache Settings

Menu 5.5

The information or services you have accessed are stored in the cache memory of the phone.

Clear Cache

(Menu 5.5.1)

Remove all contexts saved in cache.

Allow Cache

(Menu 5.5.2)

Set a value whether a connection attempt is made through cache or not.

Security Certificates

Menu 5.6

A list of the available certificates is shown.

Information

Menu 5.7

The WAP Browser version is displayed.

Push to Talk (PTT)

Welcome to PTT

Push to Talk (PTT) from Cingular let's you see whether your family, friends, and co-workers are available to talk before you call. You can reach them individually or all at once via a group call, all in an instant. Read on to hear about all of the features Cingular Push to Talk has to offer.

Initialize your PTT Service

Begin initializing your PTT service by pressing the PTT Key (gray button on left side of phone) or by entering Push to Talk(6) from the Main Menu.

You will then register your name and, once initialization completes, begin adding your family, friends, and co-workers who are also Cingular PTT subscribers.

PTT Tips

PTT is a great way of communicating instantly with the people who are important to you. Here are a few tips to help you.

1. Make sure you are holding the PTT Key down while you talk.
2. Make sure you don't start talking until AFTER you hear the tone.
3. Note the location of the speakerphone and microphone to make sure you aren't covering either with your grip.
4. PTT calls can be easily started with the slide closed. However, closing the slide during a PTT call terminates the call.
5. Turn the volume up high to more clearly hear your PTT calls.

Icon Descriptions

► My Availability

Your availability icon appears next to the signal indicator on your idle screen. This icon indicates the availability others will see for you when you are listed in their PTT Contacts.



Available

This will be your availability state once you initialize service and it will not change unless you change it as noted below.



Unavailable

This becomes your availability state if you power off your phone, turn PTT Off, or if the system detects you have moved out of coverage.



Do Not Disturb

This becomes your availability state if you change My Availability (Menu 6.4.1) to Do Not Disturb. In this state you may place PTT calls but will not receive a PTT call.



PTT Message

This icon appears in place of your availability status notifying you that a PTT message is waiting. To access these messages go to Push to Talk (6) on the Main Menu. The message will either immediately display or may be found under Pending Invitations (5).

► PTT Contact Availability

This section covers the icons which will appear next to individuals and groups in your PTT Contacts list indicating their availability.

• INDIVIDUALS:



Available

This contact is available to talk.



Unavailable

This contact has turned PTT Off, powered down their phone, or moved out of coverage.



Do Not Disturb

This contact is not receiving PTT calls.



Silent/Vibrate

This contact is available to receive PTT calls. However they will be given the option to accept or reject your PTT call.



Invitation in Progress

You are waiting for this contact to accept your invitation.

• GROUPS:



Available

At least one member of the group is available to talk.



Unavailable

Every member has powered down their phone, turned PTT Off, or moved out of coverage.



Do Not Disturb

None of the members of the group can be contacted.



Silent/Vibrate

All members of the group are available to receive a PTT call but each will be given the option to accept or reject your call.



Invitation in Progress

You have sent an invitation to join a group and none of the members have yet accepted. Once one member accepts this status will change and calls will complete to all members who have accepted and are available.

PTT Calls

A PTT call can only be made to individuals or groups you have established in your PTT Contacts. See PTT Contacts for instructions to set up individuals/groups.

Making a PTT Call

1. Push and quickly release the PTT Key to access your contact list. To access frequently called numbers, Push and hold the PTT Key to access your PTT Call History.
2. Select the individual or group you want to call. Make sure an available icon is displayed next to the name.

Note Calls can not be placed to Quick Groups in your PTT Call History.

3. Press and hold the PTT Key to activate the call. A tone will immediately play indicating you have the floor and may begin speaking.
4. Release the PTT Key when you are done speaking.

Receiving a PTT Call

1. For the best experience your ringer should be set to the highest possible volume.
2. If your status is Available you will hear a PTT Call tone and then the caller's voice.

Push to Talk (PTT)

3. If your status is Vibrate All your phone will vibrate and then you must accept or reject the call. If set to Silent their will be no call notification tone.

- a. Accepting the call then plays the callers voice over the earpiece.
- b. Rejecting the call terminates the call. PTT calls are not forwarded to voicemail.

Convert to Cellular

During a PTT call the call originator may convert the call over to a cellular call.

1. Call originator selects Options and then selects Convert to Cellular. The originator no longer has to press the PTT key to be heard.
2. Other participants on the call will remain in a PTT call until they press the PTT Key.

Call Waiting

- While on a PTT call you will be notified of incoming PTT calls. Accepting the incoming PTT call suspends the first call. Rejecting the incoming PTT call terminates it.
- While on a PTT call you will be notified of incoming cellular calls. Accepting the incoming cellular call suspends the PTT call. Rejecting the incoming cellular call forwards it to voicemail.

- While on a cellular call you will be notified of incoming PTT calls. Accepting the incoming PTT call suspends the cellular call. Rejecting the incoming PTT call terminates it.

How a PTT call works

When you make a PTT call, you can instantly speak to other Cingular PTT subscribers. During a PTT call only one person can speak at a time. You can tell whether it is your turn to speak by listening for the following tones:

PTT Floor Held tone

This tone plays when you press and hold the PTT Key. It indicates you have the floor and your speech will be heard by the other call participants.

PTT Floor Release tone

When you let go of the PTT Key you will hear this tone as will the other participants on the call. All of your speech prior to this tone has been heard by other participants. Others on the call are now aware that the floor is open and they have an opportunity to speak by pressing their PTT Key.

Error tone

If you attempt to speak by pressing your PTT Key and someone else still has the floor you will hear this tone.

The PTT Key

The gray key on the left hand side of the phone is your PTT Key.

- Pressing and releasing this key while idle displays your PTT contacts.
- Pressing and holding this key while idle displays your PTT history
- Pressing and holding this key while in a PTT call allows you to speak to the other call participants.

To make a call press and release your PTT key to display your contacts. Select the person or group you wish to connect with and Press and Hold the PTT Key.

- ⚡ **Note** Customers should not initiate or participate in a PTT call whilst driving. The current version of our PTT product requires you to press the button while talking. For this reason we advise against using PTT while driving, including with a car kit or personal handsfree kit.

PTT Contacts

Menu 6.1

When accessing your PTT Contacts, Options displays on your Right Soft Key. Options may change depending on whether an individual or a group was highlighted when you selected Options.

- ▶ **Call Me Alert:** This option allows you to send a message to an individual in your PTT Contacts whose status is Available, Silent/Vibrate, or Do Not Disturb. First select the individual, select Options, and then select Call Me Alert. A message will display on their idle screen "Please Call" and your name. They can simply press their PTT Key to call you back.
- ▶ **Quick Group Call:** This option allows you to make a group call without pre-establishing it in your PTT Contacts. After selecting this menu item from PTT Contacts, Options, a list of available individuals will present. Select those you wish to include in your call (up to 6). Then press the PTT Key to begin your Quick Group call.
- ▶ **Voice Message:** This option allows you to leave a voicemail for a person or group of people instantly.

Push to Talk (PTT)

- For a message to one person/group, simply highlight the person/group on your PTT Contacts, select Options, and select Voice Message. Pushing the PTT Key begins the recording. Releasing the PTT Key ends the recording and deposits your message.
- You may also message several individuals from your PTT Contacts. Select Voice Message and press OK once. The list of all individuals will present. Select the individuals to receive the message. Pushing the PTT Key begins the recording. Releasing the PTT Key ends the recording and deposits your message.

The message is now deposited into the same voicemail used for cellular calls.

- ▶ **Search:** This option allows you to search an individual or group by name or number from the list.
- ▶ **Rename:** You can edit the name of the individual or group.
- ▶ **Delete:** You can delete an individual or a group. Deleting a group which you originated deletes the group from PTT Contacts for all participants.

- ▶ **Leave Group:** If you have joined a group originated by another this option allows you to leave the group but the group remains intact for all other participants.
- ▶ **Copy to Address Book:** This option only displays when an individual was highlighted and allows you to copy the name and number to your Address Book.
- ▶ **New Message:** You can send a new text message to selected member.
- ▶ **View Members:** This option displays when a group was highlighted and will present all members of a group along with their Availability.
- ▶ **Dynamic Call:** This option displays when a group was highlighted. It is similar to Quick Group Call however the participants you select from are only those participants in the group.
- ▶ **Add member:** This option displays only when you have highlighted a group which you have originated. After adding any additional members, a notification is sent to the other group participants of the new group members.

► **Remove Member:** This option displays only when you have highlighted a group which you have originated. After removing a member a notification is sent to the individual.

Add Contact

Menu 6.2

1. Select Add Contact in the PTT menu.
2. Enter the contact's name and phone number and then select [Save]. An invitation to join your PTT Contacts will be sent.
3. The availability icon will be Invitation in Progress until the individual accepts.
4. Once accepted they are part of your PTT Contacts and you are part of theirs.

Add Group

Menu 6.3

Setting up a PTT group is a great way to quickly call a group of people you routinely need to reach. A group can be made up of individuals in your PTT Contacts or other Cingular PTT subscribers you don't necessarily want to add to your PTT Contacts.

1. After selecting Add Group you will be asked to name your group.
2. Next step is to choose members. Choosing Select In Contacts lets you chose from your PTT Contacts. Choosing New Contact lets you add someone not in your PTT Contacts.
 - a. If you want to add both types of contacts then you will need to select one option and save the group.
 - b. Then using Add Member in the PTT Contacts Options menu you can add the remaining members.
3. Once you have saved your group invitations will be sent to each contact for their acceptance. The Invitation in Progress icon will display next to the group until one member accepts. Availability will then update each time a person accepts.
4. When a participant accepts your invitation the group is now in their PTT Contacts and they may also place calls to the group.
5. Maximum members in a group is 20, 19 participants and yourself. You may have up to 30 groups in your PTT Contacts.

PTT Settings

Menu 6.4

- ▶ **My Availability:** This option allows you to change your Availability status between Do Not Disturb and Available.
- ▶ **Contact Alerts:** This feature allows you to be alerted when the availability status of a contact changes from Unavailable or Do Not Disturb to Available or Silent/Vibrate.
 1. Once Contact Alerts is selected a list of individuals from PTT Contacts will display. Select those individuals for whom you want to receive alerts for availability changes.
 2. Once selected you will receive alerts for availability changes until you de-select them.
 3. An alert consists of a tone as well as a PTT message when you access the PTT Menu.
- ▶ **Set Your Name:** When you initialized service you set a name for yourself. This name is presented in Contact Invitations and Call Me Alerts. Changing your name will not impact invitations already sent but will be reflected in future invitations.

- ▶ **Auto Accept Invites:** If you do not want to pre-screen all additions to your PTT Contacts you can use this menu item to automatically accept your invitations.
 - **Disable All** allows you to pre-screen all invitations.
 - **Contact Only** automatically accepts individual invitations.
 - **Group Only** automatically accepts group invitations.
 - **Enable All** automatically accepts all invitations.
- ▶ **PTT is On/PTT is Off:** This menu item allows you to turn your PTT Service off or turn it on.

Pending Invitations

Menu 6.5

This menu item only displays if you have invitations which have been waiting for your review. Selecting this menu item displays a list of invitations pending. Invitations not disposed of within 7 days will expire.

Favorites

Menu 7.1

Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any site. For further details, see page 51.

Games & Apps

Menu 7.2

For further details, see page 47 (Menu 3.2).

Ringtones / Audio

Menu 7.3

The right soft key **[Options]** will bring up the following options.

- ▶ **Send Via Text Message:** Melody Sound can be sent via SMS.
- ▶ **Send via Multimedia Message:** Downloaded Sound can be sent via MMS.
- ▶ **Set as Ringtone:** This sets the Ringtone with currently selected Sound.
- ▶ **Delete:** This deletes currently selected Sound.

- ▶ **Rename:** This deletes the Title of currently selected Sound.

- ▶ **Delete All:** This deletes all sounds.

ⓘ **Note** Sounds supplied as default can only be used under the Set As Ring Tone mode.

Graphics

Menu 7.4

The right soft key **[Options]** will bring up the following options.

- ▶ **Send Via Text Message:** EMS Picture can be sent via SMS.

- ▶ **Send via Multimedia Message:** Downloaded Picture can be sent via MMS.

- ▶ **Set as Wallpaper:** Currently selected Picture can be set as a Wallpaper.

- ▶ **Delete:** Currently selected Picture can be deleted.

- ▶ **Rename:** Title of currently selected Picture can be edited.

- ▶ **Delete All:** All Pictures can be deleted.

ⓘ **Note** Pictures supplied as default can only be used under the Set As Wallpaper mode.

Multimedia

Menu 7.5

The right soft key [**Options**] will bring up the following options.

- ▶ **Send Via Text Message:** EMS Animation can be sent via SMS.
- ▶ **Send via Multimedia Message:** Downloaded Animation can be sent via MMS.
- ▶ **Set as Wallpaper:** Currently selected Animation can be set as a Wallpaper.
- ▶ **Delete:** Currently selected Animation can be deleted.
- ▶ **Rename:** Title of currently selected Animation can be edited.
- ▶ **Delete All:** All Animations can be deleted.

Tools

Menu 7.6

Alarm Clock

(Menu 7.6.1)

Set the alarm to ring at a specific time. In the **Alarm Clock** menu, the following options are available:

On: Set the time(hour and minute) for activating the alarm.

1. Enter the menu.
2. Select [**On**] by pressing the right/left navigation keys.
3. If you want to set the time for activating the alarm, press the down navigation key.
4. Enter the required time, press the down navigation key.
5. The following options are available.
 - **Once:** The alarm rings only once and is then deactivated.
 - **Daily:** The alarm rings every day at the same time.
 - **Weekly:** The alarm rings every week on the same day and at the same time.
 - **Monthly:** The alarm rings every month on the same day and at the same time.
6. Allows you to select the alarm melody by using the right/left navigation keys.

7. Press the left soft key [**Set**].

Off: Cancel the alarm.

- ⓘ **Note** If this option is set to **On**, the alarm will ring at the specified time, even when the phone is switched off. To stop the alarm when it rings, open the phone and press the right soft key [**Quit**].

Calendar

(Menu 7.6.2)

When you enter this menu a calendar will be displayed. Top of the screen indicates sections for date. Square cursor is used to locate a particular day. The under bar on the calendar indicates a schedule or memo on that day. This function helps to remind you of the schedule and memo. The phone will sound an alarm tone if it has been set for a specific note.

For changing the day, month, and year.

- ⓘ **Note** Your phone should be switched on to use this function.
- ▶ **View:** Press the right soft key [**Options**] to delete or edit the note you selected.
- ▶ **Edit:** Allows you to edit the schedule.
- ▶ **Delete:** Allows you to delete the schedule.
- ▶ **New Schedule:** You can edit maximum of 30 characters and create up to 30 notes.
- ▶ **Calendar:** Allows you to consult the calendar.
- ▶ **Scheduler Tone:** The phone can sound an alarm tone when the scheduled date for an event has been reached with this option.
- ▶ **All Schedules:** Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists. You can use the menu by press the right soft key [**Options**].
- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Delete Old:** Delete past schedule event that has already been notified.
- ▶ **Delete All:** Delete all schedules. You are asked to confirm your action.
- ⓘ **Note** You can see Edit, Delete, View all schedules, Delete past, and Delete all menus dependent on setting of the schedule.

Voice Memo (Menu 7.6.3)

Allows you to record a memo. You can record up to 3 voice messages with each message up to 30 seconds.

You can use the Voice Memo feature to:

- Play the recorded voice memos
- Delete one or all voice memos

1. Once recording is started, the message **'Recording...'** and the remaining time is displayed.

- 🔔 **Note** If all memo locations are full, you must delete an old memo before recording a new one.

2. If you want to finish recording, press the left soft key **[Save]**.

- ▶ **Play:** Allows you to play back all memos recorded, starting with the most recent memo. The screen displays the date and time when the memo was recorded.
- ▶ **Delete:** Allows you to delete a specific memo. All memos recorded are played back, starting with the most recent one.

▶ **Record New:** Allows you to record a memo.

▶ **Rename:** Allows you to rename a specific memo.


▶ **Send Via Multimedia Message:** Sends the selected voice memo by MMS.

▶ **Delete All:** Allows you to delete all memos.

Calculator (Menu 7.6.4)


Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the Calculator

1. Enter the first number using the numeric keys.
2. Use the navigation keys to select a sign for calculation.
3. To calculate the result, press the left soft key **[Result]** or  key.

Notepad

(Menu 7.6.5)

- 📌 **Note** To include a decimal point, press the  key.

To write, edit and delete a memo on a specific date, proceed as follows.

1. Press the left soft key **[New]**.
2. Input the memo and press the right soft key **[Options]**.

The following options are available.

- ▶ **Save:** Allows you to save the memo.
- ▶ **Set T9:** Set on and off for the T9 Input mode.
- ▶ **Set Input Languages:** Allows you to select the languages between English, Spanish or French to use in memo.
- ▶ **Exit Editor:** Allows you to exit in memo editor.

Or

1. Select a Memo.
2. Press the right soft key **[Options]**.

The following options are available.

- ▶ **View:** Allows you to view the memo.
- ▶ **Delete:** Allows you to delete the memo. You can press the right soft key **[Options → Delete]** to edit the memo displayed.
- ▶ **Edit:** If you select a memo that already exists, you can press the right soft key **[Options → Edit]** to edit the memo displayed.
- ▶ **New Note:** Add a new memo, up to 20 memos and 40 characters per each memo.
- ▶ **Delete All:** Allows you to delete all memos. You are asked to confirm your action.


 
World Clock

(Menu 7.6.6)

Allows you to check the current Greenwich Mean Time(GMT) and 52 major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. Press the right soft key [Options].
3. If you want to set, press the  key.
4. If you want to set Daylight Savings, press the  key in Options menu.

 **Note** The time zone setting of each city in World time menu may be affected by network condition.


Unit Converter

(Menu 7.6.7)

This converts any measurement into a unit you want.

There are 4 types that can be converted into units:

Length, Surface, Weight, and Volume.


1. You can select one of four unit types by pressing the left soft key [Unit].
2. Select the standard value by using the left/right navigation keys.
3. Select the unit you want to convert by pressing the up/down navigation keys.
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing the  key.

Address Book

You can store phone numbers and their corresponding names in the memory of your SmartChip. In addition, you can store up to 255 numbers and names in the phone memory. The SmartChip and phone memories, although physically separate, are used as if they were a single entity, called the Address Book.

Contacts

Menu 8.1

1. Open the Address Book menu.
 2. Scroll to highlight Contacts, and press the left soft key **[OK]**.
 3. If you want to edit, delete, copy an entry, or to add the voice to one, select **[Options]**.
 4. Once you have found the required entry, press the  to dial the number.
- **View:** To view in detail the selected name.
 - **Delete:** You can delete an entry.
 - **New Contact:** You can add a new contact in the list.
 - **New Message**
 - **Text:** You can write a text message. For further details, see page 38.

- **Multimedia:** You can write a multimedia message. For further details, see page 41.
- **Edit:** You can edit the name, mobile number, home number, office number, E-mail, group, memo and picture by press the left soft key **[OK]**.
- **Copy to Phone:** You can copy an entry from SmartChip to phone.
- **Copy to SmartChip:** You can copy an entry from Phone to SmartChip.
- **Set Voice Dial:** You can add voice to the entry or change the voice dial.
- **Add Speed Dial:** For further details, see page 68.
- **Set Primary Number:** You can select the main number out of your mobile, home or office numbers. Choose the one that is most often used. The main number will be displayed first, if you set this.

New Contact

Menu 8.2

You can add a address book entry by using this function. Phone memory capacity is 255 entries. SmartChip memory capacity depends on the cellular service provider. You can also save 20 characters of name in the phone memory, and save characters in the SmartChip. The number of characters is dependent on the SmartChip.

1. Open the Address Book menu.
 2. Scroll to highlight New Contact, and press the left soft key [OK].
 3. You can add new address book entries to SmartChip memory or the address book memory. To select the memory, go to **Set Save Location** (Menu 8.8).
- Adding new entries into SmartChip memory
You can enter a name and number, and select the required group. (Depends on the SIM)
 - Adding new entries into phone memory
You can enter a name, numbers, E-mail address and memo, and select the required group.

Speed Dial List

Menu 8.3

You can assign any of the keys, [2 sec] to [9 sec] with a name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the Address Book menu.
2. Scroll to Speed Dials, then press the left soft key [OK].
3. If you want to add a number to speed dial, select **<Empty>**. Then, you can search the name from the Address Book.
4. Select the name from the speed dial. You can change and delete the name. In addition, you can call by this number, write text message, and multimedia message.

Voice Dial List

Menu 8.4

You can see all the phone numbers which contain voice. You can also call directly by pressing the key. After selecting the phone number by using the up/down navigation keys, press the right soft key [Options] and it will offer the following submenus:

- ▶ **Listen:** You can play back the voice attached to a phone number.
- ▶ **Change:** You can change the voice attached to a phone number.
- ▶ **Remove:** You can delete the voice attached to a phone number.
- ▶ **Call:** You can call by selecting this submenu.
- ▶ **Add Voice Dial:** You can add a new voice to phone number.
- ▶ **Remove All:** You can delete all the voice attached to a phone number.
- ⓘ **Note** The voice can only be attached to the main number which you set. For example, if you change the main number, voice will be automatically attached to the changed number. This means that you cannot attach voice to mobile, office and home numbers simultaneously. You can add a voice tag to a phone number in the SmartChip. The voice tag can be erased if you remove or change the SmartChip.

Caller Groups

Menu 8.5

There are 6 predefined groups as well as one additional group labeled Others where you can create your own lists.

1. You can set the phone to ring in a specific way and display a preselected graphic icon when a particular person calls you.
2. Scroll to **Caller Groups** then press the left soft key **[OK]** to enter this menu.
3. Every Group list will be displayed: **Family, VIP, Friends, Colleague, Group 1, Group 2, No Groups.**
4. Select the Group name that you want to manage by pressing the right soft key **[Options]**.
5. You will see the following submenus under the predefined groups except for the **No Groups** group.
 - **View Members:** Allows you to see the member list in the group.
 - **Group Ringtone:** Allows you to select the ring tone to be used when you receive a voice phone call from a person in the group.

- **Group Icon:** Allows you to select the graphic icon to be displayed when you receive a call from a person in the group.
- **Add Member:** Allows you to add the member to the group.
- **Remove Member:** Allows you to delete the member in the group.
- **Rename:** Allows you to assign a name to the group.

Copy All Contacts

Menu 8.6

You can copy or move entries from the SmartChip memory to the phone memory and vice versa.

SmartChip to Phone

(Menu 8.6.1)

You can copy the entry from the SmartChip to phone memory.

Phone to SmartChip

(Menu 8.6.2)

You can copy the entry from the phone memory to the SmartChip card.


The following options are available:

- ▶ **Keep Original:** When copying, Original Dial Number is kept.
- ▶ **Delete Original:** When copying, Original Dial Number will be erased.

Delete All Contacts

Menu 8.7

You can delete all entries in the **SmartChip, Phone** and **Voice Dials**. This function requires the security code except for Voice.

Press the  key to return to the standby mode.

Set Save Location

Menu 8.8

Scroll to highlight the **Set Save Location** option, then press the left soft key [OK].

- ▶ If you select **Ask Always** when adding entry, the phone will ask where to store.
- ▶ If you select **SmartChip** or **Phone**, the phone will store an entry to the SmartChip or the phone.

Information


Menu 8.9

Service Dial Number

(Menu 8.9.1)

You can view the list of Service Dialing Numbers (SDN) assigned by your network provider (If supported by the SmartChip). Such numbers include the emergency, directory assistance and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service.

Press the  key.

Check Memory

(Menu 8.9.2)

You can check how many names and numbers are stored in the Address Book (SmartChip and phone memories).

My Numbers

(Menu 8.9.3)

Allows you to display your phone number in the SIM card.

Settings

Sounds

Menu 9.1

You can use the Sound Settings feature to customize various settings, such as the:

- ▶ **Ring melody, volume and type**
- ▶ **Sounds made when you press a key, make an error or receive a message**

Shop Ringtones

(Menu 9.1.1)

This menu option connects to Cingular's ringtone download site.

Ringtones

(Menu 9.1.2)

This option allows you to select the required ring melody. You can choose between many different melodies. If you have downloaded any sounds from the Internet or received any ring tone messages, you can view the list in this menu.

Volume

(Menu 9.1.3)

- ▶ **Ringtone:** To set the volume level for the ringing tones.
- ▶ **Key Tone:** To set the volume level for keypad tones.

- ▶ **Slider Tone:** When opening the slide, volume level can be adjusted.
- ▶ **Earpiece:** When using the Earpiece, volume level can be adjusted.
- ▶ **Headset:** When using the Headset, volume level can be adjusted.
- ▶ **Handsfree:** When using the Handsfree, volume level can be adjusted.

Ring Alert Type

(Menu 9.1.4)

You can select an option from Ring, Ring and Vibrate and Vibrate then Ring.

Message Alert Tones

(Menu 9.1.5)

Select the alert tone for messages.

Key Tones

(Menu 9.1.6)

This menu option allows you to select a tone that the phone sounds when you press a key. You can select an option from Beep and Voice.

Slider Tone (Menu 9.1.7)

This menu option allows you to select a tone that the phone sounds when you open the slide.

Voice Memo (Menu 9.1.8)

For further details, see page 64 (Menu 7.6.3).

Display *Menu 9.2*

You can change the background image and the display style for Menu Mode according to your preference.

Wallpaper (Menu 9.2.1)

This option allows you to change the background image (wallpaper) to be displayed in idle mode.

To change the background image, proceed as follows.

1. Scroll through the list by pressing the left or right navigation key.

You have various preset images available. You can also select the blank background and any images downloaded from the Internet.

2. Press the left soft key **[OK]** when the required image is highlighted.

The selected image is displayed.

Backlight Timer (Menu 9.2.2)

You can select whether or not the phone uses the backlight. A marginal increase in the standby/talk time can be achieved by turning the backlight off.

Languages (Menu 9.2.3)

You can select the display language. When the language option is set to Automatic, the language is automatically selected according to the language of the SmartChip used. English will be set if the language on the SmartChip is not supported in the phone.

Menu Style (Menu 9.2.4)

This option allows you to select the menu display style. You can choose either **Icon style** or **List style**.

Date & Time

Set Date

(Menu 9.3.1)

Allows you to enter the day, month and year. You can change the date format via the Date Format menu option.

Format: Allows you to change the time and date formats.

Date Format

(Menu 9.3.2)

YYYY/MM/DD(year/month/day)

DD/MM/YYYY(day/month/year)

MM/DD/YYYY(month/day/year)

Set Time

(Menu 9.3.3)

Allows you to enter the current time. You can choose the time format via the Time Format menu option.

Time Format

(Menu 9.3.4)

24 Hours/12 Hours

Auto Update

(Menu 9.3.5)

Select On to set the phone to automatically update the time and date according to the current time zone.

Menu 9.3

Call

Menu 9.4

To change the settings for call diverting:

Call Forwarding

(Menu 9.4.1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider. Select one of the divert options, for example, select If busy to divert voice calls when your number is busy or when you reject incoming calls.



The following options are available:

- ▶ **All Voice Calls:** Diverts voice calls unconditionally.
- ▶ **If Busy:** Diverts voice calls when the phone is in use.
- ▶ **If No Reply:** Diverts voice calls which you do not answer.
- ▶ **If Out Of Reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All Data Calls:** Diverts to a number with a PC connection unconditionally.
- ▶ **All Fax Calls:** Diverts to a number with a fax connection unconditionally.

- **Activate:** Activates the corresponding service.
 - **To Other Number:** Inputs the number for diverting.
 - **Favorite Number:** You can check recent five diverted numbers.
 - **Cancel:** Cancels the corresponding service.
 - **View Status:** Checks the status of the service.
- ▶ **Cancel All:** Cancels all call divert service.

Answer Mode (Menu 9.4.2)

Allows you to determine when to answer the phone.

- ▶ **Slide Open:** When the phone rings, you can answer a call simply by sliding down the keypad.
- ▶ **Any Key:** You can answer an incoming call by pressing any key, except the  key.
- ▶ **SEND Key Only:** You can answer an incoming call by only pressing the .

Send My Number (Menu 9.4.3)

This network service allows you to set your phone number to be displayed **On** or hidden **Off** from the person to whom you are calling. Select **Set By**

Network to reset the phone to the setting that you have agreed upon with your service provider.

Call Waiting (Menu 9.4.4)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View Status**, to check if the function is active or not.


Minute Minder (Menu 9.4.5)

This option allows you to specify whether the phone must beep every minute during an outgoing call to keep you informed of the length of the call.

Voice Dial (Menu 9.4.6)

You can make a phone call by saying a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice dialing, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.

- When recording a voice tag or making a call by using a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from your mouth and face so that the proximity sensor does not turn the loudspeaker off.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.
- ▶ **Automatic:** You can enter the voice dial mode whenever you open the slide.
- ▶ **Manual:** You can enter the voice dial mode by holding down the  key.
- ⓘ **Note** You must say the name exactly as you said when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

Auto Redial (Menu 9.4.7)

Select On, and your phone will make a maximum of three attempts to connect the call after an unsuccessful call attempt.

Send DTMF Tones (Menu 9.4.8)

You can send the DTMF (dual tone multi-frequency) tones of the number on the display during a call.

This option is helpful for entering a password or account number when you call an automated system, like a banking service.

Security Menu 9.5

Various codes and passwords are used to protect the features of your phone. They are described in the following sections.

Request PIN Code (Menu 9.5.1)

When the PIN code request feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

- ⓘ **Note** Before disabling the PIN code request feature, you must enter your PIN

The following options are available:

- ▶ **Enable:** You must enter the PIN each time the phone is switched on.
- ▶ **Disable:** The phone connects directly to the network when you switch it on.

Auto Key Lock (Menu 9.5.2)

When you enable Automatic key lock, keypad will be lock automatically on an idle screen after selected seconds without any key requesting. if you set to Off, keypad will not be locked automatically.

- 🔴 **Note** If you want to unlock your phone keypad, press the left soft key [Unlock] and then press the right soft key. But if you enabled Automatic key lock before, your phone keypad will be unlock and then after selected seconds the keypad will be lock up again automatically.

Fixed Dial Number (Menu 9.5.3)

Allows you to restrict your outgoing calls to selected phone numbers, if this function is supported by your SmartChips. The PIN2 code is required.

The following options are available:

- ▶ **Enable:** You can only call phone numbers stored in the Address Book. You must enter your PIN2.
- ▶ **Disable:** You can call any number.
- ▶ **Number List:** You can view the number list saved as fixed dial number.

- 🔴 **Note** Not all SmartChips have a PIN2. If your SmartChips does not, this menu option is not displayed.

Change Codes (Menu 9.5.4)

The Change codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one.

You can change the access codes: **Security Code**, **PIN1 Code**, **PIN2 Code**


- 🔴 **Note** PIN: Personal Identification Number.

Connection

GPRS Attach

(Menu 9.6.1)

If you select **Power On** and you are in a network that supports packet data, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select **When Needed**, the phone will use a packet data connection only if you start an application or action that needs it. The GPRS connection is closed after it is not used by any application.

 **Note** If there is no GPRS coverage and you have chosen **Power on**, the phone will periodically try to establish a packet data connection.

Network Profile

(Menu 9.6.2)

This feature sets the Profile during the WAP and MMS connections. Please see page 51 for further detail. The Profile menu under the Access Point feature will display Add, Delete and Editor options, but the reason why Activate option is not available is because there is no way of knowing whether WAP or MMS will be used to activate the content.

Menu 9.6

Reset Network Profile

(Menu 9.6.3)

This allows Profile information to be restored to original setting. For example, this option will restore the Profile that has been deleted by the Delete All selection from the Network Profile (Menu 5.4) submenu.

Reset Default

Menu 9.7

You can easily reset your phone to its default configuration. To do so, proceed, as follows.

1. Select the Reset Default menu option.
2. Enter the 4-digit phone password.

 


 **Note** The password is preset to 0000.

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press the  key.

Q How do I clear all call history?

A Press the left soft key[Menu] and then the    key.

Q Why is the connection inconsistent or not audible in certain areas?

A When frequency environment is unstable in a certain area, connection may be inconsistent and not audible. Relocate to another area and try again.

Q Why is the connection not consistent abruptly disconnects even when established?

A When frequency is unstable or weak or if there are too many users, connection may be cut off even after it was established. Please try again later or attempt after relocating to other areas.

Q Why does the LCD not turn on?

A Remove the battery and turn on the power after placing it back on. If there is no change, fully charge the battery and try again.

Q Why is there an echo when a connection is made with certain telephones in a certain area?

A This is called the 'Echo Phenomenon', where it occurs if connection volume is too high or caused by special properties (semi electronic telephone exchange) of the equipment on the other end.

Q Why does the phone heat up?

A The phone may get hot when there is a very long call duration or when games are played or even when surfing the Internet for a long time. This has no effect upon the life of the product or performance.

Q Why is there no ring tone, but only a blinking LCD screen?

A Phone may be set to 'Vibration All' or in 'Silent All' mode. In the Sound menu, please select Volume → Ringtone → Volume 1 ~ Volume 5, or Vol5&Vib.

Q Why does the battery life get shorter in standby mode?

A The battery is worn out. As time passes, the battery life gradually becomes shorter. If the battery lasts about half the amount of time as when first purchased, it's time to purchase a new battery.

Q Why does the battery run out so quickly during normal use?

A It is due to the user environment or a large number of calls or weak signal.

Q Why is no number dialed when you recall a Address Book entry?

A Check that the number has been stored correctly by using the Address book Search feature. Re-store them, if necessary.

Q I cannot find the lock, PIN, or PUK code. What is my password?

 
A The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider

Accessories

There are a variety of accessories available for your mobile phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adapter

This adapter allows you to charge the battery. It supports standard U.S. 120Volt 60Hz outlets. It takes 5 hours to charge a completely discharged battery.

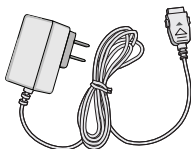


Battery

Standard battery is available.



Vehicle Power Adapter

 You can operate the phone and trickle charge the phone battery from your vehicle by using the vehicle power adapter. It takes 5 hours to charge a completely discharged battery.

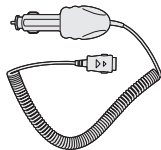


Headset

Connects to your phone, allowing hands-free operation. Includes earpiece, microphone, and integrated call answer /termination button.



Data Cable Kit

 Connects your phone to a PC.

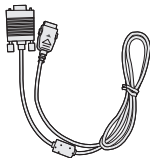

Safety Guidelines

TIA Safety Information

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

*American National Standards Institute;
National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection
The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

- ▶ Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- ▶ Give full attention to driving - driving safely is your first responsibility;
- ▶ Use hands-free operation, if available;
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6') inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ▶ Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- ▶ Should not carry the phone in a breast pocket.
- ▶ Should use the ear opposite to the pacemaker to minimize the potential for interference.
- ▶ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a 'blasting area' or in areas posted: 'Turn off two-way radio'. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

Charger and Adapter Safety

- ▶ The charger and adapter are intended for indoor use only.

Battery Information and Care

- ▶ Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- ▶ The battery does not need to be fully discharged before recharging.
- ▶ Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- ▶ Do not disassemble or impact the battery as it may cause electric shock, short-circuit, and fire. Store the battery in a place out of reach of children.

Safety Guidelines

- ▶ Keep the battery's metal contacts clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- ▶ Recharge the battery after long periods of non-use to maximize battery life.
- ▶ Battery life will vary due to usage patterns and environmental conditions.
- ▶ Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.
- ▶ The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- ▶ Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- ▶ Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- ▶ When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- ▶ If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- ▶ Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- ▶ Using a damaged battery or placing a battery in your mouth may cause serious injury.
- ▶ Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- ▶ Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- ▶ When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- ▶ Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- ▶ Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- ▶ The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling.
- ▶ Do not paint your phone.
- ▶ The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- ▶ When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- ▶ Do not turn your phone on or off when putting it in your ear.

FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones.

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- ▶ Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- ▶ Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- ▶ Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- ▶ National Institute for Occupational Safety and Health
- ▶ Environmental Protection Agency
- ▶ Occupational Safety and Health Administration
- ▶ National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless

phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3.What kinds of phones are the subject of this update?

The term ‘wireless phone’ refers here to handheld wireless phones with built-in antennas, often called ‘cell’, ‘mobile’, or ‘PCS’ phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called ‘cordless phones,’ which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer,

glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time

tumors develop - if they do- may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6.What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular

Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7.How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per

kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, 'Recommended Practice for Determining the Spatial-

Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,' sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy

(RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the

time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical

instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a 'compatible' phone and a 'compatible' hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
National Radiological Protection Board (UK) (<http://www.nrpb.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility.

When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Don’t get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip — dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are

behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations — with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless nonemergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But

you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website www.wow-com.com

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough

evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. * Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this

model phone when tested for use at the ear is 0.87 W/kg and when worn on the body, as described in this user's manual, is 1.36 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.) While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJF7200. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the feature on your mobile phone, here are a few definitions.

Call Divert

Ability to reroute calls to another number.

Call waiting

Ability to inform users that they have an incoming call when engaged on another call.

GPRS (General Packet Radio Service)

GPRS guarantees continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

Multiparty Calls

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

Roaming

Use of your phone when you are outside your home area (when traveling for example).

SDN (Service Dial Number)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

SmartChip

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SmartChip fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

Patent Information

This product was manufactured under one or more of the following U.S.

patents: 5276765 5749067 6061647

DATE: 2005. 6. 4

Index

A

Access codes	21
Accessories	81
Add member	70
Address book	67
Adjusting the volume	23
Alarm clock	62
All schedules	63
Answering a call	23
Answer mode	75
Auto redial	76

B

Backlight	16
Battery	9,81
Bearer setting	40
Business card	46

C

Calculator	64
Calendar	63
Caller groups	69
Call divert	98
Call Duration	33
Call waiting	56,75
Check Memory	46
Clear cache	52
Clear key	14,15
Conference calls	29
Copy All Contacts	70
Copy to SmartChip	67

D

Delete recent calls	32
Dialed calls	32,33
Display screen	14,15
Display information	16

E

Ending a call	22
Entering text	24

F

Fixed dial number 77

G

Games 47
 Go to URL 51
 GPRS Attach 78
 Group icon 69

H

Headset 72,81

I

Inbox 40,41,45
 In-call menu 28

L

Languages 73
 Last call 33
 Lower case 26

M

Making a Call 22
 Making international calls 22
 Menu tree 30
 Message center URL 44
 Message key 14,15
 Microphone 14,15
 Minute minder 75
 Missed calls 32
 Muting the microphone 28
 Multimedia messages 41
 My Numbers 71

N

Navigation key 14,15
 New message 39,41
 Notepad 65

O

Outbox 42

P

Phone to SmartChip	70
Power key	14,15
Private call	29
PTT Calls	55
PTT Settings	60

R

Received Calls	32,33
----------------------	-------

S

Security code	22
Send	14,15
Send my number	75
Service dial number	71
Scheduler tone	63
Side keys	14,15
Signal strength	23
Speakerphone	23

T

Templates	45
Text messages	38
Time format	74
Travel adapter	9,81

U

Unit converter	66
Upper case	26

V

Validity period	44
Vibrate mode	23
Voice Dial	75
Voice dial List	68

W

Wallpaper	73
WAP browser	50
World Clock	66

Memo

MEMO