



Quick Start Guide



V CAST MULTIMEDIA PHONE with TOUCH SCREEN

Getting to Know Your Phone




*Customizable.

Note: Standby mode is when the phone is waiting for input. No menu is displayed, and the phone isn't performing an action. It is the starting point for all of the steps in the Quick Start Guide.

 
Touch Screen/Making a Call

Using the Touch Screen

- To make a selection, simply use the tip of your finger to touch the on-screen text or a touch key.
- It's not necessary to press hard. A light touch will do.
- Touch **Home**  to return to the standby screen.



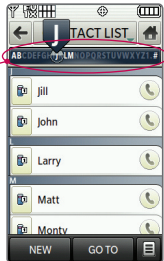

Scrolling with the Touch Screen

- To scroll using the touch screen, touch the screen and **drag** (or flick) **up** or **down**.
- You can also scroll **left** and **right** within the subcategories.
- When viewing your contacts or songs, you can scroll using the **Search Ribbon** at the top of the screen. Either touch a highlighted letter or touch and **drag** your finger along the **Search Ribbon** to jump to contacts or songs that begin with the selected letter.





Search Ribbon

Making a Call from the Contact List

1. Press the  **Key** twice on the left side of the phone or touch  to unlock the touch screen.
2. Touch **Contacts** .
3. To quickly find the contact you wish to call, scroll using the **Search Ribbon**.
4. Press **Phone**  next to the contact's name to place the call.

Handwriting Recognition

Saving a Contact

1. Press the **Key** icon twice on the left side of the phone or touch **6** to unlock the touch screen.
2. Touch **Contacts** , and then touch **New**.
3. Touch the **Name** field to begin entering your contact's name.
4. There are a variety of text entry methods on Dare. The default method is the alphabetical keypad, but you can also touch the icons on the right side of the display to access the virtual QWERTY keyboard or the handwriting recognition feature. For this demonstration, touch **Handwriting Recognition** .
5. Write the letters of your contact's name in the dark gray area. To change case or shift between letters, numbers, and symbols, touch the icons on the left side of the screen. When you are finished, touch **Done**.
6. Enter additional information for your contact using the same steps as above. When you are finished, touch **Save**.

Note: You can also use the Handwriting Recognition feature when composing messages, entering URLs, and writing notes. To learn more about this feature and its guidelines, refer to the User Manual.



Shortcut Menu

Access frequently used features through the customizable Shortcut menu. In seconds, you can adjust both the order and content of this convenient menu.

Customizing the Shortcut Menu

1. Press the **Key** twice on the left side of the phone or touch **6** to unlock the touch screen.
2. Touch **Shortcut menu**, and then touch **Set**.
3. Touch the icon you want to change.
4. You can now select a new shortcut from the list of features.
5. When you are finished, touch **Done**.

Moving Shortcuts to the Standby Screen






1. Press the **Key** twice on the left side of the phone or touch **6** to unlock the touch screen.
2. Touch **Shortcut menu**.
3. Touch and *drag* the icon you want to move onto the standby screen.
4. You can rearrange the icons on the standby screen by touching and *dragging* them.

 
 
Note: To reorder the icons on the **Shortcut menu**, open the menu and then touch and *drag* the icons to the desired position to rearrange them.



Favorites

Stay in touch with frequently called contacts quickly and easily with this fun feature.

1. Press the **Key** twice on the left side of the phone or touch **6** to unlock the touch screen.
 2. Touch **Favorites** .
 3. To add a new favorite, touch **Add** .
 4. Touch a contact's name, and then touch **Done**.
 5. If your contact has an assigned picture ID, you'll now see a thumbnail of that image on the Favorites menu. You can touch and *drag* the thumbnails to arrange them on the screen.
 6. To begin composing a text message to a favorite, touch and *drag* the thumbnail over **New Text Message** .
- To quickly call a favorite, touch and *drag* the thumbnail over **Dial** .
- To view information about a favorite, touch and *drag* the thumbnail over **Info** .

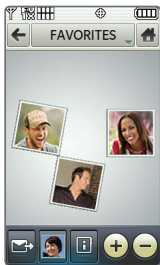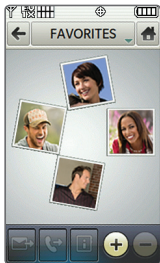


Intuitive Rotating Display

When you rotate the phone while listening to music, viewing your photos, or browsing the web, Dare automatically detects the change and rotates the on-screen display into portrait or landscape view.

1. Press the **Key** twice on the left side of the phone or touch **6** to unlock the touch screen.
2. Touch **Menu**, and then touch **My Music**.
3. Select a song from one of the categories, or touch **Play All**.
4. You can return to the standby screen and continue listening to music in the background by touching **Home**.
5. Access your song list by touching the down arrow. You can touch a song title to begin playing a new song.
6. From the standby screen, touch the song title in the top bar to return to the music player.
7. Rotate the phone counterclockwise to view the display in landscape mode.

 
Note: Dare's display will rotate 360° when viewing pictures and using the music player. Rotate the phone 90° (counterclockwise) when browsing the web or accessing the virtual QWERTY keyboard as well as some Media Center applications.

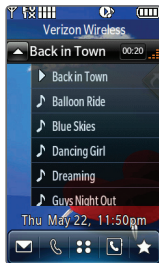

Taking a Picture





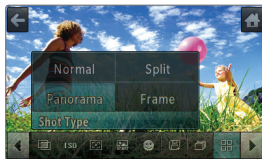 


Dare's 3.2 megapixel camera with autofocus lets you capture your favorite moments quickly and easily. Face detection, noise reduction, and scene mode options make automatic camera adjustments for improved pictures, and you can even create panoramic shots with this great device.

1. Press the **Key** twice on the left side of the phone or touch **6** to unlock the touch screen.
2. Rotate the phone counterclockwise, and then press the side **Key**.
3. To access camera options, touch the screen.
4. Touch **Settings**, and then touch the right arrow to scroll to additional options.
5. Touch **Shot Type**, and then touch **Panorama**.
6. To take a panoramic picture, you will take three photos. For each photo, the right side of the previous image will partially appear in the viewfinder so you can better align your shot. Press to take each picture. After the third picture, Dare will automatically combine the images into a single panoramic photo.
7. Touch **Send** to send the photo.



Editing a Picture






With Dare's Image Editor, enhance photos you've saved to your phone by using functions such as zoom, rotate, crop, add frames, adjust color settings, and much more.

1. Press the **Key**  twice on the left side of the phone or touch **6**  to unlock the touch screen.
2. Touch **Shortcut menu** , then touch **My Pictures**  and select a photo.
3. Touch **Options** , and then touch **Edit**.
4. Modify the picture using the provided editing tools. When you are finished editing, touch **Done**  and then **Save** .
5. Touch **Send** to send the edited picture.



Recording a Video






Dare's built-in camcorder allows you to capture real-time action right from your phone. In addition to customizable options such as brightness and color effects, you can also choose to use high-speed video recording for slow video playback. This is a great option for up-close videos that showcase details of your subject.

 
 
1. Press the  **Key** twice on the left side of the phone or touch  to unlock the touch screen.
2. Rotate the phone counterclockwise, and then press and *hold* the side  **Key**.
3. To access camcorder options, touch the screen.
4. Press  to start/stop recording, and then touch **Send**  to send the video.



Editing a Video

Edit videos with Dare. Shorten lengthy videos, create still images to be added to My Pictures, and add fade in and out effects.

1. Press the  **Key** twice on the left side of the phone or touch  to unlock the touch screen.
2. Touch **Shortcut menu** , then touch **My Videos** .
3. Select a video by touching the box to the left of the video image.
4. Touch **Options** , and then touch **Edit & Save**.
5. Choose one of the editing options and customize your video.

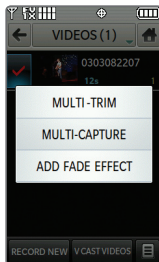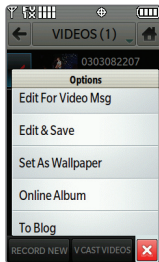

Optional Accessories

Accessories for convenience and fashion are available at www.VerizonWireless.com.



Bluetooth Headset
(HBM-760)



Bluetooth Stereo Headset
(HBS-200)



Bluetooth Stereo Speakers



Swivel Holster



Extended Battery
(1,500 mAh)



Portable Stereo Speakers

©2008 LG Electronics, Inc. All rights reserved. All other marks are proprietary to their respective owners. All phone images are simulated. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Dare™ is a trademark of Verizon Wireless.



Mixed Sources

Product group well managed
for environmental, social and
governance (ESG) and
responsible sourcing
www.fsc.org Cert no. XXX-XXX-XXX
© 1996 Forest Stewardship Council