



LG

Life's Good

OWNER'S MANUAL

LG

IMPRINT™

www.lgusa.com

*Copyright ©2010 LG Electronics, Inc. All rights reserved.
LG and the LG logo are registered trademarks of LG
Group and its related entities. All other trademarks are
the property of their respective owners.*

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F .
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
4. Store the battery out of reach of children.



5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions	1	The Battery	22
Table of Contents	4	Installing the Battery	22
Welcome	9	Removing the Battery	22
Technical Details	10	Charging the Battery	23
Important Information	10	How to Install Your microSD™ Card	23
FCC Part 15 Class B Compliance	10	How to Remove Your microSD™ Card	24
Technical Details	10	Battery Charge Level	24
FCC RF Exposure Information	12	Turning the Phone On and Off	25
Bodily Contact During Operation	12	Turning the Phone On	25
Vehicle-Mounted the External Antenna	13	Turning the Phone Off	25
FCC Notice and Cautions	13	Signal Strength	25
Caution	14	Screen Icons	26
Part 15.19 statement	14	Making Calls	26
Part 15.21 statement	14	Correcting Dialing Mistakes	27
Part 15.105 statement	15	Redialing Calls	27
Phone Overview	16	Receiving Calls	27
Entering Text With the QWERTY Keyboard	18	Quick Access to Convenient Features	28
Menus Overview	19	Mute Function	28
Getting Started with Your Phone	22	Quick Volume Adjustments	28
		Call Waiting	28
		Caller ID	28
		Speed Dialing	29

Entering and Editing Information	30		
Text Input	30		
Key Functions	30		
Contacts in Your Phone's Memory	31		
The Basics of Storing Contacts Entries	31		
Phone Numbers With Pauses	31		
Storing a Number with Pause or Wait	32		
Adding Pause or Wait to an Existing Number	32		
Searching Your Phone's Memory	33		
Scrolling Through Your Contacts	33		
Contacts Options	33		
Making a Call From Your Phone's Memory	34		
Phone Menus	36		
Messaging	36		
1. New Text Message	36		
2. New Picture Message	38		
3. Inbox	40		
4. Outbox	41		
5. Drafts	42		
6. Voicemail	42		
7. Email	43		
8. IM	43		
9. Web Message	44		
0. Templates	44		
*. Settings	44		
*.1 All Messages	44		
*.2 Text Message	45		
*.3 Picture Message	46		
*.4 Edit Voicemail Number	46		
#. Delete All	46		
Contacts	47		
1. New Contact	47		
2. Contact List	47		
3. Groups	48		
4. Metro411	49		
5. My vCard	49		
6. Speed Dials	49		
Multimedia	50		
1. Take Photo	50		
2. Record Voice	52		
3. Images	52		
4. Audios	53		

Table of Contents

Music	55	3. My Visibility	62
1. Last Played Songs (Now Playing)	55	4. My Bluetooth Info	62
2. All Songs	55	My Schedule	63
3. My Playlists	56	1. Alarm Clock	63
4. Artists	56	2. Calendar	63
5. Albums	57	3. Notepad	64
6. Genres	57	Tools	65
@metro App Store	57	1. Voice Command	65
MetroWEB	58	1.1 Start Command	65
Call History	58	1.1.1 Call <Name> or <Number>	65
1. Missed Calls	58	1.1.2 Voicemail	65
2. Received Calls	58	1.1.3 Missed Calls	66
3. Dialed Calls	59	1.1.4 Messages	66
4. All Calls	59	1.1.5 Time & Date	66
5. Call Timer	59	1.1.6 Help	66
6. Data Counter	59	1.2 Command Mode	67
My Menu	60	1.3 Announce Alert	67
1. Launch	60	1.4 Train Word	67
Bluetooth	60	1.5 Best Match	67
1. Paired Devices	61	2. Calculator	68
2. Power	62	3. Ez Tip Calculator	68
		4. World Clock	68
		5. Stopwatch	69
		6. Unit Converter	69

Settings	70		
1. Sound	70		
1.1 Ringtones	70		
1.2 Volume	70		
1.3 Message Alerts	70		
1.4 Alert Type	71		
1.5 Service Alerts	71		
1.5.1 Minute Beep	71		
1.5.2 Call Connect	71		
1.5.3 Back to Top	71		
1.5.4 Low Battery	71		
1.5.5 Roam Alert	72		
1.6 Power On/Off Tone	72		
1.7 Slide Tone	72		
2. Display	72		
2.1 Shortcuts	72		
2.2 Wallpaper	73		
2.1.1 Main Screen	73		
2.1.2 Lock Screen	73		
2.3 Banner	73		
2.4 Backlight	73		
2.5 Menu Style	74		
2.6 Languages (Idiomas)	74		
2.7 Clocks & Calendar	74		
2.8 Font Settings	74		
2.9 Color Schemes	75		
2.0 Word Prediction	75		
3. Security	75		
3.1 Lock Phone	75		
3.2 Auto Device Lock	76		
3.3 Restrictions	76		
3.4 Emergency Numbers	77		
3.5 Change Lock Code	77		
3.6 Reset Default	78		
4. Call Settings	78		
4.1 Answer Options	78		
4.2 End Call Options	78		
4.3 Auto Retry	79		
4.4 One-Touch Dial	79		
4.5 Airplane Mode	79		
4.6 TTY Mode	80		
5. USB Mass Storage	80		
6. System	81		
6.1 Network	81		
6.1.1 System Select	81		
6.1.2 Set NAM	81		
6.1.3 Serving System	81		
6.2 Location	82		
7. Memory	82		
8. Phone Info	82		

Table of Contents

Safety	83	Warning! Important safety information	92
TIA Safety Information	83	Avoiding hearing damage	92
Exposure to Radio Frequency Signal	83	Using your phone safely	92
Antenna Care	83	Using headsets safely	93
Phone Operation	84	FDA Consumer Update	93
Tips on Efficient Operation	84	10 Driver Safety Tips	104
Driving	84	Consumer Information on SAR	107
Electronic Devices	84	FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	110
Pacemakers	85		
Persons with pacemakers:	85	<hr/> Accessories	114
Hearing Aids	85		
Other Medical Devices	85	<hr/> Limited Warranty Statement	115
Health Care Facilities	86		
Vehicles	86	<hr/> Index	119
Posted Facilities	86		
Aircraft	86		
Blasting Areas	86		
Potentially Explosive Atmosphere	86		
For Vehicles Equipped with an Air Bag	87		
Safety Information	87		
Charger and Adapter Safety	88		
Battery Information and Care	89		
Explosion, Shock, and Fire Hazards	90		
General Notice	90		

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Welcome

Thank you for choosing the MN240 cellular phone designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- Slim and sleek design with internal antenna.
- Large, easy-to-read, backlit LCD with status icons.
- Messaging, voice mail, and caller ID.
- QWERTY keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any Key answer, Auto with Handsfree answer, Auto Retry, One Touch Dial and Speed Dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

The MN240 is a trimode phone that operates on among (Code Division Multiple Access CDMA) frequencies: cellular services a 800 MHz, (Personal Communication Services PCS) at 1.9 GHz and AWS (Advanced Wireless Services).

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA

networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base

Station Transmission System), MS (Mobile Station) and AWS (Advanced Wireless Services).

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

Technical Details

* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The following table lists some major CDMA standards.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic

energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing

metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted the External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted the external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the

following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Technical Details

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Phone Overview



1. **Earpiece** Lets you hear the caller.
2. **LCD Screen** Displays messages and indicator icons.
3. **Left Soft Key** Use to access Menu from the standby screen, or the function immediately above it.
4. **Speakerphone Key** Use to turn Speakerphone On or Off. Press and hold for 3 seconds to activate Voice Command.
5. **SEND Key** Use to place or answer calls.
6. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
7. **Navigation Key** Use to navigate through menus and options. When on the Standby screen, use for quick access to Contact List , Main, and Messaging.
8. **Right Soft Key** Use to access @metro from the standby screen, or the function immediately above it.
9. **CLR Key** Deletes single spaces or characters with a quick press; press and hold to delete the text entered in a text field. Will also back you out of menus, one level at a time.
10. **END Key** Use to turn the power on/off and to end a call. Also, use to exit from any function and return to the standby menu.
11. **OK Key** Selects the function displayed at the bottom center of the LCD screen.



- 1. Camera Lens** Lets you take pictures.
- 2. Speaker** Lets you hear the ringtones and sounds with amplified sounds.
- 3. Headset Jack** Allows the use of a hands-free headset.
- 4. Side Volume Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
- 5. microSD™ card slot** Lets you use a microSD card (sold separately) to expand the memory of your phone.
- 6. Charger/Accessory Port** Connects the phone to the battery charger or other available accessories.
- 7. Camera Key** Hold down to activate the camera function.

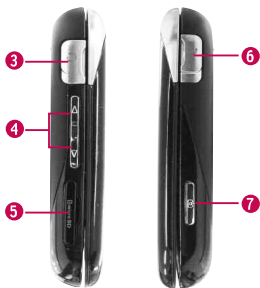

Charging with PC USB

You can use your computer to charge your phone. Connect one end of a USB cable to the charging accessory port on your phone and the other end to a high-powered USB port on your PC. When charging a USB hub, be sure to use a powered USB hub.





Phone Overview

Entering Text With the QWERTY Keyboard

Your phone features a slide-out QWERTY keyboard, specifically designed for easy and comfortable text entry. The QWERTY keyboard uses a standard layout and works just like the keyboard on your computer.





To enter text with the QWERTY keyboard:

1. In a text entry screen, slide open the QWERTY keyboard.
2. Use the QWERTY keyboard to enter text.
 - To change capitalization, press .
 - To enter alternate characters on a key, press  and then press the corresponding key. To lock the function key (as when entering a series of numbers or alternate characters), press  twice.
 - For additional text entry options, including Symbols and 123, press the Left Soft Key  **Abc** when entering text, then select an option.

Menus Overview

Menu Access

Press  **Menu** to access the main phone menus. There are two methods of accessing the menus and submenus:

- Use the navigation key to highlight a menu/option and  to select it.
- Press the number key on the keypad to activate the corresponding menu/option.

Messaging

1. New Text Message
2. New Picture Message
3. Inbox
4. Outbox
5. Drafts
6. Voicemail
7. Email
8. IM
9. Web Message
0. Templates

*. Settings

1. All Messages
 2. Text Message
 3. Picture Message
 4. Edit Voicemail Number
- ## #. Delete All
1. Delete Inbox
 2. Delete Outbox
 3. Delete Drafts
 4. Delete All Messages

Contacts

1. New Contact
2. Contact List
3. Groups
4. Metro411
5. My vCard
6. Speed Dials

Multimedia

1. Take Photo
2. Record Voice

Menus Overview

3. Images

1. My Images

2. Default

4. Audios

1. My Audios

2. Default

Music

1. Last Played Songs
(Now Playing)

2. All Songs

3. My Playlists

4. Artists

5. Albums

6. Genres

@metro App Store

MetroWEB

Call History

1. Missed Calls

2. Received Calls

3. Dialed Calls

4. All Calls

5. Call Timer

6. Data Counter

My Menu

Bluetooth

1. Paired Devices

2. Power

3. My Visibility

4. My Bluetooth Info

My Schedule

1. Alarm Clock

2. Calendar

3. Notepad

Tools

1. Voice Command

2. Calculator

3. Ez Tip Calculator

4. World Clock

5. Stopwatch

6. Unit Converter

Settings

1. Sound

1. Ringtones

2. Volume

3. Message Alerts

4. Alert Type

5. Service Alerts

6. Power On/Off
Tone

7. Slide Tone

2. Display

1. Shortcuts

2. Wallpaper

3. Banner

4. Backlight

5. Menu Style

6. Languages
(Idiomas)

7. Clocks &
Calendar

8. Font Settings

9. Color Schemes

0. Word Prediction

3. Security

1. Lock Phone

2. Auto Device
Lock

3. Restrictions

4. Emergency
Numbers

5. Change Lock
Code

6. Reset Default

4. Call Settings

1. Answer Options

2. End Call
Options

3. Auto Retry

4. One Touch Dial

5. Airplane Mode

6. TTY Mode

5. USB Mass Storage

6. System

1. Network

2. Location

7. Memory

1. Save Options

2. Phone Memory

3. Card Memory

8. Phone Info

1. My Number

2. ESN/MEID

3. Icon Glossary

4. Version

Getting Started with Your Phone

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

Remove the battery cover by pressing down below the LG logo and sliding the cover up (1). Align the battery with the terminals in the phone, then snap the rest of the battery into place (2). Align the battery cover then slide it downward side until it clicks into place (3).



Removing the Battery

Turn the phone off. Slide the battery cover to upward to remove it. Use the opening to the right of the battery to lift the battery out.

Charging the Battery

Use the charger provided with your phone.

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the MN240 may damage your phone or battery.



Notice

Please make sure that the 'B' Side faces up before inserting a charger or data cable into the charger port of your phone.

1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.

The charge time varies depending upon the battery level.

How to Install Your microSD™ Card



1. Locate the microSD™ slot on the left side of the phone and gently uncover the slot opening (the microSD™ slot cover stays attached to the phone so it doesn't become misplaced).

Getting Started with Your Phone



2. Insert the microSD™ card facing up and push in until it clicks into the slot. If you insert the card in the wrong direction, it may damage your phone or your card.

How to Remove Your microSD™ Card

1. Push the card in to release the exposed edge of the microSD™ card, to eject it.

2. Remove the microSD™ card from the slot and replace the cover.

Note


Do not attempt to remove the microSD™ card while reading or writing to the card.

Battery Charge Level


The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in up to three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Turning the Phone On and Off


Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press  for about 3 seconds until the LCD screen lights up.

Turning the Phone Off

1. Unlock the phone, and press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon  -- the more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Note



The call quality may also be affected by the places where you are and weather/ambient conditions.

Getting Started with Your Phone

Screen Icons






To see the icon glossary, go to **Menu -> Settings -> Phone Info -> Icon Glossary** on your phone.

Making Calls



1. With the phone turned on, slide the phone open.
2. Enter the phone number (include the area code if needed).
3. Press .
4. Press  to end the call.

Note


If Outgoing calls are restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contact List. To turn off this function:

 **Menu** ->  **Settings** ->  **Security** -> Enter the Lock Code ->  **Restrictions** ->  **Allow All** -> Enter the Lock Code


Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to return to standby mode.

Redialing Calls





1. Press  twice to redial the number from the last call. The last 150 calls (50 missed, 50 received and 50 dialed) are stored in the call history list and you can also select any of these to redial.

Receiving Calls

1. When the phone rings and/or vibrates, press  to answer or slide open the phone. (depending on your Answer Options).


Tip

To change Answer Options:

 Menu ->  Settings -> 
Call Settings ->  Answer Options.

Choose from the following options:
Slide Open/ SEND Key Only/ Any Key/ Auto with Handsfree



Note

If you press  (the side keys), while the phone is ringing, the ringing and/or vibration is muted for that call.

2. Press  to end the call.

Quick Access to Convenient Features

Mute Function








The Mute Function can be used during a phone call. To quickly activate Mute press Left Soft Key  **Mute**. To cancel, press Left Soft Key  **Unmute**.

Quick Volume Adjustments

Use the side keys to adjust the Master volume, while in standby mode, and the earpiece volume during a phone call. The upper key increases the volume and the lower key decreases the volume.



Note

Keypad Volume is adjusted through the Sound Volume menu:

 **Menu** ->  **Settings** -> 
Sound ->  **Volume** -> 
Keypad -> Use  to adjust volume and press .

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, a beep indicates another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. During a call, press  to answer the incoming call (Call Waiting).
2. Press  again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your cellular provider for information about this function.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A speed dial number can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contact List and display it briefly while simultaneously dialing that phone number for you. Speed Dial Number 1 is set to Voicemail by default and is unchangeable.

Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press  .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press  .

Entering and Editing Information

Text Input

You can customize and enter text in many of the functions in your phone. Including, but not limited to: the Banner, Calendar, Contacts and messages. While entering text, the following are your options:

Key Functions



Left Soft Key:

Press to scroll through the following text input modes:

T9 Word: T9WORD/
T9Word/ T9word

Abc: ABC/ Abc/ abc

123

Symbols



Shift Key: Press to change text entry capitalization
T9Word : T9Word ->
T9WORD -> T9word
Abc : Abc -> ABC -> abc

SPACE

Space: Press to complete a word and insert a space.






Clear: Press to delete a single space or character. Press and hold to delete the text entered.



FN Key: Corresponding special characters on the QWERTY keypad can be entered, one at a time.


Contacts in Your Phone's Memory

The Basics of Storing Contacts Entries

1. From standby mode, enter the phone number you want to save (up to 48 digits).
2. Press OK Key  Save.
3. Select either **Add New Contact** or **Update Existing**.
4. Use  to highlight a Label and press .
Mobile 1/ Home 1/ Office 1/ Mobile 2/ Home 2/ Office 2/ Fax

Note


Use **Update Existing** to add the phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 32 characters) and press . A confirmation message is displayed briefly.

Phone Numbers With Pauses

When you call automated systems, such as voice mail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

Wait (W)








The phone stops dialing until you press Left Soft Key  **Release** to advance to the next string of digits.

Pause (P)












The phone waits 2 seconds before sending the next string of digits.

Contacts in Your Phone's Memory

Storing a Number with Pause or Wait

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **New Contact**.
4. Enter a name (up to 32 characters) and enter a number.
5. While entering a number, press Right Soft Key  **Options**.
6. Press  **Wait** or  **Pause**.
7. Enter the additional number(s) then press  **Save**.




Adding Pause or Wait to an Existing Number

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Use  to highlight the Contact entry to edit, then press  **View**.
5. Press Left Soft Key  **Edit**.
6. Use  to highlight the number.
7. Press Right Soft Key  **Options**.
8. Press  **Wait** or  **Pause**.
9. Enter additional number(s), then press  **Save**.





Searching Your Phone's Memory

The MN240 phone is able to perform a dynamic search of the contents in your phone's Contact List. A dynamic search compares entered letters on the Dialpad against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or view.







Searching by Letter

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Start entering the Contact name.





Scrolling Through Your Contacts

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Use  to scroll through the list.

Contacts Options


1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Highlight a contact and press **Right Soft Key**  **Options**.
 -  **Send Message:** Send a text message or picture message to the selected contact.
 -  **Delete:** Delete the selected entry in your Contacts.

Contacts in Your Phone's Memory








-  **Edit:** Edit the selected contact information.
-  **Delete Multiple:** Choose **Selective/ All** to delete multiple entries at one time.
-  **Send via Bluetooth:** Send the contact (as a vCard) via Bluetooth.
-  **Set Speed Dial/ Remove Speed Dial:** Set a speed dial or remove the speed dial assignment.

Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing Send Key  after searching for a phone number in your Contacts list.
- By using Speed Dials.



From Contacts

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Use  to highlight the Contact entry, then press  **View**.
5. Use  to highlight the phone number.
6. Press  to place the call.



From Call History

1. Press  **Menu**.
2. Press  **Call History**.
3. Use  to highlight the type of recent call, then press .

Missed Calls/Received Calls/Dialed Calls/All Calls

4. Use  to highlight the phone number.
5. Press  to place the call.

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press  to call.

Phone Menus






Messaging

The MN240 can store up to 835 messages, including a maximum of 500 SMS and 100 MMS messages in the Inbox, and 50 SMS and 50 MMS in the Outbox. The information stored in the messages is determined by phone mode and service capability. Other limits such as available characters per message may exist, please check with your service provider for system features and capabilities.

1. New Text Message





Allows you to send text messages and e-mail transmissions. Please note that the service carrier of the recipient device may not support Pages.

The Basics of Sending a Text Message

1. Press , , .
2. Enter the recipient's address.
3. Press  to access the text field.
4. Type your message (text or e-mail).
5. Press  **Send**.

A confirmation message is displayed.

Recipient (To:) Field Options

1. Press , , .
2. Press Right Soft Key  **Options**.
3. Select the option(s) to customize.

Contacts To select a recipient from your Contact List.

Call History

Recent Messages Choose **Inbox/ Outbox** to select a recipient from your Recent Messages.







Groups Select a recipient from your Groups.

Cancel Cancels the text message.

4. Complete your message and send or save it.

Customize Your Text Message Using Options

While you are composing the text of a message, you have various options to customize the text.

1. Press  ,  ,  .
2. Use  or press  to highlight the text entry window.
3. Press Right Soft Key  **Options.**

Messaging

4. Select the option(s) to customize.

Insert Templates/ Signature/ Name & Number

Save As Drafts/ Templates

Priority Level High/ Normal

Callback Number On/ Off









Delivery Receipt On/ Off

Cancel Cancels the text message.













5. Complete your message and send or save it.

Message Icon Reference

Inbox

 	New/Unread Text/Picture Message
 	Opened/Read Text/Picture Message
	New/Unread Notification Message
 	Opened/Read Notification Message
	Priority High

Sent





 	Failed Text/Picture Messages
 	Failed Multi Text/Picture Messages
 	Multi Sent Text/Picture Messages
 	Text/Picture Message delivered
 	Sent Text/Picture Message
 	Incomplete Sent Text/Picture Message











Drafts

	Draft Text Message
	Draft Picture Message


2. New Picture Message

Allows you to send messages with Text, Image and Audio attachments.

1. Press , , .
2. Enter the recipient's address, or press Right Soft Key  **Options** to search recent contacts.



3. Use  to access the text fields.
4. Type your message.
5. With the **Image** field highlighted, press Left Soft Key  **Add**, highlight an option, and press  to select:
 - Image/ Take Photo**
6. Use  to highlight a file, then press Left Soft Key  **Set**.
 - 7. With the **Audio** field highlighted, press Left Soft Key  **Add** to enter My Sounds and choose one of the following options:
 - Press Left Soft Key  **Voice** to record new audio.
 - Press  **Play** to play the highlighted file.
 - Press Right Soft Key  **Set** to attach the sound file.
 - 8. Use Right Soft Key  **Options** to customize the message fields. The options (below) are available:
 - * Editing the To: field
Contacts/ Calls History/ Recent Messages/ Groups/ Cancel
 - * Editing the Subject field
Preview/ Add/ Go to/ Save As/ Priority Level/ Delivery Notice/ Remove/ Cancel
 - * Editing the Text field
Preview/ Add/ Go to/ Save As/ Priority Level/ Delivery Notice/ Remove/ Cancel

Messaging

- * Editing the Image
Preview/ Add Slide/ Go to/
Save As Draft/ Priority Level/
Delivery Notice/ Remove/
Cancel
 - * Editing the Audio
Preview/ Add Slide/ Go to/
Save As Draft/ Priority Level/
Delivery Notice/ Remove/
Cancel
9. Press  **Send** to send.

3. Inbox

The phone can alert you in several ways when you receive a new message, including:








- Displaying a notification message on the screen.
- Displaying the message icon  /  on the status bar (It blinks when the message is urgent).

- Ringing and/or Vibrating (depending on the Volume settings).

Received messages are displayed from newest to oldest.

Viewing Your Inbox

Up to 700 received messages (500 SMS, 100 MMS and 100 MMS Notification Messages) can be stored in the Inbox.

1. Press , , .
2. Use  to highlight an inbox message.
3. Press Left Soft Key  **Reply** to reply,  **View** to view the message from the sender, or Right Soft Key  **Options** to access additional options.

While viewing a message, the options available are:

For text messages:

Delete/ Reply as Picture Message*/ Forward/ Save Contract/ Save To Templates/ Extract Address/ Go To URL/ Lock/ Message Info

For picture messages:








Play Again/ Delete/ Reply as Picture Message*/ Forward/ Save Contract/ Save Media/ Lock/ Go To URL/ Extract Address/ Message Info

* If the Reply Setting (Menu > Messaging > Settings > All Messages > Reply Settings) is set to Text Message Only.

4. Outbox

Up to 100 sent messages(50 SMS + 50 MMS) can be stored in the Outbox folder. View the

contents of sent messages and verify whether the transmission was successful or not (if verification is supported by network).

1. Press , , .
2. Use  to highlight a message, then press .
3. While viewing the selected message, press Left Soft Key  **Resend** to resend, or press Right Soft Key  **Options**. Options vary depending on the type of message:

Delete Deletes the selected message.

Forward Forwards the message to other destination address(es).

Messaging

Save Contact Add New Contact/ Update Existing






Lock/Unlock Locks or unlocks the selected message.

Message Info Shows the message's Type, Priority, Status, and more.

Delete Multiple Selective/ All

5. Drafts

Displays saved draft messages.

1. Press , , .
2. Use  to highlight a Draft/Saved message. Press Right Soft Key  **Options** for the following options:




Delete Deletes the selected message from the Drafts.

Save Contact Add New Contact/ Update Existing

Lock/Unlock Locks a message so that it is not erased if the Delete Drafts or Delete All feature is used.

Delete Multiple Selective/ All

-Or-

2. Press  **Edit**.
3. Press Right Soft Key  **Options** to see the options. If viewing an SMS, the following options are available:
Insert/ Save As/ Priority Level/ Callback Number/ Delivery Receipt/ Cancel
4. Press  **Send** to send the edited message.

6. Voicemail

Allows you to hear new voice messages recorded in your voice mail box. Your phone will notify you when you receive a new voice message.

Checking Your Voicemail Box

1. Press , , .
2. Choose from the following options:
 - Press Left Soft Key **Clear** to clear the voicemail counter.
 - Press to listen to the message(s).
 - Press Right Soft Key **Exit** to return to the Messaging menu.

7. Email

Allows you to send an email via Mobile Web. Mobile Email is an application downloadable from the Messaging Menu. Don't miss an important email. Thanks to Mobile Email, you can get your emails on your phone, while you're on the go. Mobile Email works with many providers,

including Yahoo!, AOL, Verizon.net and more.

1. Press , , .
2. An **@metro** session will begin. Follow the steps to download the **mail@metro** application.
3. Highlight email provider and press .
4. Login or enter your email address and password.

8. IM

Allows you to send and receive Instant Messages.

1. Press , , .
2. An **@metro** session will begin. Follow the steps to download the IM application.
3. Follow the instruction to log into your account.

Messaging

9. Web Message

1. Press , , .
2. Select **Web Message**.

0. Templates

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

1. Press , , .
2. Press Left Soft Key **New** to create a new template.
3. Enter text and press **Save** to save the template.
4. Use to highlight a template and press Right Soft Key **Options**, then highlight an option and press to select:

Edit/Delete

*. Settings

Allows you to configure settings for Messaging:

1. Press , , .
2. Use to highlight **All Messages/ Text Message/ Picture Message/ Edit Voicemail Number** then press .
3. Use to highlight one of the settings and press to select it.

Messaging Settings Sub-Menu Descriptions

*.1 All Messages

1. **Reply Setting (Text Message Only/ Selection)**

With **Text Message Only** on, replies to messages will automatically start as text

messages. And with **Selection** on, you will have the choice to reply with a Text or Picture message when you reply to a message.

2. Auto Save (Auto Save/ Prompt/ Do Not Save)

With this feature on, messages are automatically saved in the Outbox folder when transmitted.

3. Auto Delete (On/ Off)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

4. Entry Mode

Allows you to select the default input method between T9Word, Abc and 123.

5. Signature (On/ Off/ Edit)

Allows you to make/edit a signature to automatically

send with your messages.

*.2 Text Message

1. Auto View (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

2. Delivery Receipt (On/ Off)

If the recipient's network is compatible, you can receive a delivery receipt when you send a text message.

3. Callback Number (On/ Off/ Edit)

With this feature on, you can input the callback number that will be automatically included when you send a message.

Messaging

*.3 Picture Message

1. Auto Receive (On/ Off)








With this set to On, Multimedia content will be automatically downloaded when a new picture message is received.

*.4 Edit Voicemail Number

Allows you to manually enter the access number for your Voicemail Service. This feature should only be used when a VMS (Voicemail Service) access number is not provided from the network.

#. Delete All

Allows you to erase the messages stored in your Inbox, Outbox, or Drafts message folders. You can also erase all messages at the same time.

1. Press , , .
2. Use  to highlight **Delete Inbox/ Delete Outbox/ Delete Drafts/ Delete All Messages** then press .
3. Use  to highlight **Yes/ No** and press .

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

Note

When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).



1. New Contact

Allows you to add a new contact to your Contact List.

Note





Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry through the Contact List.

1. Press , , .


2. Enter the name, then press .
3. Highlight the field you wish to store contact information in.
4. Enter the phone number or e-mail address.
5. When you are finished entering the desired contact information, press  Save to save the entry into your Contact List.

2. Contact List



Allows you to view your Contact List.

1. Press , , .
2. Choose from the following options:
 - Press  to scroll through your Contacts alphabetically.

Contacts

- Press Right Soft Key  **Options** to select one of the following:

**Send Message/ Delete/
Edit/ Delete Multiple/
Send via Bluetooth/
Set(Remove) Speed Dial**






- Press  **View** to view the contact's information.
- Press Left Soft Key  **New** to add a new contact.

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a group.




1. Press  ,  ,  .

2. Choose from the following options:

- Use  to highlight a group, then press  **View** to view the contacts in the selected group.
- Press Left Soft Key  **New** to add a new group.
- Use  to highlight a group, then press Right Soft Key  **Options** to choose from the following options:
**Delete/ Send Message/
Rename Group/
Group Ringtone/ Delete
All**

4. Metro411

Get directory assistance information quickly and easily with one of these MetroPCS Directory Assistance Services.

1. Press , , .
2. Follow on-screen instructions to download and access **Metro411** on your phone.
3. Follow the on-screen menu to use Metro411.









 
5. My vCard

Allows you to edit your vCard, which you can then send to others via Bluetooth.

1. Press , , .

6. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.






1. Press , , .
 2. Use  to highlight the desired Speed Dial location (or enter the Speed Dial digits with the keypad) and press  **Assign**.
 3. Use  to highlight the Contact then press .
 4. Use  to highlight the number (if applicable), then press .
- A confirmation message is displayed.


Multimedia

Multimedia

View, take, and trade your digital pictures, or recorded audio files right from your wireless phone.

1. Take Photo

1. Press , , .
2. Press  to access the following camera options:
 - **Brightness**
 - **Resolution** 1280X960/
640X480/ 320X240
 - **Capture**
 - **Zoom**
 - **Multishot** Off/ 3 shots/
6 shots(Not available on
1280X960 resolution.)
3. Press the Left Soft Key  **Gallery** to access **My Images** or press the Right Soft Key

 **Options** for the following options:

- **Options Tab**

Quality Fine/ Normal/
Economy

Color Effects Color/ Sepia/
Mono/ Negative

White Balance Auto/ Sunny/
Cloudy/ Tungsten /Fluorescent

Night Mode On/ Off

Self Timer Off/ 3 Seconds/
5 Seconds/ 10 Seconds

Frame On/ Off

- **Settings Tab**


Memory Storage Phone/
Card

Shutter Sound None/
Sound 1/ Sound 2/ Sound 3/
Say Cheese

Auto Save On/ Off

Send Reminder On/ Off

Reset Yes/ No

4. Take a picture by pressing  **Take**.
5. Select **Send** or **View** after the picture is taken. **Send** will open a new Picture Message and **View** will offer the following options:
 - **Save**
 - **Gallery**
 - **Send** to send by Picture Message or via Bluetooth.
 - **Set As** to set as the Wallpaper, as the Lock Screen or as a Picture ID.
 - **Delete**

Tip

The displayed number directly below the set resolution is the estimated number of pictures that can be taken with the current camera settings.

The maximum number of pictures you can take on your phone may vary depending on the types, resolution or all other factors that affect your picture size. Thus, this number will change along with your settings.








 
The maximum display number is 1000. If your microSD card can store more than that, the display number will not decrease until the remaining number of pictures that can be taken reaches 1000.

This number depends on the Save Options settings in the Memory menu.

Multimedia








2. Record Voice

Allows you to add, listen to, and erase short verbal reminders.

1. Press , , .
2. Press  **Record** to record a new voice memo.
3. Talk into the microphone, then press  **Stop**. The default memo title is the date and time of recording.
4. Once recording has stopped, press the Left Soft Key  **Save** to save the file, press  **Send** to send in a Picture Message, or press Right Soft Key  **Options** to access the following:
Set As/ Rename/ Delete

3. Images

Allows you to view saved images and to select images to customize your phone's Main Screen, or Picture ID.

1. Press , , .
2. Select **My Images/ Default** then press .
3. Highlight the image you want to display.
 - Press Right Soft Key  **Options** for available options. If you select **Edit**, go to page 53 for the available **Edit** options.
 - Press  **View** to view the selected image.
 - Press Left Soft Key  **Send** to send the selected image to somebody else.

Edit Options

Zoom Allows you to zoom in/out of the image. Please note, it does not save the resulting image.

Rotate Rotates an image in steps of 90 degrees.

Flip Flips an image horizontally or vertically.

Enhancement Automatically enhances an image by enhancing white balance, contrast and local boost.

Brightening Brightens the image.









White Balancing Performs an automatic white balance adjustment for the image.

Local Intensity Boost This effect enhances images taken in poor light environments. The effect is especially useful when taking photos in direct




light or for enhancing details in dark images.

4. Audios

Allows you to access saved sound clips or create new ones on your phone.





1. Press , , .
2. Press Left Soft Key  **Voice** to record an audio clip.
 - Press Left Soft Key  **Audios** to return to the My Audios list.
3. Press  **Record** to begin recording.
4. While recording, press Left Soft Key  **Pause** to pause, or  **Stop** to stop recording.



Multimedia

5. When you are finished recording, press Left Soft Key  **Save** to save the audio clip,  **Send** to send the audio clip to somebody else, or Right Soft Key  **Options** to access additional options:

Set As/ Rename/ Delete

-Or-

2. Use  to highlight **My Audios/ Default** and press .
3. Use  to highlight the audio clip.
 - For files in the **My Audios** folder (only), press Left Soft Key  **Send** to send the selected audio clip to somebody else.

- Press  **Play** to play the selected audio clip.
- Press Right Soft Key  **Options** to access the following options:

Options for audio files in My Audios :

Set as/ File Filter/
Record Voice/ Delete/
Rename/ Move/ Copy/
Lock/ Unlock/ File Info/ Sort
By

Options for audio files in
Default:

Set as

Music





Allows you to access songs stored in your memory card. For access to this feature, there should be stored music in your memory card. Music can be transferred to your phone from your PC. To transfer music, please set USB Mass Storage to On (see page 80).

Note







The microSD™ card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it. Do not remove a microSD™ card while files are being accessed or transferred. It will result in loss or damage of data. Supported music format: MP3.

1. Last Played Songs (Now Playing)

Allows you to resume the song which was last played. If music is playing in the background, **Now Playing** is shown as the option.

1. Press , , .
2. Select the music file to play with .

2. All Songs

1. Press , , .
2. Use  to highlight a music file and press  **Play** to play or the Right Soft Key  **Options** for the following options:

Delete/ Add To Playlist/
Delete Multiple(Selective/
All)/ Song Info

Music

or (when the song that is playing is highlighted):

Now Playing/ Add To Playlist/ Rating/ Song Info/ Settings

3. My Playlists

Allows you to create and listen to Playlists.

1. Press , , .
2. Highlight **New Playlist** and press to add a new playlist.
3. Enter the playlist name and press **Save**. Press **Yes** to add new songs.
4. Press **Select** to choose songs to add and press Left Soft Key **Done**.

5. Press Right Soft Key **Options** for the playlist options:

Delete/ Rename/ Delete Multiple/ Import M3U File/ Export M3U File

Note

Songs rated at 4-Stars, or higher, will be automatically added to the **Top Rated Songs** playlist.

4. Artists






Allows you to view and listen to your music by Artist.

1. Press , , .
2. Use to highlight the artist and press **View** to view the songs in your collection by that Artist.

Music/ @metro App Store






5. Albums

Allows you to view and listen to your music by Album.

1. Press , , .
2. Use  to highlight the Album and press  **View** to view the songs from that Album.



6. Genres

Allows you to view and listen to your music by Genre.

1. Press , , .
2. Use  to highlight the Genre and press  **View** to view the songs in your collection from that Genre.

@metro App Store

Allows you to download new applications and games from the @metro App Store and to access your applications saved in **my apps**.

1. Press , .
2. Once @metro has loaded, go to **Browse** to see the application catalog.
3. Choose the application or game you want to download, then follow the on-screen instructions to download it.
4. You can start using the application once it downloads completely.

MetroWEB/ Call History

MetroWEB

The MetroWeb browser allows you to view Internet content. Access and potential airtime charges for this web access are dependent on your service provider. For specific information on Web access through your phone, contact your service provider.

1. Press , .

Call History

The Recent Calls menu has lists of phone numbers and/or Contact entries for calls you missed, received or dialed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Missed Calls

Allows you to view the list of missed calls, up to 50 entries.

1. Press , , .
2. Use  to highlight an entry.

2. Received Calls

Allows you to view the list of incoming calls; up to 50 entries.

1. Press , , .

2. Use  to highlight an entry.

3. Dialed Calls

Allows you to view the list of outgoing calls; up to 50 entries.

1. Press , , .

2. Use  to highlight an entry.

4. All Calls

Allows you to view the list of missed, received and dialed calls; up to 150 entries.



1. Press , , .

2. Use  to highlight an entry.

5. Call Timer

Allows you to view the duration of selected calls, by type. It also provides a messaging counter.

1. Press , , .



2. Use  to highlight a call type, then press .

Last Call/ Dialed Calls/
Received Calls/ Home Calls/
Roam Calls/ All Calls/
Lifetime Calls/ Lifetime Sent
Messages/ Lifetime Received
Messages/ Lifetime Total
Messages

6. Data Counter

Allows you to view the amount of Received and Sent data.

1. Press , , .

2. Use  to highlight a data call type, then press .







Received Data/ Sent Data/
All Data/ Lifetime Data

My Menu/ Bluetooth

My Menu

Allows you quick access to your favorite menus or functions. A maximum of 12 items can be stored in My Menu.

1. Launch

1. Press , .
2. Highlight the location for your menu (or function) by using , then press .
3. Highlight the menu (or function) you wish to add to My Menu by using , then press  **Set**.

Bluetooth

The **MN240** is compatible with devices that support the Headset, Hands-Free, Object Push, File Transfer, and Phonebook Access Bluetooth profiles. You may create and store several pairings within the **MN240**. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B016132

Note

Read user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

Note

The Bluetooth® features of this handset may not be compatible with all devices which are Bluetooth® enabled; your service provider or handset manufacturer cannot be responsible for compatibility with devices not sold by the service provider or handset manufacturer.




1. Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

For pairing new Bluetooth® device

1. Press , , .

Follow the Bluetooth® accessory instructions to set the target device to pairing mode.

2. Press the Left Soft Key  **Search**.
3. If Bluetooth® power is set to off, you will be prompted to turn power on. Select **Yes** and press .
4. Select **New Search/ Last Search**. The device will appear in the Add New Device list once it has been located. Highlight the device and press  **Pair**.
5. Depending on the type device:
 - The phone will Autopair.
 - You will need to confirm matching codes.
 - You will need to enter a passkey. Consult the Bluetooth® accessory instructions for the correct





Bluetooth

passkey (typically “0000” - 4 zeroes), enter the passkey and press **OK**.

- The handset may prompt you for your connection preferences. Highlight **Always Ask** or **Always Connect** and press **OK**.
- Once connected, you will see the device listed in the Paired Devices menu.

2. Power

Allows you to set Bluetooth® power to On/Off.





- Press , , .
- Use  to select a setting, then press **OK**.
On/ Off

Note

By default, your device's Bluetooth® functionality is turned off.

3. My Visibility

Allows you to set the visibility of your Bluetooth® function.

- Press , , .
- Use  to select a setting, then press **OK**.

Options are:

On/ Off

Note

If you turn on My Visibility, your device is able to be discovered by other in-range Bluetooth® devices (for one minute).

4. My Bluetooth Info

Allows you to view information regarding the Bluetooth® functionality.





 

- Press , , .



My Schedule



Your My Schedule tools include Alarm Clock, Calendar, Notepad.

1. Alarm Clock

Allows you to set up to five alarms. At the alarm time, any set alarm can sound (depending on your Master Volume settings) the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Press , , .
2. Use  to highlight the alarm you wish to set, then press  to select it.
3. Press Left Soft Key  Set to set an alarm time.

4. Use  to highlight Repeat (recurrence setting) and use  to choose a setting.

5. Use  to highlight Ringtone, press Left Soft Key  Set and browse for a ringtone.








6. Press  Save.

2. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone can (depending on your Master Volume settings) alert you with a reminder.






1. Press , , .

My Schedule



2. Use  to highlight a day.
 -  Moves to the previous day.
 -  Moves to the next day.
 -  Moves to the previous week.
 -  Moves to the next week.
3. Press Left Soft Key  **New**.
4. Enter your schedule information, including a:
 - Subject
 - Start/End Time
 - Reminder
 - Repeat
 - Until
 - Ringtone
5. Press  **Save**.


3. Notepad

Allows you to add, read, edit, and erase notes.

1. Press , , .
2. Press Left Soft Key  **New** to write a new note.
3. Type the note, then press  **Save**. A confirmation message displays briefly, then displays your list of saved notes.

Editing a Notepad Entry

1. Access Notepad and highlight a saved note.
 2. Press  **View**, then press the Left Soft Key  **Edit**.
- Or -

For other available options, press Right Soft Key  **Options**.

Delete/ Edit/ Delete All

Tools

Your phone's tools include Voice Command, Ez Tip Calculator, Calculator, World Clock, Stopwatch and Unit Converter.


1. Voice Command

Allows you to use voice commands to use your phone, including to make phone calls quickly and easily by voice. This menu includes useful features for those who may be driving or blind. It also announces time information by voice and allows you to check missed calls, messages and voicemails.

1.1 Start Command

1. Press , , , .


- Or -

While in Standby mode, press and hold the Voice Command Key .

1.1.1 Call <Name> or <Number>

1. Press , , , , .

- Or -


From Standby mode, press and hold  and say "Call".

2. Say the Contact name (and phone type, if applicable) or number.

1.1.2 Voicemail

1. Press , , , , .

- Or -

From Standby mode, press and hold  and say "Voicemail".

Tools

1.1.3 Missed Calls

Allows you to check missed calls.

1. Press , , , , .

- Or -

From Standby mode, press and hold and say "Missed Calls".

2. The handset will prompt you to dial each number. Say **Yes** or **No** to proceed.

1.1.4 Messages

1. Press , , , , .

- Or -

From Standby mode, press and hold and say "Messages".

1.1.5 Time & Date

1. Press , , , , .

- Or -

From Standby mode, press and hold and say "Time & Date".

1.1.6 Help

Allows you to check the information of Voice Control.





1. Press , , , , .

- Or -

From Standby mode, press and hold and say "Help".

1.2 Command Mode

Allows you to set command mode to Normal or Speed (The Speed setting allows you to access and use the Voice Command functions more quickly with a faster non-verbal prompt).

1. Press , , , .
2. Select options.
Normal/ Speed

1.3 Announce Alert





Allows you to customize Announce Alert. Announce Alert lets your hear more information about an incoming call or message instead of, or along with, your ringtone.

1. Press , , , .
2. Select options.
1 Match/ 4 Matches

2. Select options.
Disable/ Announce/
Announce + Ring





1.4 Train Word

Allows your to train words for improved Voice Command responses.

1. Press , , , .
2. Select options.
Voice Command/ Answer/
Digit Dial

1.5 Best Match

Allows you to choose whether the phone displays the 4 closest matches, or only the closest match, when using the "Call <Name> or <Number>" function.

1. Press , , , .
2. Select options.
1 Match/ 4 Matches

Tools

2. Calculator

Allows you to perform simple mathematical calculations.

1. Press , , .
2. Enter data.
 - Use keypad to enter numbers.
 - Use to enter decimals.
 - Use to enter parentheses.
 - Press Left Soft Key **Reset** to erase the entry.
 - Press Right Soft Key **Options** for additional calculating options.
 - Use the Navigation Keys to enter functions.
3. Press to complete equation.

3. Ez Tip Calculator

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.



1. Press , , .

4. World Clock

Allows you to determine the current time in another time zone or city.








1. Press , , .
2. Press Left Soft Key **New** to open the map, press to zoom in.
3. Press Left Soft Key **City** to see the cities located in the highlighted area.

- Or -

3. Press Right Soft Key  **Search** to search through all available cities.
4. Press  **Save** to save the settings.





5. Stopwatch

Allows you to use your phone as a Stopwatch.

1. Press , , .
2. Press  **Start** to start, and press  **Stop** to stop.
 - You can use the Lap function by pressing Left Soft Key  **Lap** to record up to 20 laps and lap times.
3. Press Right Soft Key  **Reset** to reset.

6. Unit Converter

Allows you to convert units of Currency, Area, Length, Mass, Temperature, Volume and Velocity.

1. Press , , .
2. Select a unit type.
3. Use  to highlight the known unit type, then enter the unit amount. The conversions will be made automatically.

Settings







Settings

1. Sound

Options to customize your phone's sounds:






1.1 Ringtones

Allows you to assign ringtones for incoming calls.

1. Press , , , .
2. Select **All Calls/ Caller ID/ No Caller ID/ Restricted Calls/ Roaming.**
3. Select **My Sound** or **Default.**
4. Use  to highlight a ringer, and press **OK** **Play** to listen to it. Press Left Soft Key  **Set** to set the ringtone to your phone.





1.2 Volume



Allows you to set various volume settings.

1. Press , , , .
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker.**
3. Use  to adjust the volume of the ringer, then press **OK** to save the setting.

1.3 Message Alerts




Allows you to select the alert tone for new message notifications and set the frequency of the Message Reminder.

1. Press , , , .
2. Select **Text Message/ Picture Message/ Voicemail/ All Messages/ Message Reminder.**


- Use  to highlight a ringer or setting, then press .

1.4 Alert Type

Allows you to select the alert types.

- Press , , , .
- Use  to highlight the alert you wish to edit.

**Call Alert/ Message Alert/
Schedule Alert/ Alarm Alert/
E911 Alert**

- Use  to scroll through the alert types.

**Ring Only/ Vibrate Only/
Ring & Vibrate**

- Press  **Save** to save.

1.5 Service Alerts

Allows you to set any the Service Alert preferences.

- Press , , , .
- Select an alert type:

1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.5.2 Call Connect

Alerts you when the call is connected.

1.5.3 Back to Top

Alerts you when you scroll through the end of a menu list.



1.5.4 Low Battery

Alerts you when the battery charge level is low.

Settings

1.5.5 Roam Alert

Alerts you when a call is in a Roaming area.

- Use  to highlight an option, then press .

Options are:







On/ Off

Options for Low Battery are:

Announce/ Tone







1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

- Press , , , .
- Use  to set to **On/ Off**, then press .

1.7 Slide Tone




Allows you to set a Slide tone that will play when you slide your phone open or closed.






- Press , , , .
- Use  to set to **On/ Off**, then press .

2. Display

Options to customize your phone's display screen:






2.1 Shortcuts

Allows you to enable/disable the popup shortcut from the standby screen. When set to On, you can access the metroPCS Apps by pressing . When set to Off,  accesses MetroWEB and  accesses the @metro.


- Press , , , .
- Select **On/ Off**, then press .

2.2 Wallpaper


Allows you to choose the kind of background to be displayed on the phone.

1. Press , , , .
2. Highlight **Main Screen/ Lock Screen**, then press .

2.1.1 Main Screen







Highlight an image from **My Images/ Default**, and press Left Soft Key  **Set** to set it as the main screen wallpaper.

2.1.2 Lock Screen

Highlight an image from **My Images/ Default**, and press Left Soft Key  **Set** to set it as the Lock screen wallpaper.






2.3 Banner



Allows you to enter a string of characters which display on the LCD screen.

1. Press , , , .
2. Use  to select **On/ Off**.
3. Scroll down to the text window and enter your banner text, then press .

2.4 Backlight

Allows you to set the duration for illuminating the backlight.

1. Press , , , .
2. Highlight a submenu, then press .

Display/ Keypad
3. Use  to highlight a setting, then press .

Settings







2.5 Menu Style

Allows you to view the Menu in either Icon or List view.

1. Press , , , .
2. Highlight Icon or List and press .

2.6 Languages (Idiomas)



Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

1. Press , , , .
2. Use  to highlight **English** or **Español**, then press .

2.7 Clocks & Calendar

Allows you to select the type of clocks displayed on the main LCD.






1. Press , , , .

2. Use  to choose a setting and press .



Normal Clock/ Analog
Clock/ Large Analog Clock/
Digital 12 Clock/
Large Digital 12 Clock/
Digital 24 Clock/
Large Digital 24 Clock/
Dual Clock/ Calendar/ Off

2.8 Font Settings

Allows you to select the type of font displayed on the phone text and dialpad.

1. Press , , , .
2. Highlight a sub-menu and press .

Font Type/ Dial Font Style/
Dial Font Size

3. Use  to highlight an option, then press .

Options for Font Type

LG Gothic/ LG Greentea/ LG Mint/ LG Round/ LG Secret

Options for Dial Font Style

Robot/ Green Lawn/ Painter/ Basic

Options for Dial Font Size






Normal/ Large

2.9 Color Schemes

Allows you to choose the color scheme of the phone menus.

1. Press , , , .
2. Highlight **Black/ White** then press .

2.0 Word Prediction




1. Press , , , .
2. Highlight **On/ Off** then press .

3. Security

The Security menu allows you to secure the phone electronically.




3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code by setting a New Lock code within the Security menu.

1. Press , , .
2. Enter the four-digit lock code.

Settings

The default lock code is commonly the last 4 digits of your phone number.

3. Press  **Lock Phone**.
4. Use  to highlight an option, then press .


Unlock The phone remains unlocked by default, until it is locked manually.

Lock Locks the phone. When locked, you can receive incoming calls and make calls only to Emergency Numbers (Menu > Settings > Security > Emergency Numbers).

On Power Up The phone is locked when it is turned on.








3.2 Auto Device Lock

1. Press , , .

2. Enter the four-digit lock code.
3. Press  **Auto Device Lock**.






3.3 Restrictions

Allows you to set restrictions for Calls, Messaging, Camera and @metro.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Restrictions**.
4. Use  to highlight **Incoming Calls, Outgoing Calls, Incoming Messages, Outgoing Messages, Camera, or Data**, then press .
5. Choose the type of restriction and press  to set.
6. Enter the four-digit lock code.





3.4 Emergency Numbers



Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Emergency Numbers**.
4. Highlight the desired number then press  to edit the emergency numbers.

3.5 Change Lock Code

Allows you to enter a new four-digit lock code.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Change Lock Code**.

4. Use  to highlight a setting, then press .

Phone Only Allows you to change the lock code used to lock/unlock the phone.

Call & Applications Allows you to change the Service Lock Code that is used to access the Restrictions menu (see page 76).

5. Enter a new 4-digit lock code. If you're changing the Call & Applications Lock Code, you will need to enter the current Service Lock Code first.
6. For confirmation, the phone will ask you to enter the new lock code again.

Settings

3.6 Reset Default

Allows you to reset your phone to the factory default settings.

1. Press , , .
2. Enter the four-digit lock code.
3. Press **Reset Default**.
4. Read the displayed message and press to continue.
5. A message will pop up that says “All settings will revert to factory default.” Select: **Revert/ Cancel**
6. Enter your lock code to confirm your selection.

4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

4.1 Answer Options

Allows you to determine how to answer an incoming call.

1. Press , , , .
2. Use to highlight a setting, then press .

Slide Open/ SEND Key Only/ Any Key/ Auto with Handsfree

4.2 End Call Options

Allows you to determine how to end a call.

1. Press , , , .
2. Use to highlight a setting, then press .

Slide Down/ End Key Only

4.3 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press , , , .
2. Use to highlight a setting, then press .

Off/ Every 10 Seconds/
Every 30 Seconds/ Every 60
Seconds

4.4 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press , , , .

2. Use to highlight a setting, then press .

On/ Off

4.5 Airplane Mode

Turns off the wireless communications and allows you to use features on your phone that do not require wireless communications.








1. Press , , , .
2. Read the displayed message and press to continue.
3. Use to highlight a setting, then press .

On/ Off

Settings

4.6 TTY Mode






Allows you to attach a TTY (Teletype writer) device, enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , , , .
2. Read the displayed message and press  to continue.
3. Use  to highlight a setting, then press .

TTY Full/ TTY + Talk/ TTY +
Hear/ TTY Off

5. USB Mass Storage

If a memory card is installed in your phone, you can connect the phone to a PC and use the phone as a Mass Storage device. If set to Off, your PC will not recognize the phone as a USB Mass Storage device.

1. Press , , .
2. Use  to highlight a setting, then press .

On/ Off








6. System

The System menu allows you to designate specific system network settings.

6.1 Network








6.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press , , , , .
2. Use  to highlight **MetroPCS Only/ Automatic** then press .

6.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , , , , .
2. Use  to highlight **NAM1** or **NAM2**, then press .

6.1.3 Serving System







Identifies the serving system Channel Number and SID Number. This information should only be used for technical support.

1. Press , , , , .

Settings

6.2 Location

Allows you to turn On or Off the Location function on your phone. If set to On, location-based services are able to access your GPS (Global Positioning System) satellite-assisted location information.

1. Press , , , .
2. Use  to highlight a setting, then press .





Location On/ E911 Only

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.






7. Memory

Allows you to check the memory status of your phone and to set the save options.

1. Press , , .
2. Highlight **Save Options/ Phone Memory/ Card Memory**, and press .

8. Phone Info

The Phone Info menu provides you with specific information about your handset.

1. Press , , .
2. Use  to highlight a submenu and press .

**My Number/ ESN/MEID/
Icon Glossary/ Version**

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments

Safety

could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in

the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;

- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Safety

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If

in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! *Violation of the instructions may cause minor or serious damage to the product.*

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose

Safety

to fire, explosion or other hazard.

- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.

- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Safety

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, and pictures could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Safety

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health

problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

Safety

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has

urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal

level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that

limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS”

Safety

phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user's head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure.

Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in

these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval

Safety

between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of

exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in

government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal

health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on

Safety

your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is

deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we

do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not

demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Safety

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped

develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic

Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones

(<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.hpa.org.uk/radiation/>)

Safety

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.

4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car.

Safety

Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one

appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were

Safety

developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are

performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations

may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.22 W/kg and when worn on the body, as described in this user's manual, is 0.71 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of

Safety

<http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be

compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

 
 
The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Safety

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

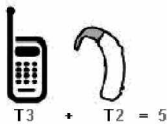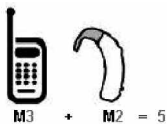

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the

American National Standards Institute (ANSI) C63.19 standard.

To enter that the Hearing Aid Compatibility rating for your phone is maintained, secondary

transmitters such as Bluetooth and WLAN components must be disabled during a call. See Page 52 for instructions to disable these components.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/hearingaid/>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Battery Charger

The battery charger allows you to charge your phone.



Battery



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



USB Cable



Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service

Limited Warranty Statement

Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise,

including, but not limited to any implied warranty of marketability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

“LG will, at its sole option, either repair, replace or refund the

purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

Limited Warranty Statement

LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

1

10 Driver Safety Tips
104

A

Accessories 114
Airplane Mode 79
Alarm Clock 63
Albums 57
Alert Type 71
All Messages 44
All Songs 55
Announce Alert 67
Answer Options 78
Artists 56
Audios 53
Auto Device Lock 76
Auto Retry 79

B

Back to Top 71
Backlight 73
Banner 73
Battery Charge Level
24

Best Match 67
Bluetooth 60

C

Calculator 68
Calendar 63
Call <Name> or
<Number> 65
Call Connect 71
Call Settings 78
Call Waiting 28
Caller ID 28
Change Lock Code 77
Charging the Battery
23
Clocks & Calendar 74
Color Schemes 75
Command Mode 67
Consumer Information
on SAR 107
Contact List 47
Contacts 47
Contacts in Your
Phone's Memory 31
Contacts Options 33

Correcting Dialing
Mistakes 27

D

Delete All 46
Display 72
Drafts 42

E

Edit Voicemail Number
46
Email 43
Emergency Numbers
77
End Call Options 78
Entering and Editing
Information 30
Entering Text With the
QWERTY Keyboard 18
Ez Tip Calculator 68

F

FCC Hearing-Aid
Compatibility (HAC)
Regulations for
Wireless Devices 110

Index

FDA Consumer Update 93
Font Settings 74

G

Genres 57
Getting Started with Your Phone 22
Groups 48

H

Help 66
How to Install Your microSD™ Card 23
How to Remove Your microSD™ Card 24

I

IM 43
Images 52
Important Safety Precautions 1
Inbox 40
Index 119

L

Languages (Idiomas) 74
Last Played Songs (Now Playing) 55
Launch 60
Limited Warranty Statement 115
Location 82
Lock Phone 75
Lock Screen 73
Low Battery 71

M

Main Screen 73
Making a Call From Your Phone's Memory 34
Making Calls 26
Memory 82
Menu Style 74
Menus Overview 19
Message Alerts 70
Messages 66
Messaging 36

Metro411 49
Minute Beep 71
Missed Calls 66
Multimedia 50
Music 55
Mute Function 28
My Bluetooth Info 62
My Menu 60
My Playlists 56
My Schedule 63
My vCard 49
My Visibility 62

N

Network 81
New Contact 47
New Picture Message 38
New Text Message 36
Notepad 64

O

One-Touch Dial 79
Outbox 41

P

Paired Devices 61
Phone Info 82
Phone Numbers With
Pauses 31
Phone Overview 16
Picture Message 46
Power 62
Power On/Off Tone 72

Q

Quick Access to
Convenient Features
28
Quick Volume
Adjustments 28

R

Receiving Calls 27
Record Voice 52
Redialing Calls 27
Reset Default 78
Restrictions 76
Ringtones 70
Roam Alert 72

S

Safety 83
Safety Information 87
Screen Icons 26
Searching Your Phone's
Memory 33
Security 75
Service Alerts 71
Serving System 81
Set NAM 81
Settings 44, 70
Shortcuts 72
Signal Strength 25
Slide Tone 72
Sound 70
Speed Dialing 29
Speed Dials 49
Start Command 65
Stopwatch 69
System 81
System Select 81

T

Table of Contents 4
Take Photo 50

Technical Details 10
Templates 44
Text Input 30
Text Message 45
The Basics of Storing
Contacts Entries 31
The Battery 22
TIA Safety Information
83
Time & Date 66
Tools 65
Train Word 67
TTY Mode 80
Turning the Phone On
and Off 25

U

Unit Converter 69
USB Mass Storage 80
Using Phone Menus
36

Index

V

Voice Command 65
Voicemail 42, 65
Volume 70

W

Wallpaper 73
Warning! Important
safety information 92
Web Message 44
Welcome 9
Word Prediction 75
World Clock 68



Printed in Korea