



LG Mystique



QWERTY Keyboard



Using the External Touch Display



Using the Dedicated Hot Keys



Using the Camera with Flip Closed/Open



Sending a Text Message



www.lgusa.com/mystique





Using the External Touch Display

LG Mystique features a convenient external touch display for easy access to important features.

- With the flip closed, unlock the external touch display by pressing the twice or pressing it once and then pressing and *holding* the Lock icon.
- Touch an icon on the display or press and *drag* the external touch display to the left or right to access the Messaging, Speed Dials, Call History, Music, Calendar, or Multimedia screens.
- 3. Return to the main screen at any time by touching the **Back icon**.





Using the Dedicated Hot Keys

Take advantage of three dedicated hot keys for one-key access to **easy**edge, music, and voice commands.

Access easyedge

- 1. From standby mode and with flip open, press easyedge.
- Select easyedge from the list by pressing (R). From here, you can browse the applications catalog, search by keyword, or learn more about easyedge.

Listen to Music

- 1. With a microSD card containing music already in your phone and the flip open, press **MUSIC**.
- 2. Select **All Songs (2)** and then press **TR** for **Play** to start playing all of the music on your memory card.

Use Voice Commands

- From standby mode and with flip open, press VOICE.
- 2. Press (KK) for Start Command.
- 3. To call a contact, say "Call [contact's name]" or "Call [contact's number]." For example, "Call Ann."







Using the Camera with Flip Closed/Open

Snap photos on the fly with LG Mystique! Take pictures of your friends with the flip closed and self-portraits with the flip open.

Flip Closed

- With the flip closed, unlock the external touch display. (See the "Using the External Touch Display" panel.)
- 2. Press and *hold* **(**) to access the camera viewfinder. You can tap the **Arrow icon** to access settings.
- 3. Press (2) to take the picture. This camera orientation is ideal for taking photos of subjects in front of you.

Flip Open

- 1. From standby mode and with the flip open, press and hold 1.
- The settings menu will disappear after a moment. You
 may then press left or right on the Navigation Key to
 adjust the brightness or up on the Navigation Key to
 bring the settings menu back. You may also press the
 Right Soft Key for Options.
- 3. Press 🕅 to take a photo. This camera orientation is ideal for taking self-portraits.







*Default camera setting of 1600 x 1200 pixels does not support zoom function.

Sending a Text Message

Stay in touch without placing a call with convenient text messaging on LG Mystique.

- 1. From standby mode and with the flip open, press the Left Soft Key for Message.
- 2. Press to start a new message. Enter a phone number or press the **Right Soft Key** for **Options** to insert a number from your contact list.
- 3. Press 🗰 to move to the text field. Enter your message using the QWERTY keyboard, and then press 🐨 for **Send**.







Optional Accessories

Maximize your phone with these cutting-edge accessories at www.lgusa.com/mystique.



© 2010 LG Electronics, Inc. All rights reserved. LG is a registered trademark of LG Electronics, Inc. easyedge[™] is a service mark of U.S. Cellular[®]. The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics MobileComm, U.S.A., Inc. is under license. All other marks are proprietary to their respective owners. All phone images are simulated. Unless otherwise specified herein, all accessories referenced herein are sold separately. Mystique is a trademark of LG Electronics, Inc.