



www.LGUSA.com

UX210

Quick Start Guide



One-Touch Speakerphone




Melody Composer



Voice-Activated Dialing and
Voice Memo Recorder



easyedgeSM Capable

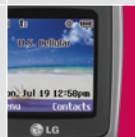

Getting to Know Your Phone



One-Touch Speakerphone

Enjoy the convenience of hands-free conversation with a simple touch of one key.

1. From standby mode, press **up** on the Navigation Key.
2. “**Speaker On**” will appear and remain on the screen.
3. Press **up** on the key again to deactivate.
4. “**Speaker Off**” will appear on the screen.



Melody Composer

Compose your own melodies and create unique ringtones to express your individual style.

1. Press the **Left Soft Key** for **Menu** and select **Media (6)**.
2. Select **Melody Composer (3)**, then **Compose Melody (1)**.
3. Select **Keyboard Mode (1)** or **Score Mode (2)** and press **OK**.
4. Press the **Right Soft Key** and select **Help** to learn how to compose a melody.
5. Use the keypad to compose your melody.
6. Press **OK** to play your melody and the **Right Soft Key** to save.



Note: You have the option to choose from a variety of melody styles, instruments, rhythms and tempos.

Voice-Activated Dialing

You'll appreciate the safety and convenience of placing calls without dialing.

To program voice-activated dialing:

1. Press the **Left Soft Key** for **Menu** and select **Contacts (1)**.
2. Select **Voice Dials (6)**.
3. Press the **Left Soft Key** for **New**, select a contact and press **OK**.
4. Select the desired phone number and press **OK**.
5. Press **OK** to record the voice dial tag by following the phone's prompts.

To make a voice-activated call:

1. From standby mode, press the **Voice Dial Key** on the right side of the phone.
2. Follow the phone's prompts.



Voice Memo Recorder

Keep track of important personal information by recording up to 30 voice memos totaling 4 minutes.

1. From standby mode, press and *hold* the **Voice Memo Key** on the right side of the phone.
2. Start recording after the tone.
3. Press the **Left Soft Key** for **Done** to stop recording.
By default, your message will be listed by date and time.
4. To play the message, highlight the voice memo and press **OK**.
5. Press the **Left Soft Key** to play.



Note: Recorded voice memos are stored in **Tools (7)** under **Voice Memo (3)**.

easyedgeSM Capable

easyedgeSM is your gateway to what you want, when you want it. Get more from your phone, like news, weather, sports, ringtones, and e-mail.

1. Press **right** on the Navigation Key.
2. At the information screen, press to **OK** continue.
3. With the shopping cart highlighted, press **OK** to connect to easyedgeSM.



Optional Accessories

Accessories for productivity, convenience and fashion are available at www.LGUSA.com.



Battery Wall Charger



Extended Li-Ion Battery



USB Data Cable



Mobile Charger



Carrying Case



Vehicle Power Charger

©2006 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated.