

# IMPORTANT SAFETY PRECAUTIONS

Read these instructions. Breaking the rules may be dangerous or illegal.  
Further detailed information is given in this user guide.

**| WARNING! Violation of the instructions may cause serious injury or death.**



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.

3. Never store your phone in temperatures less than -4°F or greater than 122°F.

4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.

7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

# IMPORTANT SAFETY PRECAUTIONS



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



2. Do not hold or let the antenna come in contact with your body during a call.

3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

4. Store the battery out of reach of children.



5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.

8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

# TABLE OF CONTENTS

## Important Safety Precautions 1

## Table of Contents 4

## Welcome 9

## Technical Details 10

FCC RF Exposure Information 11

## Phone Overview 12

## Menus Overview 14

## Getting Started with Your Phone 16

Menu Access 16

The Battery 16

Installing the Battery 16

Removing the Battery 16

Charging the Battery 17

Battery Charge Level 17

Turning the Phone On and Off 17

Turning the Phone On 17

Turning the Phone Off 17

Signal Strength 17

Screen Icons 18

Making Calls 19

Correcting Dialing Mistakes 19

Redialing Calls 19

Receiving Calls 19

## Quick Access to Convenient Features 20

Manner Mode 20

Lock Mode 20

Mute Function 20

Volume Quick Adjustment 20

Call Waiting 21

Caller ID 21

Speed Dialing 21

## Entering and Editing Information 22

Text Input 22

Key Functions 22

Text Input Examples 23

Using Abc (Multi-tap) Text Input 23

Using T9 Mode Text Input 23

Using the NEXT Key (In T9 Mode) 24

Adding Words to the T9 Database 24

## Contacts in Your Phone's Memory 25

The Basics of Storing Contacts Entries 25

Options to Customize Your Contacts 26

Adding or Changing the Group 26

Changing the Call Ringer 26

Changing the Message Ringer 27

Adding or Changing the Memo 27

Adding or Changing the Picture ID 27

Adding Speed Dial	28	Searching by Letter	33	4. Erase Calls	40
Editing Contacts Entries	28	Searching Options	33	5. Call Timer	40
Adding Another Phone Number	28	Making a Call From Your Phone's Memory	34	6. KB Counter	41
From standby mode	28	From Contacts	34	<hr/>	
Through Contacts	28	From Recent Calls (📞 as a hot key)	35	<b>Messages</b>	<b>42</b>
Default Numbers	29	Speed Dialing	35	1. Voice Mail	43
Changing the Default Number	29	Prepending a Stored Number	35	2. New Text Msg	44
Editing Stored Phone Numbers	29			The Basics of Sending a Text Message	44
Editing Stored Names	29	<hr/>		Customizing the Text Message Using Options	44
Editing Customized Options	30	<b>Contacts</b>	<b>36</b>	Using Contacts to Send a Text Message	45
Deleting	30	1. List Contacts	36	Text Options	45
Deleting a Phone Number from a Contact	30	2. New Number	37	Message Icon Reference	46
Deleting a Contact Entry	30	3. New E-mail	37	3. New Photo Msg	46
Additional Ways to Delete a Contact	31	4. Groups	37	4. Inbox	47
Deleting a Speed Dial	31	5. Speed Dials	38	5. Outbox	49
Phone Numbers With Pauses	31	6. My Contact Info	38	6. Saved	50
Storing a Number with Pauses	32	<hr/>		7. Msg Settings	50
Adding a Pause to an Existing Number	32	<b>Recent Calls</b>	<b>39</b>		
Searching Your Phone's Memory	33	1. Dialed Calls	39		
Scrolling Through Your Contacts	33	2. Received Calls	40		
		3. Missed Calls	40		

# TABLE OF CONTENTS

7.1 Auto Save	50	Incoming SpeedTalk <sup>SM</sup> (Barge)	55	<b>Tools</b>	<b>62</b>
7.2 Auto Erase	50	Incoming SpeedTalk <sup>SM</sup> (Alert)	55	1. Schedule	62
7.3 Photo-Auto Receive	50	Incoming SpeedTalk <sup>SM</sup> (Group)	56	2. Alarm Clock	63
7.4 Callback #	50	1. SpeedTalk <sup>SM</sup> Contacts	56	3. Voice Memo	64
7.5 Signature	50	2. New SpeedTalk <sup>SM</sup> Contact	57	4. My Shortcut	64
7.6 Voice Mail #	51	3. New SpeedTalk <sup>SM</sup> Group	57	5. Notepad	64
7.7 Text Auto View	51	4. Recent SpeedTalk <sup>SM</sup>	57	6. Ez Tip Calc	65
7.8 Entry Mode	51	5. SpeedTalk <sup>SM</sup> Settings	57	7. Calculator	65
7.9 Insert Quick-Text	51	5.1 SpeedTalk <sup>SM</sup> On/Off	57	8. World Clock	66
7.0 Text Auto Play (On/ Off)	51	5.2 Speaker On/Off	58		
8. Erase All	51	5.3 SpeedTalk <sup>SM</sup> Alert Tone	58	<b>Settings</b>	<b>67</b>
<b>SpeedTalk<sup>SM</sup></b>	<b>52</b>	<b>easyedge<sup>SM</sup></b>	<b>59</b>	1. Sounds	67
Call from SpeedTalk <sup>SM</sup> Contact List (Barge)	53	1. easyedge	60	1.1 Ringers	67
Call from SpeedTalk <sup>SM</sup> Contact List (Alert)	53	2. Help	60	1.2 Key Tone	67
Call from SpeedTalk <sup>SM</sup> Contact List (Group)	54	<b>Media</b>	<b>61</b>	1.3 Volume	68
Call from Keypad (Barge)	54	1. Images	61	1.4 Message Alerts	68
		2. Sounds	61	1.5 Service Alerts	68
				1.5.1 Service Change	68
				1.5.2 Minute Beep	68

1.5.3 Call Connect	68	3.1 Select System	72	5.8 Airplane Mode	76
1.5.4 Back To Top	68	3.2 Set NAM	72	<b>6. Data Settings</b>	<b>77</b>
1.6 Power On/Off Tone	69	3.3 Auto NAM	72	6.1 PC Connection	77
1.7 DTMF Length	69	3.4 Serving System	72	<b>7. Voice Services</b>	<b>77</b>
<b>2. Display</b>	<b>69</b>	<b>4. Security</b>	<b>73</b>	7.1 Voice Commands	77
2.1 Banner	69	4.1 Lock Phone	73	7.2 Sound Modes	78
2.2 Backlight	69	4.2 Restrict Calls	73	7.3 Announce Alerts	78
2.2.1 LCD	69	4.3 Emergency #s	74	7.4 Best Match	78
2.2.2 Key Light Timer	70	4.4 Change Lock	74	7.5 Train Words	79
2.3 Screens	70	4.5 Erase Contacts	74	7.6 Help	79
2.4 Menu Style	70	4.6 Reset Default	74	<b>8. Location</b>	<b>79</b>
2.5 Clocks	70	<b>5. Call Setup</b>	<b>75</b>	<hr/>	
2.6 Theme Colors	70	5.1 Auto Retry	75	<b>Phone Info</b>	<b>80</b>
2.7 Contrast	71	5.2 Answer Call	75	1. My Phone Number	80
2.8 Fonts	71	5.3 Auto Answer	75	2. S/W Version	80
2.8.1 Calling Digits	71	5.4 One-Touch Dial	75	3. Icon Glossary	80
2.8.2 Text Editor	71	5.5 Voice Privacy	76	4. Shortcut Help	80
2.9 Language	71	5.6 Auto Volume	76		
2.0 Power Saver	72	5.7 TTY Mode	76		
<b>3. System</b>	<b>72</b>				

# TABLE OF CONTENTS

<b>Safety</b>	<b>81</b>	Aircraft	83	FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	97
<b>TIA Safety Information</b>	<b>81</b>	Blasting Areas	83	<b>Accessories</b>	<b>100</b>
Exposure to Radio Frequency Signal	81	Potentially Explosive Atmosphere	84	<b>Limited Warranty Statement</b>	<b>101</b>
Antenna Care	81	For Vehicles Equipped with an		<b>Index</b>	<b>104</b>
Phone Operation	81	Air Bag	84		
Tips on Efficient Operation	82	<b>Safety Information</b>	<b>84</b>		
Driving	82	Charger and Adapter Safety	84		
Electronic Devices	82	Battery Information and Care	84		
Pacemakers	82	Explosion, Shock, and Fire Hazards	85		
Persons with pacemakers:	82	General Notice	85		
Hearing Aids	83	Avoid damage to your hearing	86		
Other Medical Devices	83	<b>FDA Consumer Update</b>	<b>87</b>		
Health Care Facilities	83	<b>10 Driver Safety Tips</b>	<b>94</b>		
Vehicles	83	<b>Consumer Information on</b>			
Posted Facilities	83	<b>SAR</b>	<b>96</b>		

*Some of contents in this user guide maybe different from your phone depending on the software of the phone or your service provider. Features and specifications might be subject to change without prior notice.*

Thank you for choosing the advanced and compact UX390 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA) and Advanced Mobile Phone Service (AMPS). Along with the many advanced features of the CDMA system, such as significantly enhanced voice clarity, this phone offers:

- SpeedTalk<sup>SM</sup> Capability.
- Large, easy-to-read, 9-line backlit LCD with status icons
- Paging, messaging, voice mail, and caller ID.
- 22-key keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Advanced Voice Recognition.
- Animated Wallpaper in Standby Mode.

## Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

## FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

## Technical Details

The UX390 is an a tri-mode phone that operates on both (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz and (Personal Communication Services PCS) at 1.9 Ghz. Also, the UX390 works on Advanced Mobile Phone Service. We call it a tri-mode phone. Since the phone operates on Cellular, PCS and AMPS, the call fail rate is less than on a conventional dual-mode or singlemode phone.

# TECHNICAL DETAILS

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard Handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

\* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The following table lists some major CDMA standards.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A	CDMA Tri-Mode Air Interface
	TSB-74	14.4kbps radio link protocol and inter-band operations
	ANSI J-STD-008	IS-95 adapted for PCS frequency band
	TIA/EIA-IS2000	cdma2000 1xRTT AirInterface
Network	ANSI TIA/EIA 553A	Advanced Mobile Phone Service
	TIA/EIA/IS-634	MAS-BS
	TIA/EIA/IS/651	PCSC-RS
	TIA/EIA/IS-41 -C	Intersystem operations
Service	TIA/EIA/IS-124	Non-signaling data comm.
	TIA/EIA/IS-96-B	Speech CODEC
	TIA/EIA/IS-99	Async Data and Fax
	TIA/EIA/IS-637	Short message service
	TIA/EIA/IS-657	Packet Data
	IS-801	Position Determination
Performance	TIA/EIA/IS-707-A	Service (gpsOne)
		High Speed Packet Data
	TIA/EIA/IS-97	Cellular base station
	TIA/EIA/IS-98	Cellular mobile station
	ANSI J-STD-018	PCS personal station
	ANSI J-STD-019	PCS base station
	TIA/EIA/IS-125	Speech CODEC

## FCC RF Exposure Information

**WARNING!** *Read this information before operating the phone.*

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

### Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic

components should not be used. Avoid the use of accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

### Vehicle-Mounted External Antenna (Optional, if available.)

 
 
A minimum distance of 8 inches (20cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

### Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

# PHONE OVERVIEW

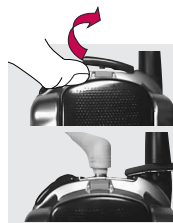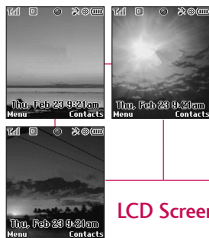

1. Detach the earphone cap using the crack with your nail toward right.
2. Swivel the cap downward.
3. Plug in the earphone into the earphone jack.



**Earpiece** Lets you hear the caller.

**LCD Screen** Displays messages and indicator icons.

**Flip** Open the case to answer an incoming call and close to end the call.


**Left Soft Key** Use to display the function setting menu.

**SEND Key** Use to place or answer calls.

**Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.

**BACK Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.

**Voice Commands Key** Use for access to Voice Commands and Voice Memo.

**Manner Mode Key** Use to set the Manner Mode (from standby mode press and hold  for about 3 seconds).


**Navigation Key** Use for quick access to Messages, My Speaker on, Access Apps. and Mobile Web.

**Right Soft Key** Use to select an action within a menu.

**Speaker Key** Use to turn speakerphone on/off on the right side of the phone.

**END/PWR Key** Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.

**Alphanumeric Keypad** Use to enter numbers and characters and select menu items.

**Lock Mode Key** Use in standby mode to set the lock function by pressing and holding the key  for about 3 seconds.

**Microphone** Lets callers hear you.

**Earphone Jack** Use to plug the earphone to let you hear callers.

**SpeedTalk<sup>SM</sup> Key** Press to use the SpeedTalk<sup>SM</sup> Function.

**Charger port** Connects the charger to the phone.

# MENUS OVERVIEW

## Contacts

1. List Contacts
2. New Number
3. New E-mail
4. Groups
5. Speed Dials
6. My Contact Info

## Recent Calls

1. Dialed Calls
2. Received Calls
3. Missed Calls
4. Erase Calls
  1. Dialed Calls
  2. Received Calls
  3. Missed Calls
4. All Calls
5. Call Timer
  1. Last Call

2. Home Calls
3. Roam Calls
4. All Calls
6. KB Counter
  1. Received
  2. Transmitted
  3. Total

## Messages

1. Voice Mail
2. New Text Msg
3. New Photo Msg
4. Inbox
5. Outbox
6. Saved
7. Msg Settings
  1. Auto Save
  2. Auto Erase
  3. Photo-Auto Receive
  4. Callback #

5. Signature
6. Voice Mail #
7. Text Auto View
8. Entry Mode
9. Insert Quick-Text
0. Text Auto Play
8. Erase All
  1. Inbox
  2. Outbox
  3. Saved
  4. All

## SpeedTalk<sup>SM</sup>

1. ST Contacts
2. New ST Contact
3. New ST Group
4. Recent ST
5. ST Settings
  1. ST On/Off
  2. Speaker On/Off
  3. ST Alert Tone

## easyedge<sup>SM</sup>

1. easyedge<sup>SM</sup>
2. Help

## Media

1. Images
2. Sounds

---

## Tools

---

1. Schedule
  2. Alarm Clock
    1. Alarm 1
    2. Alarm 2
    3. Alarm 3
    4. Quick Alarm
  3. Voice Memo
  4. My Shortcut
  5. Notepad
  6. Ez Tip Calc
  7. Calculator
  8. World Clock
- 

---

## Settings

---

1. Sounds
    1. Ringers
    2. Key Tone
    3. Volume
    4. Message Alerts
    5. Service Alerts
    6. Power On/Off Tone
    7. DTMF Length
  2. Display
    1. Banner
    2. Backlight
    3. Screens
    4. Menu Style
    5. Clocks
    6. Theme Colors
    7. Contrast
    8. Fonts
    9. Language
    0. Power Saver
- 

3. System
    1. Select System
    2. Set NAM
    3. Auto NAM
    4. Serving System
  4. Security
    1. Lock Phone
    2. Restrict Calls
    3. Emergency #s
    4. Change Lock
    5. Erase Contacts
    6. Reset Default
  5. Call Setup
    1. Auto Retry
    2. Answer Call
    3. Auto Answer
    4. One-Touch Dial
    5. Voice Privacy
    6. Auto Volume
    7. TTY Mode
    8. Airplane Mode
- 

---

## 6. Data Settings

---

1. PC Connection
- 
7. Voice Services
    1. Voice Commands
    2. Sound Modes
    3. Announce Alerts
    4. Best Match
    5. Train Words
    6. Help
  8. Location
- 

---


## Phone Info

---

1. My Phone Number
  2. S/W Version
  3. Icon Glossary
  4. Shortcut Help
-





# GETTING STARTED WITH YOUR PHONE

## Menu Access


Press Left Soft Key  **Menu** to access nine phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the menu (or submenu).

For example:

1. Press Left Soft Key  **Menu** to display nine menu items.  
Use  to scroll through the list of menus.
2. Press the appropriate number key corresponding to the menu item you want to select.  
The sub-menu list will be displayed.
3. Press the appropriate number key corresponding to the sub-menu you want to access.
4. Use  to highlight your preferred setting, then press  to select it.

### Note

Press  to go back one step (while accessing a menu or selecting a setting). Changes to settings will not be saved.

## The Battery

### Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

## Installing the Battery

To install the battery, insert the battery into the opening on the back of the phone. Put the battery cover on the battery and push it slightly upwards.

## Removing the Battery

Turn the power off. Push down slightly. Pull the battery cover downward and remove it. Then remove the battery by pressing the upper area of it.

## Charging the Battery

To use the charger provided with your phone:

**Warning!** Use only the charger provided with the phone. Using any charger other than the one included with the UX390 may damage your phone or battery.

1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet. (See the illustration on page 12.)
2. The charge time varies depending upon the battery level.

## Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **Low Battery**. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.




Fully Charged

Empty

## Turning the Phone On and Off

### Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a cigarette lighter charger or hands-free car kit.
2. Press  for about 3 seconds until the LCD screen lights up.

### Note

Like any other radio device, avoid contact with the antenna while your phone is on.

### Turning the Phone Off

1. Press and hold  until the display turns off.


























## Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.



# GETTING STARTED WITH YOUR PHONE

## Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons. To see the icon glossary, go to **Menu -> Phone Info -> Icon Glossary** on your phone.

	Signal strength indicator. The strength of the signal received by the phone is indicated by the number of bars displayed.				
	Battery Strength. Indicates battery charge level.				
	In call state indicator. A call is in progress. * No icon indicates the phone is in Main Menu Screen.				
	No service indicator. The phone is not receiving a system signal.				
	New Messages.				
	New voice mails indicator.				
			Digital indicator.		Analog indicator.
			SSL.		TTY.
			Location on mode.		E911 only mode.
			1x Data Active\.		Airplane Mode.
			Driving mode.		Announce mode.
			Announce alerts.		Speaker On.
	SpeedTalk <sup>SM</sup> On.				

## Making Calls




1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code.

**Call Failed** - indicates the call did not go through.



**Restricted** - indicates outgoing calls are in restricted mode.

### Note


If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts. To turn off this function: **Menu** ->  **tuv** **Settings** ->  **ghi** **Security** -> **Enter Lock Code** ->  **abc** **Restrict Calls** -> **Off** -> **OK** (The default lock code is the last 4 digits of your phone number.)

4. Press  to end the call.


## Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to go to the standby mode.



## Redialing Calls

1. Press  twice to redial the last number you dialed. The last 30 numbers are stored in the call history list and you can also select one of these to redial.

## Receiving Calls

1. When the phone rings or vibrates, press  to answer.




### Note

If you press  or  (the side keys) while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  twice to end the call.

# QUICK ACCESS TO CONVENIENT FEATURES

## Manner Mode



Sets the phone to vibrate instead of ring ( is displayed). To quickly set Manner Mode press and hold . To return to Normal Mode, press and hold .

## Lock Mode



Sets your phone to require your 4-digit password in order to use the phone.

### Note

Until you change it, the lock code/password is the last 4 digits of your phone number.

To quickly lock your phone press  for three seconds. To cancel, press Right Soft Key  [Unlock] and enter the password.

## Mute Function

The Mute Function doesn't transmit your voice to the caller. To quickly activate Mute press Left Soft Key  [Mute], then to cancel press Left Soft Key  [Unmute].

### Note

The Mute Key is activated during a call.

## Volume Quick Adjustment

Use the side keys to adjust the earpiece and ringer volumes. The upper key increases the volume and the lower key decreases the volume.



- Earpiece volume can be adjusted during a call. Ringer volume can be adjusted during a call.

### Note

Key Beep volume is adjusted through the Sounds Volume (Menu -> 8 -> 1 -> 3 -> 3).

## Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

## Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name appears with the number. Check with your service provider to ensure they offer this feature.


## Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. Speed Dial Number 1 is assigned to Voice Mailbox by default, but you can change it.

## Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.

OR

Enter the speed dial number and press .

## Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press .

# ENTERING AND EDITING INFORMATION

## Text Input

You can input and edit your Banner, Schedule, Contacts, Notepad, and Messaging.

### Key Functions



**Right Soft Key (Left Soft Key only in Messaging):**

Enter the text screen to create a text message. Press to scroll through the following text input modes: **T9Word** -> **Abc** -> **123** -> **Symbols** -> **Smileys**.



**Shift:** Press to change case.

**T9 text:** **T9Word** -> **T9WORD** -> **T9word**

**Abc text:** **Abc** -> **ABC** -> **abc**



**Next:** In T9 mode, press to display other matching words.



**Space:** Press to complete a word and insert a space.



**Clear:** Press to delete a single space or character. Hold to delete the whole message.




**Punctuation:** In T9 mode, press to insert punctuation in a word and complete a sentence.

### Note

When Key Tone is changed from Beep to English or Spanish (Menu -> 8 -> 1 -> 2), the phone does not announce numbers when 123 mode is in use.

### Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. In a text entry field, pressing **Right Soft Key**  displays a pop-up list of text modes.

\* **Left Soft Key** () in Messages menu.

### T9Word (T9) Mode

Use to type text using one keystroke per letter. The phone translates keystrokes into common words by using the letters on each key and a compressed database.

### Abc (Multi-tap) Mode

Use to add words to the T9 database.

### 123 (Numbers) Mode

Use to type numbers using one keystroke per number.


## Symbols Mode

Use to insert special characters or punctuation. There are 39 special characters including “SP” which inserts a space and “LF” which forces the text to the next line.

## Smileys Mode

Use to insert smiley graphics. There are 40 smiley characters.

## Changing Letter Case

Using T9 and Abc text input modes you can set the capitalization. Press  to reach the following:

### Initial Cap (T9Word/ Abc)

Only the first letter is capitalized and subsequent letters are lower case.

### Caps Lock (T9WORD/ ABC)




All letters are capitalized.

### Lower Case (T9word/ abc)







All letters are in lower case.

## Text Input Examples

Display the text modes and select a text mode:







1. In a text entry field, press Left Soft Key  to display text modes.
2. Press  to use the text input mode you want to use.
3. Press  to select the text input mode.

## Using Abc (Multi-tap) Text Input

1. Press Left Soft Key  to change to Abc mode.
2. Press  to change to ABC Caps Lock every time for capital letters.
3. Press    .

LG is displayed.

## Using T9 Mode Text Input

1. Press Left Soft Key  to change to T9Word mode.
2. Press    .
3. Press  to complete the word and add a space.

# ENTERING AND EDITING INFORMATION

4. Press **8** tuv **4** ghi **3** def **#** **â** **6** mno **3** def **3** def **4** ghi **2** abc **3** def **1** **⏏**.

Call the office. is displayed.

## Using the NEXT Key (In T9 Mode)

After you have finished entering a word, if the word displayed is not the one you want, press **0**next to display additional choices of words from the database.

1. Press **4** ghi **6**mno **6**mno **3** def.

Good is displayed.

2. Press **0**next.

The display gives you additional choices such as:  
Home, Gone, Hood, etc.

## Adding Words to the T9 Database

If a word is not in the T9 database, add it using Abc (Multi-tap) mode text entry.

1. Press Left Key **⏏** (or Right Soft Key) to change to Abc (multi-tap) mode.

2. Press **2**abc **2**abc **6**mno **6**mno **6**mno **7**pqrs.

Wait for a while for space between characters.

Bop is displayed.

3. Press Right Soft Key **⏏** (or Left Soft Key) to change to T9 mode to add the word Bop to the T9 database.

4. Press **BACK** to erase the existing word.

5. Press **2**abc **6**mno **7**pqrs.

cop is displayed.

6. Press **0**next **0**next.





bop is displayed.

# CONTACTS IN YOUR PHONE'S MEMORY

## Contacts Entries


This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 500 entries with up to 5 phone numbers each. Each entry may be up to 22 characters. Each phone number may be up to 48 digits.

## The Basics of Storing Contacts Entries

1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Right Soft Key [Options] and select [Save to Contacts].
3. Use  to highlight a Label and press  .  
Home/ Home2/ Office/ Office2/ Mobile/  
Mobile2/ Pager/ Fax/ Fax2/ None
4. Use  to select New Name or Existing and press  .

### Note


Use Existing to add another phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 22 characters) and press  .  
A confirmation message is displayed briefly.


### Note

To skip name entry, press  to go to the next step.

### Note

If the information is complete, press  to return to the standby mode.

### Note







To further customize the Contact entry, press Left Soft Key  Done.

6. Continue saving the entry as a Speed Dial selecting [Speed Dial].

# CONTACTS IN YOUR PHONE'S MEMORY









## Options to Customize Your Contacts

Once the basic phone number and name information is stored in your Contacts, you can edit and customize each entry.

1. Press Right Soft Key  **Contacts** and use  to highlight the contact entry you want to edit, then press .
2. Press Left Soft Key  **Edit** to access the Edit Contact screen.
3. Use  to highlight the information you want to customize, then press .

## Adding or Changing the Group

Allows you to manage your Contacts entries by organizing them into groups.










1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **No Group**, then press .
4. Use  to select the Group, then press .

No Group/ Family/ Friends/ Colleagues/  
Business/ School

5. Press Left Soft Key  **Done** to save the change.







## Changing the Call Ringer

Allows you to identify who is calling, by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Default Ringer**, then press .
4. Use  to select the **Ringer Type**, then press .
5. Press Left Soft Key  **Done** to save the change.




## Changing the Message Ringer



Allows you to identify who is sending you a message, by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press **OK**.
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Default Text Msg Ringer**, then press **OK**.
4. Use  to select the **Ringer Type**, then press **OK**.
5. Press Left Soft Key  **Done** to save the change.

## Adding or Changing the Memo








Allows you to enter up to 32 characters as a memo to the Contact entry.

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press **OK**.
2. Press Left Soft Key  **Edit**.

3. Use  to highlight **Memo**, then press **OK**.
4. Enter text, then press **OK**.
5. Press Left Soft Key  **Done** to save the change.













## Adding or Changing the Picture ID

Allows the phone to display an image to identify the caller.

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press **OK**.
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Default**, then press **OK**.
4. Use  to select one of the images available, then press **OK**.
5. Press Left Soft Key  **Select**.
6. Press Left Soft Key  **Done** to save the change.

# CONTACTS IN YOUR PHONE'S MEMORY


## Adding Speed Dial



1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight the phone number you want to set with a Speed Dial, then press .
4. Press  to select **Speed Dial**, then press .
5. Enter a Speed Dial digit. Use the Keypad, then press , or use  to highlight the Speed Dial digit, then press .
6. Press Left Soft Key  **Done** to save the change.

## Editing Contacts Entries





### Adding Another Phone Number

From standby mode

1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Right Soft Key  **[Options]** and select **Save to Contacts**.










3. Use  to highlight a Label, then press .

**Home/ Home2/ Office/ Office2/ Mobile/ Mobile2/ Pager/ Fax/ Fax2/ None**

4. Use  to highlight **Existing**, then press .
5. Use  to highlight the existing Contact entry, then press .

A confirmation message is displayed.

### Through Contacts








1. From standby mode press Right Soft Key  **Contacts**. Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight **Add Number**, then press .
5. Enter the number, then press .
6. Use  to highlight a Label, then press .

A confirmation message is displayed.




## Default Numbers

The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be designated as the Default Number.



### Changing the Default Number


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the phone number you want to set as the Default Number, then press Right Soft Key  **Options** and  **Set as Default #**.



### Editing Stored Phone Numbers

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .

3. Press Left Soft Key  **Edit**.

4. Use  to highlight the phone number, then press  twice.



5. Edit the phone number as necessary, then press .

6. Use  to confirm the Label, then press .



A confirmation message is displayed.

### Editing Stored Names

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.

2. Use  to highlight the Contact entry you want to edit, then press .

3. Press Left Soft Key  **Edit**.

4. Use  to highlight the name, then press .









5. Edit the name as necessary, then press .

6. Press Left Soft Key  **Done** to save the change.

# CONTACTS IN YOUR PHONE'S MEMORY




## Editing Customized Options






Edit any of the Contacts options in the same manner as when the Contact is created.

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the information you want to customize, then press .
5. Edit the information as necessary, then press .
6. Press Left Soft Key  **Done** to save the change.








## Deleting

### Deleting a Phone Number from a Contact


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the **Contact** entry, then press .

3. Press Left Soft Key  **Edit**.
4. Use  to highlight the phone number to be deleted.
5. Press Right Soft Key  **Options**.
6. Press  **Erase Number**.
7. Press  **Erase Number**.  
A confirmation message is displayed.













### Deleting a Contact Entry

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to be deleted, then press .
3. Press Left Soft Key  **Edit**.
4. Press Right Soft Key  **Options**.
5. Press  **Erase Contact**.
6. Press  **Erase**.  
A confirmation message is displayed.

## Additional Ways to Delete a Contact

At any time when your Contacts are displayed, the Right Soft Key  **Options** allows you to erase the highlighted entry.

### Deleting a Speed Dial


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the number, then press .
5. Use  to highlight the Speed Dial entry, then press .
6. Use  to highlight the existing Speed Dial location.
7. Press Right Soft Key  **Options**.
8. Press  **Remove**.
9. Press  **Remove**.

A confirmation message is displayed.

## Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing numbers, you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (P, T). There are two different types of pauses you can use when storing a number:

### Hard Pause (P)










The phone stops dialing until you press Left Soft Key  Release to advance to the next number.

### 2-sec Pause (T)













The phone waits 2 seconds before sending the next string of digits.

# CONTACTS IN YOUR PHONE'S MEMORY

## Storing a Number with Pauses

1. Press Left Soft Key  Menu.
2. Press  Contacts.
3. Press  New Number.
4. Enter the number.
5. Press Right Soft Key  Pause.
6. Use  to select pause type, then press  .  
Hard pause/ 2-sec pause
7. Enter additional number(s) (e.g., pin number or credit card number), then press  .
8. Use  to select a Label, then press  .
9. Enter a name (up to 22 characters).  
A confirmation message is displayed.

## Adding a Pause to an Existing Number



1. Press Right Soft Key  Contacts to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to edit, then press  .
3. Press Left Soft Key  Edit.
4. Use  to highlight the number then press  2 times.
5. Press Right Soft Key  Pause.
6. Press  Hard pause or  2-sec pause.
7. Enter additional number(s), then press  .
8. Use  to confirm the Label, then press  .  
A confirmation message is displayed.

## Searching Your Phone's Memory


The UX390 phone is capable of performing a dynamic contents search of the phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter
- Searching by Options




### Scrolling Through Your Contacts

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to scroll through the list.

### Searching by Letter


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.


### Searching Options


1. Press Right Soft Key  **Contacts**.
2. Press Right Soft Key  **Options**.
3. Select the search criteria (use  then press **OK**, or press the corresponding number on the keypad):

 **New Number**

 **New E-mail**

 **Find Name:** Enter the character(s) to search for (such as the first letter(s) of the name).

 **Find Number:** Enter the number(s) to search.

 **Find Speed Dial:** Enter the speed dial number(s) to search.

# CONTACTS IN YOUR PHONE'S MEMORY


**6 mno** **Find Group:** Use  to highlight the group to search for, then press **OK**.



**7pqrs** **Find E-mail:** Enter the e-mail address to search.

**8 tuv** **Send Text Msg:** Send a text message to the selected contact.

**9 wxyz** **Send Photo Msg:** Send a photo message to the selected contact.


**0 next** **Erase:** Erase the selected entry in your Contacts.

**\* mnu** **Copy to ST:** Copy the selected contact entry to SpeedTalk<sup>SM</sup>. Enter extra information to Group, Ringer, Text Msg Ringer and Picture. Use Left Soft Key  **Edit** to edit the information.





4. When the list of matches is displayed, use  to highlight a matched entry.
5. Press **OK** to see more information or press  to place a call.

## Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing  after searching for a phone number in Contacts or Recent Calls and highlighting it.
- By using Speed Dialing



### From Contacts

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to select the Contact entry, then press **OK**.
3. Use  to select the phone number.
4. Press  to place the call.



## From Recent Calls ( as a hot key)

1. Press Left Soft Key  **Menu**.
2. Press  **Recent Calls**.
3. Use  to select the type of recent call, then press .

### Dialed Calls/ Received Calls/ Missed Calls




4. Use  to select the phone number.
5. Press  to place the call.

## Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press .

## Prepending a Stored Number

Prepend can be used if you are out of your home system area and need to add the area code to an existing number in your phone's memory. When a Contacts entry or message callback number is displayed, you can add to the beginning of the original number. However, you cannot edit the original number.



1. Recall a number in your Recent Calls (Dialed, Received, or Missed).
2. Press Right Soft Key  **Options**.
3. Press  **Prepend**.
4. Enter the prepend digits to the phone number.
5. Press  to place the call.

# CONTACTS

## Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

### Access and Options







1. Press Left Soft Key  Menu.
2. Press  Contacts.
3. Select a sub-menu.



1. List Contacts
2. New Number
3. New E-mail
4. Groups
5. Speed Dials
6. My Contact Info

## 1. List Contacts

Allows you to view your Contacts list.







1. Press , , .
2. Options from here:
  - Press  to scroll through your Contacts alphabetically.
  - Press Right Soft Key  Options to select one of the following:  
New Number/ New E-mail/ Find Name/ Find Number/ Find Speed Dial/ Find Group/ Find E-mail/ Send Text Msg/ Send Photo Msg/ Erase/ Copy to ST
  - Press Left Soft Key  Alert available at 1X network.

## 2. New Number

Allows you to add a new number to your Contacts.

### Note

Using this sub-menu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.






1. Press , , .
2. Enter the number, then press .
3. Select the Label you want and press .
4. Enter the name, then press .
5. Continue saving the entry as necessary.

## 3. New E-mail

Allows you to save a new e-mail address.









### Note

Using this sub-menu, the e-mail is saved as a new Contact. To save the e-mail into an existing Contact, edit the Contact entry.

1. Press , , .
2. Enter the e-mail address, then press .
3. Enter the name, then press .
4. Continue saving the entry as necessary.










## 4. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or erase a whole group.

1. Press , , .
2. Options from here:
  - Use  to highlight a group to view, then press .
  - Press Left Soft Key  **Add** to add a new group to the list (Group Name and Group Icon).
  - Use  to highlight a group, then press Right Soft Key  **Options** to change the name of the group or delete the group.

## 5. Speed Dials






Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press , , .
2. Use  to highlight the Speed Dial position (or enter the Speed Dial digit), then press .
3. Use  to highlight the Contact, then press .
4. Use  to highlight the number, then press .

A confirmation message is displayed.

## 6. My Contact Info

Allows you to enter your own virtual business card to be used in text messages.

1. Press , , .
2. Use  to select the feature you want to edit, then press .
3. Edit the information as necessary.

### Note


You cannot edit phone number, but you can add an additional phone number.

# RECENT CALLS



## Recent Calls

 
The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

### Note

To view a quick list of all your recent calls, press  from standby mode.

### Access and Options



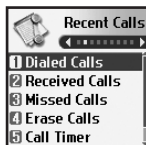



1. Press Left Soft Key  Menu.
2. Press  Recent Calls.
3. Select a sub-menu.





1. Dialed Calls
2. Received Calls
3. Missed Calls
4. Erase Calls
5. Call Timer
6. KB Counter

## 1. Dialed Calls

Allows you to view the list of outgoing calls; up to 30 entries.





1. Press , , .
2. Use  to highlight an entry.
  - Press  to view the entry.
  - Press  to place a call to the number.

# RECENT CALLS

- Press Right Soft Key  Options (for call lists) to select **Save to Contacts/ Save to ST/ Send Text Msg/ Send Photo Msg/ Prepend/ Erase/ Erase All**
- Press  to return to the standby mode.





## 2. Received Calls

Allows you to view the list of incoming calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry.


 



## 3. Missed Calls

Allows you to view the list of missed calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry.

## 4. Erase Calls

Allows you to erase selected call list(s).


 



1. Press , , .
2. Use  to highlight the list of calls to erase, then press .

**Dialed Calls/ Received Calls/ Missed Calls/ All Calls**

3. Press  Erase or  Cancel.

## 5. Call Timer






Allows you to view the duration of selected calls.

1. Press , , .
2. Use  to highlight a call list, then press .

**Last Call/ Home Calls/ Roam Calls/ All Calls**

## 6. KB Counter

Allows you to view the list of received and transmitted data calls.



1. Press , , .
2. Use  to highlight a data call list, then press .

Received/ Transmitted/ Total

# MESSAGES

## Messages



### Access and Options

1. Press Left Soft Key  Menu.
2. Press  Messages.
3. Select a sub-menu.



1. **Voice Mail:** Shows the number of messages in voice mail box.
2. **New Text Msg:** Sends a message.
3. **New Photo Msg:** Sends an MMS message.
4. **Inbox:** Shows the list of received messages.
5. **Outbox:** Shows the list of sent messages.
6. **Saved:** Shows the list of saved and draft messages.
7. **Msg Settings:** Selects alert type for new messages.
8. **Erase All:** Deletes all stored messages.

Text messages, pages, and the voice mail box become available as soon as the phone is powered on.

- Check types of messages by pressing the message key .
- Make a call to the callback number by pressing  during an Inbox message check.
- Read and edit messages saved in the outbox after transmission and resend them.

The phone can store up to 116 messages (1 voice message, 50 inbox text messages, 50 outbox text messages, 15 saved text messages). The UX390 supports up to 160 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

## New Message Alert

There are three ways your phone alerts you to new messages.

1. The phone displays a message on the screen.
2. One of eight ring types is heard, if selected.
3. The message icon (✉) is displayed on the screen. In the case of an urgent message, the icon will flash and Urgent message is displayed.






### Note

If you receive the same message twice, your phone deletes the older one and the new one is stored as a Duplicate.

## 1. Voice Mail

Allows you to view new voice messages recorded in the voice mail box. Your phone will alert you when you receive a new voice message.

### Checking Your Voice Mail Box

1. Press , , .
2. Options from here:
  - Press Left Soft Key  **Clear** to delete information, then select Clear Count.
  - Press  to listen to the message(s).

## 2. New Text Msg

Allows you to send text messages, EMS messages, pages, and e-mail transmissions. Each message has a destination (Address 1) and information (Message). These are dependent upon the type of message you want to send.

### The Basics of Sending a Text Message

1. Press , , .
2. With the highlight on Address 1, press .
3. Enter the recipient's address, then press .
4. Press to access the message screen.
5. Type your message (text or e-mail), then press .
6. Press Left Soft Key **Send**.  
A confirmation message is displayed.






### Customizing the Text Message Using Options

1. Create a new message.
2. Press Right Soft Key **Options**.
3. Select the option(s) to customize.

- |                        |   |
|------------------------|---|
| <b>Send</b>            | Sends the message.  |
| <b>Priority</b>        | Gives priority to the message.<br><b>Normal/ Urgent</b>   |
| <b>Callback #</b>      | Inserts a pre-programmed callback number with your message.<br><b>On/ Off/ Edit</b>                       |
| <b>Delivery Notice</b> | Informs you that the message has been successfully delivered to the recipient.<br><b>Enhanced/ Normal</b> |
| <b>Save Message</b>    | Saves the message into the saved folder.  |
| <b>Erase Field</b>     | Deletes address or contents of message field.   |
4. Complete and send the message.

## Using Contacts to Send a Text Message

You can designate an entry saved in your Contacts as Address 1 instead of manually entering the destination.

1. Press ,  **def**, **2abc**.
2. Press Left Soft Key  **Contacts**.
3. Select **Contacts/ Recent Calls/ Recent Addresses**. then press **OK**.
4. Use  to highlight the Contact entry containing the destination, then press **OK**.
5. Use  to highlight the SMS phone number or e-mail address, then press **OK**.



### Note

The Address 1 feature allows multi-sending of up to 10 addresses.

6. Complete the message as necessary.

## Text Options

While you are composing the text of a message you can insert customized text.

1. Create a new message.
2. Use  to highlight Message, and then press **OK**.
3. Press Right Soft Key  **Options**.
4. Select the option(s) to customize.

**Insert Quick-Text** Inserts 11 predefined phrases.

**Save Quick-Text** Allows you to define phrases to insert as Insert Quick Text.

**Insert Signature** Inserts a predefined signature.  
**Custom/ My Contact Info**

5. Complete and send or save the message.

## Message Icon Reference



**Sent:** Messages sent in Short Message Center(SMC) have been transmitted.



**Fail:** Indicates a failed message transmission.



**Delivery:** Message has been delivered.



**Lock:** Indicates that messages are locked.



**Multi-sending:** Indicates more than one designated recipient.




**Pending:** Transmission is unavailable in a no service area or in an analog service area. Messages are pending transmission. Pending messages are transmitted automatically when digital mode becomes available.

## 3. New Photo Msg

Allows you send messages with Text, Picture and Sound.

1. Press , , .
2. With the highlight on **[Address 1]**, press .  
You can search the destination by scrolling your Contacts, Recent Call and Online Album after pressing Left Soft Key **[Contacts]**.
3. Enter the recipient's address, then press .
4. With the highlight on **[Subject]**, press .
5. Enter the Subject, then press .
6. Press to access the message screen.
7. Type your message (text or e-mail), then press .
8. With the highlight on **[Picture]**, press .
9. Use to highlight a picture, then press Left Soft Key .
10. With the highlight on **[Sound]**, press .

11. Use  to highlight a sound, then press **OK**.

Or you can record your voice memo by pressing Left Soft Key **[Record]** and send it with your message.

12. Press Right Soft Key  **Options**.


13. Select the option(s) to customize.

<b>Preview</b>	Shows your message before sending.
<b>Send</b>	Sends the message.
<b>Priority</b>	Gives priority to the message. <b>Normal/ Urgent</b>
<b>Delivery Notice</b>	Informs you that the message has been successfully delivered to the recipient. <b>Enhanced/ Normal</b>
<b>Save Message</b>	Saves the message into the saved folder.

14. Complete and send the message.

## 4. Inbox

The phone alerts you in 3 ways when you receive a new message by:

- Displaying a message notification on the screen.
- Sounding a beep, vibrating or sound, if set.
- Displaying the message icon  (It blinks when the message is urgent).

Received text messages, page messages, photo messages and e-mail lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

### Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available. When there is no space to save SMS messages, **[Inbox] is 100% full. Unable to rcv. Please erase messages.** is displayed. For MMS messages, **Picture Msgs full. Delete messages.** For MMS notifications, **Picture Msg Noti full. Delete msgs.** is displayed and new messages are not accepted.



# MESSAGES

## Viewing Your Inbox

Up to 50 received messages can be stored in the Inbox.



1. Press , , .



2. Use  to highlight an Inbox message.

- Left Soft Key  **Reply** complying with the kinds of messages (Text/Photo Messaging).
- Right Soft Key  **Options**.

**Erase** Deletes the selected message from the Inbox.

**Lock/UnLock** Locks a message so that it is not erased if the Erase Inbox or Erase All feature are used.

3. Use  to highlight an Inbox message, then press .

4. While viewing the selected message, press Left Soft Key  **Reply** or Right Soft Key  **Options**.

## Options from here:



- |                        |   |
|------------------------|---|
| <b>Reply w Copy</b>    | Replies to the SMS with the original message attached.  |
| <b>Forward</b>         | Forwards a received message to other destination address(es).   |
| <b>Erase</b>           | Deletes the selected message from the Inbox.  |
| <b>Save Address</b>    | Stores the callback number, e-mail address, and numbers in user data included in the received message into your Contacts. |
| <b>Save Quick-Text</b> | Saves the message into the Quick-Text list.   |
| <b>Save Message</b>    | Saves Inbox message into the Saved Folder.  |
| <b>Lock/UnLock</b>     | Locks or unlocks the selected message. Locked messages can not be deleted by the Erase Inbox or Erase All functions.      |
| <b>Message Info</b>    | Shows the message type priority and status.   |

## 5. Outbox

Up to 50 sent messages or photo messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.





1. Press , , .

2. Use  to highlight an Outbox message.

- Press Left Soft Key  **Resend**.
- Press Right Soft Key  **Options**.

**Erase** Deletes the selected message from the Outbox.

**Lock/Unlock** Locks a message so that it is not erased if the Erase Outbox or Erase All feature is used.

3. Use  to highlight an Outbox message, then press . While viewing the selected Outbox message, press Left Soft Key  **Resend** to or press Right Soft Key  **Options**.

**Play**

Replies to the text message with original message attached.

**Play Again**

**Send To**

**Erase**

Deletes the selected message.

**Save Picture**

**Save Sound**

**Save Address**

Stores the callback number, e-mail address, and numbers in user data included in the received message into your Contacts.

**Save Message**

Saves Outbox message into the Saved Folder.

**Save Quick-Text**

Saves the message into the Quick-Text list.

**Lock/Unlock**

Locks or unlocks the selected message. Locked messages can not be deleted by the Erase Outbox and Erase All functions.

**Message Info**

Shows the message type priority and status.



# MESSAGES

## 6. Saved

Displays saved messages and draft messages.

1. Press , , .

2. Use  to highlight a Saved message.

- Press Left Soft Key  Resume/Resend.
- Press Right Soft Key  Options.



**Erase** Deletes the selected message.

**Lock/Unlock** Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

## 7. Msg Settings

Allows you to configure 9 settings for received messages.

1. Press , , .

2. Use  to highlight one of the settings and press  to select it.

## Message Settings Sub-Menu Descriptions

### 7.1 Auto Save (Auto Save/ Prompt/ Do Not Save)

Allows you to automatically save sent messages in your Outbox. You can choose Auto Save, Prompt, or Do Not Save.

### 7.2 Auto Erase (On/ Off)

With this feature on, read messages(except locked messages) are automatically deleted when you exceed the storage limit.

### 7.3 Photo-Auto Receive (On/ Off)

Allows you to set photos to be received automatically.

### 7.4 Callback #

Allows you to automatically send a designated callback number when you send a message. Allows you to manually enter the number.

### 7.5 Signature (None/ Custom)

Allows you designate a signature to automatically send with your messages. You can create a custom signature line.

## 7.6 Voice Mail #

Allows you to manually enter the number for Voice Mail Service. This number should be only used when a VMS access number is not provided from the network.

## 7.7 Text Auto View (On/ Off)

Allows you to directly display the content when receiving a message.

## 7.8 Entry Mode (T9Word/ Abc/ 123)

Allows you to select the default input method.

## 7.9 Insert Quick-Text

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.





## 7.0 Text Auto Play (On/ Off)

With this feature on, the display automatically scrolls down while viewing messages.

## 8. Erase All

Allows you to erase all the messages stored in your Inbox, Outbox, or Saved messages folders. You can also erase all messages at the same time.

1. Press , , .

- Press  **Inbox** to erase all messages stored in the Inbox.
- Press  **Outbox** to erase all messages stored in the Outbox.
- Press  **Saved** to erase all messages stored in the Saved messages folder.
- Press  **All** to erase all messages stored in the Inbox, Outbox, and Saved messages folder.

2. Press  **Erase All**.

A confirmation message is displayed.



# SpeedTalk<sup>SM</sup>

## SpeedTalk<sup>SM</sup>

SpeedTalk<sup>SM</sup> is an walkie-talkie-style service that makes it easy for you to get in touch with your spouse, friends or group of people instantly, with just a touch of a button on the left top of your phone.

SpeedTalk<sup>SM</sup> (ST) allows you to make a barge call or send an Alert message. With a barge call the receiving party does not have the option to ignore the call. When an Alert message is sent to the receiving party, the receiving party has the option to place a ST call or ignore the alert.



## Access and Options

1. Press Left Soft Key  Menu.
2. Press  SpeedTalk.
3. Select a sub-menu option.





1. ST Contacts
2. New ST Contact
3. New ST Group
4. Recent ST
5. ST Settings

## Call from SpeedTalk<sup>SM</sup> Contact List (Barge)

1. From Standby mode, press and hold ST key to access your ST Contact List.
2. Use  to highlight the ST Contact entry you wish to call.
3. Press and hold the ST key.
  - Sender hears ST talk tone and can begin speaking.
  - Receiver has the options to answer or ignore using .
4. Press and hold ST Key to send alert.
5. Release ST Key after speaking.
  - Receiver hears incoming barge tone.
  - Receiver hears sender's voice followed by the floor available tone.
  - Sender's device displays connected screen.
6. Press and hold ST key to speak.
7. Release ST key to listen.

## Call from SpeedTalk<sup>SM</sup> Contact List (Alert)

1. From Standby mode press and hold the ST key to access your ST Contact List.
2. Use  to highlight the ST Contact entry you wish to alert.
3. Press Left Soft Key  Alert.
  - Receiver hears alerting tone and receives alert message.
4. If receiver accepts the alert and places a ST call to the sender,
  - Sender hears incoming barge tone.
  - Sender hears receiver's voice followed by the floor available tone.
  - Receiver's device displays connected screen.
5. Press and hold ST key to speak.
6. Release ST key to listen.

## Call from SpeedTalk<sup>SM</sup> Contact List (Group)

Allows you to make a multiparty call with all or selected members of a ST Group.



1. Press and hold ST key to access ST Contacts list.

2. Use  to highlight the ST Group.

3. To make a ST Group call to all members in the Group,

- Press and hold ST Key.

To make a ST Group call to selected members of the Group,

- Use  to highlight the ST group and Press .

- Select the Contacts you wish to include in ST group call.

- Sender hears ST talk tone and can begin speaking.

4. Release ST key.

- All members of Group hear incoming barge tone.

- All members of Group hear sender's voice followed by the floor available tone.
- Sender's device displays connected screen.

### Note

A group call is only a Barge and a user cannot alert a group.

## Call from Keypad (Barge)

1. From Idle Screen, enter the number.

2. Press and hold ST Key.

- Sender hears ST talk tone and can begin speaking.
- If the phone number is in the ST contact list, screen shows the Contact name.

3. Release ST key.

- Receiver hears incoming barge tone.
- Receiver hears sender's voice followed by the floor available tone.
- Sender's device displays connected screen.

## Incoming SpeedTalk<sup>SM</sup> (Barge)

1. Listening screen is shown with the phone number.  
If the number is stored in ST Contact List, the sender's name is shown.
2. Press and hold ST key.
  - Sender hears ST talk tone and can begin speaking.
3. Release ST key.
  - Receiver hears incoming barge tone.
  - Receiver hears callers voice followed by the floor available tone.
  - Sender's device displays connected screen.

### Note

All Incoming ST calls come through the Speaker Phone.

## Incoming SpeedTalk<sup>SM</sup> (Alert)

1. Buddy Alert Message appears.
2. Select **Answer** or **Ignore**.
3. If Answer is selected, 'Push ST button to make ST call to (Contact name)' is shown.
4. Press and hold ST key to reply.
  - Sender hears ST talk tone and can begin speaking.
5. Release ST key.
  - Receiver hears incoming barge tone.
  - Receiver hears caller's voice followed by the floor available tone.
  - Sender's device displays connected screen.

## Incoming SpeedTalk<sup>SM</sup> (Group)






1. The name of the Group will be displayed. Only one person can speak at a time.
2. If floor is available, press and hold ST key, speak after the talk tone is heard.

## Making a SpeedTalk<sup>SM</sup> call when the phone is closed

When the phone is closed, you can place a ST call by holding down the ST key. Your Recent ST Call history will come up on the outer LCD screen. You may scroll through the list using the side arrow keys. To place a call, highlight a number then press the ST key. When the call is connected, you will see an icon in the status bar of your outer LCD screen exterior using SpeedTalk<sup>SM</sup> Menu.

## 1. SpeedTalk<sup>SM</sup> Contacts

Allows you to view your ST Contacts list. ST Contacts consists of individuals and Groups. For an individual, a single phone number is saved. For a Group, multiple individuals can be saved. An individual can be saved in multiple ST Groups.

1. Press , , .
2. Press  to scroll through your ST Contacts alphabetically.
3. Press Right Soft Key  **Options** to select one of the following:

When highlighted entry is Individual






Find Name/ Find Number/ Find Group/ New Contact/ New Group/ Erase/ Copy to Contacts

When highlighted entry is Group

Find Name/ Find Number/ Find Group/ New Contact/ New Group/ Erase

## 2. New SpeedTalk<sup>SM</sup> Contact







Allows you to add a new individual to ST Contacts.



1. Press , , .
2. Enter the number, then press .
3. Enter the name, then press .
4. Phone will automatically connect to server and update Contact information.

A confirmation message is displayed briefly.

## 3. New SpeedTalk<sup>SM</sup> Group




Allows you to add a new ST group.

1. Press , , .
2. Enter the ST Group name, then press .
- A confirmation message is displayed briefly.
3. Press Left Soft Key  to Save Group.
4. Phone will automatically connect to server and update Contact information.
5. Once saved in ST Contact list, select the newly created group with .

6. To add a contact to the group, press Right Soft Key  for options, then  to add buddy.

## 4. Recent SpeedTalk<sup>SM</sup>

Allows you to view the list of the Recent ST calls (up to 10).


1. Press , , .
2. Icons show you whether the ST call was initiated or received and individual or group.

## 5. SpeedTalk<sup>SM</sup> Settings

Allows you to adjust your ST Settings.

### 5.1 SpeedTalk<sup>SM</sup> On/Off

Allows you to set your ST availability.

**On** allows both incoming and outgoing ST calls. You can use all ST functions and receive all incoming ST calls and alerts.  shows on your idle screen.

**Off** blocks all incoming ST calls.

When other parties try to place a ST call to your number, '(Contact name) unavailable' message will appear on their screen.

Also, the unavailable icon will appear next to your name in their contact list.

1. shows on your idle screen.

1. Press , **4** ghi, **5** jkl, **1** .

2. Set On/ Off with then press **OK**.

## 5.2 Speaker On/Off

Allows you to manually set you Speakerphone on/off (performs the same function as the Speakerphone key on the side of the phone).

1. Press , **4** ghi, **5** jkl, **2** abc.

2. Set On/ Off with then press **OK**.

## 5.3 SpeedTalk<sup>SM</sup> Alert Tone

Allows you to set the alert tone of SpeedTalk<sup>SM</sup>. Other than the default alert tone, a variety of melodies are available.

1. Press , **4** ghi, **5** jkl, **3** def.

### Note

You can adjust the alert tone volume through the master volume (Settings -> Sounds -> Volume -> Ringer).

## easyedge<sup>SM</sup>

**easyedge<sup>SM</sup>** allows you to do more than just talk on your phone. **easyedge** is service that allows you to download and use applications on your phone. With **easyedge**, it is quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of products available, from ringtones to games to products tools, you can be assured that you can find something useful, practical, or down right entertaining. There are new applications constantly being created for your use.

### Downloading Applications



You can download applications and use **easyedge** wherever service is available, see map for details.

### Incoming Calls

While downloading an application, incoming calls will automatically be sent to your voice mail, if available. If you do not have voice mail, downloading will not be interrupted by an incoming call, and the caller will receive a busy signal.

 
When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

### Access and Options

1. Press Left Soft Key  Menu.
2. Press  **easyedge**.
3. Options from here:



1. **easyedge**
2. Help

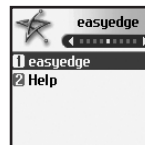

## 1. easyedge

Allows you to download selected applications while displaying the entire application list retrieved from the **easyedge** server connection.

1. Press , , .
2. Press .

### Shortcut

Pressing the right arrow key will start **easyedge**.

### Note

Contact U.S. Cellular® to add this service to your account.

## 2. Help

Gives you information about the **easyedge** selection key.

1. Press , , .
2. Press .

## Managing Your **easyedge** Applications

Add new applications and remove old ones at any time.

### Removing **easyedge** Applications



By deleting an application you will restore memory capacity to the phone. To restore an application once it has been removed will require that you purchase from the **easyedge**<sup>SM</sup> shop.

1. Access **easyedge**.
2. Use to select **Settings**, then press .
3. Use to highlight **Manage Apps**, then press .
4. Use to highlight the application to be deleted, then press .
5. Use to select **Remove**, then press .

## Media

This menu allows you to use a wide variety of images, sounds, and more.

## Access and Options


 




1. Press Left Soft Key  Menu.
2. Press  Media.
3. Select a sub-menu.



1. Images
2. Sounds






## 1. Images

Allows you to choose downloaded images to your phone to display as the background image displayed on the phone.

1. Press , , .
2. Use  to highlight your selection, then press  and press Left Soft Key  **Set As** to select.

## 2. Sounds

Allows you to choose the downloaded ring tones heard for incoming calls.



1. Press , , .
2. Use  to highlight your selection, then press Left Soft Key  **Set As** to select.

# TOOLS

## Tools

Your phone tools include a Schedule, Alarm Clock, Voice Memo, My Shortcut, Notepad, Ez Tip Calc, Calculator, and World Clock.

### Access and Options











1. Press Left Soft Key  Menu.
2. Press  Tools.
3. Select a sub-menu.



1. Schedule
2. Alarm Clock
3. Voice Memo
4. My Shortcut
5. Notepad
6. Ez Tip Calc
7. Calculator
8. World Clock

## 1. Schedule

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

1. Press , , .
2. Use  to highlight the scheduled day.
  -  Moves cursor to the left.
  -  Moves cursor to the right.
  -  Moves to the previous week.
  -  Moves to the next week.
3. Press Left Soft Key  Add.
4. Enter your schedule information including:
  - Date
  - Time
  - Contents
  - Voice
  - Recurring event
  - When to ring the alarm reminder
  - Which ring alarm to sound
5. Press Left Soft Key  Save.

### Note

Schedule will not alert you during a call or during SMS transmitting. It will sound the reminder after you exit a call.

## 2. Alarm Clock

Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, Alarm 1 (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

1. Press , , .



2. Select the alarm you want to edit.

 Alarm 1/  Alarm 2/  Alarm 3/



 Quick Alarm



### Note

In Quick Alarm option, you can select 10 min later/ 30 min later/ 1 hour later/ 3 hours later. For example you can take a nap in the afternoon with the quick alarm set to 30 min later. It will allow you to wake up on time.

3. Use  to highlight the alarm time then press .



4. Set the time for alarm and press .

5. Use  to highlight Once (recurring setting) and press .

6. Press  to select one of the following and press .

Once/ Daily/ Mon - Fri/ Weekends

7. Use  to highlight Ring (ring type setting) and press .

8. Use  to select one of the available alarm ring types and press .

9. Press Left Soft Key  Save.

## 3. Voice Memo

Allows you to add, listen to, and erase short verbal reminders.

1. Press , , .
2. Press Left Soft Key **New** to record a new voice memo.
3. Talk into the microphone, then press Left Soft Key **Done** or .
4. While the highlight is still on the recording, press Right Soft Key **Options** to access the following:

- **Edit Title**      • **Memory Info**
- **Set As**      • **Erase**
- **Erase All**

### To Playback a Voice Memo

1. Access Voice Memo, highlight the Voice Memo you want to hear, then press .
2. Press Left Soft Key **Play**.

## 4. My Shortcut

Allows you to set a shortcut to **Recent Calls**, **Contacts**, **Tools**, or **Settings** using the Up Navigation key.

1. Press , , .

An explanation message is displayed.

2. Press to continue.
3. Select the shortcut you want to set (press the corresponding number or highlight it and press ).


## 5. Notepad


 
Allows you to add, read, edit, and erase notes to yourself.

1. Press , , .
2. Press Left Soft Key **Add** to write a new note.
3. Type the note, then press .

A confirmation message displays briefly, then displays your list of notes.

## Viewing a Notepad Entry

1. Access Notepad and highlight the entry.
2. To erase, press Right Soft Key  **Options**.

-  **Erase**
-  **Erase All**

To edit highlight the entry, then press  and press Left Soft Key  **Edit**.

## 6. Ez Tip Calc

Allows you to quickly and easily estimate the initial amounts for a bill with the calculated amount of the bill, the amount and percentage of the tip, and the number of people as variables.




1. Press , , .

## 7. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the fifth decimal place.

1. Press , , .

2. Enter data.



- Use keypad to enter numbers.
- Use  to enter decimals.
- Use  to enter plus/minus change.
- Press Left Soft Key to clear the entry.
- Press Right Soft Key to enter algebraic operators.
- Use Navigation Key to enter operators.
- Press  to complete equation.

### Note

Calculations can be made with up to 33 characters at one time (e.g., 63+78-21 would be 8 characters).

## 8. World Clock

Allows you to determine the current time in another time zone or country.

1. Press , **7pqrs**, **8tuv**.
2. Press Right Soft Key  **Cities** to move the time bar across the world map and display the date/time in that location.



### Note

Press Left Soft Key  **Set DST** to display Daylight Savings Time in the selected location.

## Settings

The Settings Menu has options to customize your phone.

### Access and Options

1. Press Left Soft Key  Menu.
2. Press  Settings.
3. Select a sub-menu.









1. Sounds
2. Display
3. System
4. Security
5. Call Setup
6. Data Settings
7. Voice Services
8. Location

## 1. Sounds

Options to customize the phone's sounds.






### 1.1 Ringers

Allows you to assign ring tones for incoming calls.

1. Press , , , .
2. Select Caller ID/ No Caller ID/ Restricted Calls.
3. Use  to select a ringer, then press .

### 1.2 Key Tone

Allows you to select the Key Tone type.

1. Press , , , .
2. Select a tone style, then press .

**Beep** Comes out a beep sound, when you press the keys.

**English** Comes out a voice (English), when you press the keys.

**Spanish** Comes out a voice (Spanish), when you press the keys.

# SETTING

## 1.3 Volume

Allows you to set various volume settings.

1. Press , **8** tuv , **1** o.o , **7** def .
2. Select **Ringer/ Earpiece/ Key Beep/ Speaker Phone**.
3. Use to adjust the volume of the ringer; then press **OK** to save the setting.

## 1.4 Message Alerts

Allows you to select the alert type for a new message.

1. Press , **8** tuv , **1** o.o , **4** ghi .
2. Select **Voice Mail/ Text Message/ Photo Msg/ E-mail/ Page**.
3. Use to select a setting, then press **OK** .

## 1.5 Service Alerts

Allows you to set any of the 4 Alert options to On or Off.

1. Press , **8** tuv , **1** o.o , **5** jkl .
2. Select an alert option.

### 1.5.1 Service Change

Alerts you when service changes. Displays Entering Service Area or Leaving Service Area message.

### 1.5.2 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

### 1.5.3 Call Connect

Alerts you when the call is connected.

### 1.5.4 Back To Top

Alerts you when you scroll through the end of a menu list.

3. Use to set **On/ Off**, then press **OK** .

## 1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Press , , , .
2. Use to set to On/ Off, then press .

## 1.7 DTMF Length

Allows you to set the Key tone length and touch tone playback speed.

1. Press , , , .
2. Select an option, then press .

**Normal** Sends out a tone for a fixed period of time even if you keep the key pressed.

**Long** Sends out a continuous tone for as long as you keep the key pressed.

### Note

Dual-Tone Multi Frequency (DTMF) Signaling by the simultaneous transmission of two tones, one from a group of low frequencies and another from a group of high frequencies. Each group of frequencies consists of four frequencies. Setting the Key Beep length to Long will extend the DTMF tone.

## 2. Display

Options to customize the phone's display screen.

### 2.1 Banner

Allows you to enter a string of up to 16 characters which display on the LCD screen.

1. Press , , , .
2. Enter your banner text, then press .

### 2.2 Backlight

Allows you to set the duration for illuminating the backlight. LCD and Key Light Timer are set separately.

#### Note

If an amount of time is set for the timer option, the time starts after the last key was pressed.


#### 2.2.1 LCD

1. Press , , , , .
2. Choose a sub-menu, then press .

Timer/ Brightness

# SETTINGS

## 2.2.2 Key Light Timer

1. Press , **8** tuv, **2** abc, **2** abc, **2** abc.

2. Choose a setting, then press **OK**.

7 seconds/ 15 seconds/ Always on/ Always off

## 2.3 Screens

Allows you to choose the kind of background to be displayed on the phone.

1. Press , **8** tuv, **2** abc, **3** def.


2. Select **Wallpaper/ Power On/ Power Off**, then press **OK**.

3. Select from different screens, then press **OK**.

4. Press **OK**.

5. Left Soft Key  **Save**.

### Note

Right Soft Key  **More**, provides access to additional choices.

## 2.4 Menu Style

Allows you to view the Menu as an Icon or List display.

1. Press , **8** tuv, **2** abc, **4** ghj.

2. Select **Icon or List** and press **OK**.

## 2.5 Clocks

Allows you to choose the kind of clock to be displayed on the LCD screen.

1. Press , **8** tuv, **2** abc, **5** klm.

2. Select **Normal/ Analog/ Digital**, then press **OK**.

3. Press Left Soft Key  **Save**.

## 2.6 Theme Colors






Allows you to choose the color of the background screen.

1. Press , **8** tuv, **2** abc, **6** mno.



2. Select **Default/ Green/ Violet/ Orange**, then press **OK**.

## 2.7 Contrast

Allows you to set the level of contrast for your LCD screen.

1. Press , , , .
2. Choose a Contrast sub-menu and press .

### Main LCD/ Front LCD

3. Use  to adjust the contrast level, then press .



## 2.8 Fonts

Allows you to set the size and color of the font for calling digits and text editor.

### 2.8.1 Calling Digits

1. Press , , , , .
2. Select Size or Color sub-menu.



#### Size/ Color

3. Press  to choose a setting, then press  to save.

### 2.8.2 Text Editor







1. Press , , , , .
2. Select Size or Color sub-menu.

#### Size/ Color

3. Press  to choose a setting, then press  to save.

## 2.9 Language

Allows you to set the bilingual feature according to your preference. Choose between English and Spanish.

1. Press , , , .
2. Use  to select English or Spanish, then press .

## 2.0 Power Saver

Display and buttons are lighted for a designated length of time, allowing you of the convenience to use your mobile phone in the dark.

1. Press , **8** , **2** , **0** .
2. Use to select **2 min/ 10 min/ 30 min/ Off**, then press **OK** .

## 3. System

The System menu allows you to designate specific system network settings.

### 3.1 Select System

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press , **8** , **3** , **1** .
2. Use to select **Home Only/ Automatic A/ Automatic B**, then press **OK** .

## 3.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , **8** , **3** , **2** .
2. Use to select **NAM1/ NAM2**, then press **OK** .

## 3.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press , **8** , **3** , **3** .
2. Use to select **On/ Off**, then press **OK** .

## 3.4 Serving System

Identifies the channel number of a system that is served as a SID Number. This information should only be used for technical support.

1. Press , **8** , **3** , **4** .




## 4. Security

The Security menu allows you to secure the phone electronically.




### 4.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.

You can modify the lock code using the New Lock code within the Security menu.

1. Press , , .
2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press  **Lock Phone**.
4. Use  to select an option, then press .

Unlock	The phone is never locked (Lock mode can be used).
Lock	The phone is always locked.

When locked, you can receive incoming calls and make only emergency calls.

#### On Power Up







The phone is locked when it is turned on.

### 4.2 Restrict Calls

Allows you to restrict incoming and outgoing calls. If you set this feature to **Outgoing Only**, you can only place calls to emergency numbers and phone numbers stored in your Contacts.

#### Note

You can receive the incoming calls from saved contacts on your phone, when Incoming Only is on.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Restrict Calls**.
4. Use  to select On/ Off, then press .

## 4.3 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press , , .
2. Enter the four-digit lock code.
3. Press **Emergency #s**.
4. Use to select the emergency number position, then press .
5. Enter an emergency phone number, then press .

## 4.4 Change Lock

Allows you to enter a new four-digit lock code.

1. Press , , .
2. Enter the four-digit lock code.
3. Press **Change Lock**.
4. Enter a new 4-digit lock code.
5. For confirmation, it will ask you to enter the new lock code again.

## 4.5 Erase Contacts

Allows you to erase all of your Contacts at once.

1. Press , , .
2. Enter the four-digit lock code.
3. Press **Erase Contacts**.
4. Select **Erase all #s** then press .

## 4.6 Reset Default

Allows you to reset your phone to the factory default settings.







1. Press , , .
2. Enter the four-digit lock code.
3. Press **Reset Default**.
4. Press .
5. Press **Revert**.

## 5. Call Setup

The Call Setup menu allows you to designate how the phone handles both incoming and outgoing calls.

### 5.1 Auto Retry







Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press , , , .
2. Use  to select a setting, then press .

Off/ Every 10 seconds/ Every 30 seconds/  
Every 60 seconds

### 5.2 Answer Call







Allows you to determine how to handle an answered call.

1. Press , , , .
2. Use  to select a setting, then press .

Flip Open/ Any Key/ SEND Only

### 5.3 Auto Answer







Allows you to select the number of rings before the phone automatically answers a call. This feature is intended for use with hands free devices, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.

1. Press , , , .
2. Use  to select a setting, then press .

- Off
- After 5 seconds When you have an incoming call, the phone automatically responds after 5 seconds with the flip opened.



### 5.4 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Disable, Speed Dial numbers designated in your Contacts will not function.

1. Press , , , .
  2. Use  to select a setting, then press .
- Enable/ Disable

## 5.5 Voice Privacy



Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Press , **8** *tuv*, **5** *jkl*, **5** *jkl*.
2. Use  to select a setting, then press **OK**.

Enhanced/ Standard

## 5.6 Auto Volume



Provides a better audio experience by enabling the Auto Volume feature to control the dynamic range and volume of the sending and receiving voice across different levels of speaker and environments.

1. Press , **8** *tuv*, **5** *jkl*, **6** *mno*.
2. Use  to select a setting, then press **OK**.

On/ Off

## 5.7 TTY Mode



Allows you to attach a TTY (Teletype writer) device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , **8** *tuv*, **5** *jkl*, **7** *pqrs*.
2. Press **OK**.
3. Use  to select a setting, then press **OK**.

TTY Full/ TTY + TALK/ TTY + HEAR/ TTY Off

## 5.8 Airplane Mode

Allows you to use the general application and restricts the output of RF communication.

1. Press , **8** *tuv*, **5** *jkl*, **8** *tuv*.
2. Use  to select a setting, then press **OK**.







On/ Off

## 6. Data Settings

This menu allows you to use wireless data communication services. Wireless data communication services refers to the utilization of subscriber terminals for access to the internet with personal computers or laptops at 19.2 Kbps or at a maximum of 230.4 Kbps. The connection speed depends on your carrier's network and other variables. Check that communications information specifications match the network.

### 6.1 PC Connection

Allows you to select the data port.

1. Press , , , .
2. Use  to select a setting, then press .







USB/ RS-232C(COM Port)/ Closed

## 7. Voice Services

Allows you to select options for voice activation, announce alerts and recognition results; and enables you to adapt the phone to recognize your way of saying numbers.

### 7.1 Voice Commands

Allows you to set how you activate voice recognition.

1. Press , , , .
  2. Use  to select a setting, then press .
- **Flip Open** Activates voice recognition whenever you flip open the phone. (When the phone is already open, you activate voice recognition by pressing the voice command key.)
  - **Side Key Only** Activates voice recognition when you flip open the phone and press the voice command key.

# SETTINGS

## 7.2 Sound Modes

Allows you to set Driving Mode/Announce Mode.

1. Press , **8** *tuv* , **7** *pqrs* , **2** *abc* .
2. Use to select a setting, then press **OK** .

Driving Mode/ Announce Mode/ Normal Mode

For example,

- 1) Press Left Soft Key Menu.
- 2) Main menu screen appears, phone announces “Main menu”.
- 3) Then, phone announces the first menu item that is highlighted.
- 4) When the cursor is moved, the highlighted menu item is announced.
- 5) Menu readout only to the first sub-level.

## 7.3 Announce Alerts

Allows you to notify caller ID and sender of message by voice.

1. Press , **8** *tuv* , **7** *pqrs* , **3** *def* .
2. Use to select a setting, then press **OK** .  
On/ Off

### Note

When Announce Alerts is set, is displayed on the screen.

## 7.4 Best Match

After you say a name or a number, your phone displays the recognition results—the name or number that best matches the one you said—and asks you to confirm. Select the number of results that you want your phone to display.

1. Press , **8** *tuv* , **7** *pqrs* , **4** *ghl* .
2. Use to select a setting, the press **OK** .

- **1 Result** Displays the name or number that best matches the one you said.

- **4 Results** Displays the four names or numbers that best match the one you said and asks you if the first one is correct. If you say "Yes," the phone makes the call. If you say "No," the phone suggests the second one in the list, and so on, up to the fourth result.



## 7.5 Train Words

Command Train is an optional personalization feature that helps your phone recognize the way you pronounce commands. If you do not get consistent good results with the commands, perform this brief, one-time session.

1. Press , , , .

2. Select a sub-menu, then press .

Commands/ Digits/ Yes, No/ Contacts/  
Phone Label

3. Use  to select a setting, then press .

Training On/ Training Off

## 7.6 Help



Helps you to use the Voice menu. Activate it by following the instructions.

1. Press , , , .

## 8. Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press , , .

2. Use  to select a setting, then press .

Location On/ E911 Only

### Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

# PHONE INFO

## Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

### Access and Options

1. Press Left Soft Key Menu.
2. Press Phone Info.
3. Select a sub-menu.



1. My Phone Number
2. S/W Version
3. Icon Glossary
4. Shortcut Help



## 1. My Phone Number

Allows you to view your phone number.

1. Press , , .

## 2. S/W Version

Allows you to view the software, PRL, **easyedge** and VR.

1. Press , , .

## 3. Icon Glossary

Allows you to view all the icons and their meanings.

1. Press , , .

## 4. Shortcut Help

Allows you to view condensed information about using the phone.

1. Press , , .

## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

## Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment

may not be shielded against the RF signals from your wireless phone.

## Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

## Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

## Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

## Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

## Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

## Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

## Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

## For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

**Caution!** *Violation of the instructions may cause minor or serious damage to the product.*

## Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

## Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.

- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

### General Notice

### Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The

magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your

important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.

- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety

questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### 3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly

with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

#### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the

conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

#### **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one

exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the

development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## 7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## 8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

## 9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## 11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid

at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## 12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection  
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)  
(<http://www.hpa.org.uk/radiation/>)

## 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before

pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website <http://www.ctia.org>.

## Consumer Information on SAR

### (Specific Absorption Rate)

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although

SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.21 W/kg and when worn on the body, as described in this user guide, is 1.28W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJVX4700. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) <http://www.ctia.org/>

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

 
The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

# SAFETY

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

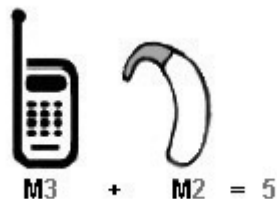

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National

Standards Institute (ANSI) C63.19 standard.

**For information about hearing aids and digital wireless phones**

**FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

**Gallaudet University, RERC**

<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>

**HLAA (Hearing Loss Association of America)**

<http://www.hearingloss.org/learn/cellphonetech.asp>

**The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

# ACCESSORIES

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

---

## Battery Charger

The battery charger allows you to charge your phone.



---

## Battery

Standard battery and extended battery are available.



---

## Battery Pack Charger

The battery pack charger allows you to charge the battery pack itself without the phone.



---

## Swivel Holster

Equip a holster with the phone to make it stable by attaching it to one place.



---

## Headset

The headset connects to your phone allowing hands-free operation. It includes earpiece, microphone.



# LIMITED WARRANTY STATEMENT

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

# LIMITED WARRANTY STATEMENT

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### **3. STATE LAW RIGHTS:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LGE MOBILECOMM USA INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### **4. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.** Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

# INDEX

<b>A</b>		Contacts	36	<b>G</b>		Lock Mode	20
Accessories	100	Contrast	71	Groups	37	Lock Phone	73
<b>B</b>		<b>D</b>		<b>H</b>		<b>M</b>	
Airplane Mode	76	Data Settings	77	Help	60	Manner Mode	20
Alarm Clock	63	Dialed Calls	39	<b>I</b>		Media	61
Announce Alerts	78	Display	69	Icon Glossary	80	Menu Style	70
Answer Call	75	DTMF Length	69	Images	61	Menus Overview	14
Auto Answer	75	<b>E</b>		Important Information	9	Message Alerts	68
Auto NAM	72	E-mail	37	Important Safety		Messages	42
Auto Volume	76	easyedge <sup>SM</sup>	59	Precautions	1	Missed Calls	40
<b>C</b>		Emergency #s	74	Inbox	47	Msg Settings	50
Backlight	69	Erase All	51	Installing the Battery	16	My Contact Info	38
Banner	69	Erase Calls	40	<b>K</b>		My Phone Number	80
Battery	16	Erase Contacts	74	KB Counter	41	My Shortcut	64
Battery Charge Level	17	Ez Tip Calc	65	Key Tone	67	<b>N</b>	
Best Match	78	<b>F</b>		<b>L</b>		Notepad	64
<b>C</b>		FCC Part 15 Class B		Language	71	Number	37
Calculator	65	Compliance	9	List Contacts	36	<b>O</b>	
Call Setup	75	FCC RF Exposure	11	Location	79	One-Touch Dial	75
Call Timer	40	Information	71	<b>G</b>		Outbox	49
Change Lock	74	Fonts		<b>L</b>		<b>O</b>	
Charging the Battery	17	<b>G</b>		<b>L</b>		<b>O</b>	
Clocks	70	<b>L</b>		<b>L</b>		<b>O</b>	

---

<b>P</b>	
Phone Info	80
Phone Overview	12
Photo Msg	46
Power On/Off Tone	69
Power Saver	72

---

<b>R</b>	
Received Calls	40
Recent Calls	39
Removing the Battery	16
Reset Default	74
Restrict Calls	73
Ringers	67

---

<b>S</b>	
S/W Version	80
Saved	50
Schedule	62
Screen Icons	18
Screens	70
Security	73
Service Alerts	68
Set NAM	72

Settings	67
Shortcut Help	80
Sound Modes	78
Sounds	61, 67
Speed Dials	38
SpeedTalk <sup>SM</sup>	52
System	72

---

<b>T</b>	
Table of Contents	4
Technical Details	9
Text Input	22
Text Msg	44
Theme Colors	70
Tools	62
Train Words	79
TTY Mode	76
Turning the Phone On and Off	17

---



---

<b>V</b>	
Voice Commands	77
Voice Mail	43
Voice Memo	64
Voice Services	77
Volume	68

---

<b>W</b>	
World Clock	66

---