

LG VERSA™



Touch UI
(Touch Screen)



Customizing
the Home Screens



Attaching the
QWERTY Keypad



Browsing the Web



Accelerometer



Taking a Picture/
Recording a Video

Quick Start Guide

www.LGmobilephones.com/versa



LG

Life's Good

Getting to Know Your Phone



1. Light Sensor
2. 2.5mm Headset Jack
3. Camera Key
4. Volume Keys
5. Touch Screen
6. Cover Lock Latch
7. Micro USB/
Charging Port
8. Microphone



9. Send Key
10. Clear & Back/Voice
Command/Voice
Recording Key
11. Power/End Key
12. Touch Soft Keys
13. Shortcut Menu
Touch Key
14. microSD™ Port

15. Earpiece
16. Proximity Sensor
17. Unlock/Lock Key
18. Flash
19. Camera Lens
20. Speaker



Touch UI (Touch Screen)


Explore LG Versa's dynamic touch user interface! Access multiple home screens for quick shortcuts and easily search through contacts.

Navigate the Home Screens

1. Use the tip of your finger or the stylus to select icons on the touch screen. It's not necessary to press hard. A light tap will do.
2. To move from one home screen to another, press and *drag* your finger/stylus horizontally across the touch screen. The display will rotate to the next home screen.





Search Contacts

1. From standby mode, touch the **Contacts icon** .
2. Touch the highlighted letters on the virtual keypad to search for a name in your contacts. Highlighted letters represent currently stored contacts in your phone book.


Unlock/
Lock Key



Note: The touch screen automatically locks after periods of inactivity. To unlock the touch screen, touch the **Unlock icon**  or press the **Unlock/Lock Key**  located on the top of the phone.



Customizing the Home Screens

Streamline your LG Versa with shortcuts to your favorite features, pictures, and more. Customize the Favorites, Shortcuts, and Media home screens by touching the **Shortcut Menu Touch Key**  on the right side of these home screens.


- Add frequently used contacts to the **Favorites home screen**. Touch a Favorite's picture ID to place a call, send him/her a text message, view your threaded message history, or edit contact information.
- Set shortcuts to tools, features, and menus through the customizable **Shortcuts home screen**.
- The **Media home screen** hosts customizable shortcuts to multimedia files such as pictures, videos, music, and web bookmarks.

Note: A fourth, non-customizable **Module home screen** is available when the QWERTY keypad is attached.



Attaching the QWERTY Keypad




LG Versa enhances your messaging and web browsing experience with an attachable QWERTY keypad. When the keypad is attached, you can use either the keypad or touch screen to input information.



1. To use the QWERTY keypad, first remove the back cover of the phone.
2. Place your LG Versa in the QWERTY keypad, aligning the phone with the metal contacts on the side of the housing and then pressing the phone and keypad housing together.
3. When the keypad is attached, you can access the **Module home screen** to view shortcuts to features that use text entry, such as text messaging, instant messaging, email, and the notepad.
4. To remove your LG Versa from the QWERTY keypad, pull down on the **Cover Lock Latch**  and lift the phone out of the keypad's housing. You may then reattach the back cover in lieu of the QWERTY keypad.



Browsing the Web

Want to check your favorite websites without carrying around a laptop? LG Versa's tabbed browsing feature lets you view up to three web pages at once!

1. From standby mode, touch the **Menu icon** .
2. Touch **Browser**.
3. Touch the **Options icon**  and then **www**.
4. Touch the **URL field**, and then use the virtual QWERTY keyboard to enter a web address. When you are finished, touch **Done**.
5. If you'd like to view another website without closing the current one, touch the **Options icon**  and then touch the next blank browser tab at the top of the screen. You can then enter another URL following the same steps as previously outlined.

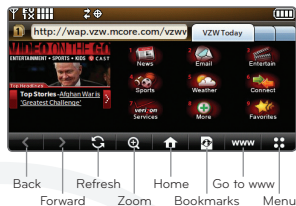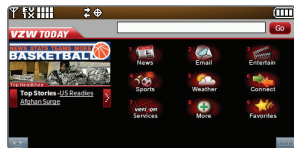

Accelerometer

LG Versa's built-in accelerometer senses whether you're holding the phone horizontally or vertically and automatically rotates the screen accordingly.




- To use the accelerometer, simply rotate the phone.
- The vertical view is ideal for placing calls and adjusting settings.
- The horizontal view gives you a wide screen for easy messaging, web browsing, listening to music, and browsing pictures.



Note: With LG Versa's accelerometer, rotation movements serve as controllers when playing games (depending on the type of game)!

Taking a Picture





See something interesting? LG Versa's 2 megapixel camera feature lets you share the fun with friends and family!

1. You can hold your LG Versa vertically or horizontally when taking a picture. From standby mode, press the **Camera Key**  to access the camera.
2. Touch the screen to access a variety of customizable options.
3. When you're ready, press the **Camera Key**  to take your picture.
4. Touch the **Send icon**  to send the picture to someone.



Recording a Video

Enjoying the action? Capture every frame with LG Versa's camcorder feature!

1. You can hold your LG Versa vertically or horizontally when recording video. From standby mode, press and *hold* the **Camera Key**  to access the camcorder.
2. Touch the screen to access a variety of customizable options.
3. When you're ready, press the **Camera Key**  to begin recording your video. You can record for up to 30 seconds for video messages, or press the **Camera Key**  to stop.
4. Touch the **Send icon**  to send the video to someone.



Optional Accessories



Bluetooth® Stereo Speakers
(MSB-100)



Bluetooth Headset
(HBM-760)



Holster



Extended Battery



Accessories for convenience and fashion are available at www.VerizonWireless.com.

All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. Copyright ©2009 LG Electronics, Inc. ALL RIGHTS RESERVED. LG is a registered trademark of LG Electronics, Inc. Features and specifications are subject to change without prior notice. The use of non-LG or non-Verizon Wireless approved accessories will void the warranty and may result in damage to the phone, the phone exploding, or other dangerous conditions. Versa™ is a trademark of LG Electronics, Inc. microSD™ is a trademark of SanDisk. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics MobileComm, U.S.A., Inc. is under license. Other trademarks and trade names are those of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately.



Mixed Sources
Product group from well-managed
forests and other controlled sources and
recycled wood content
www.fsc.org Cert no. XXX-XXX-XXX
© 1996 Forest Stewardship Council