

## Quick Start



LG optimus G Pro™



Note: For more information on your device, visit [att.com/Tutorials](http://att.com/Tutorials).

## Set Up Your Phone

### Install a MicroSIM and microSD™ Card

- With your phone off, remove the phone's back cover using the notch on the side. Remove the battery using the notch at the corner.
- Slide a microSIM card into its slot with the gold contacts facing downward.
- Slide the microSD card into its slot with the gold contacts facing downward.
- Replace the battery and back cover.



 
## AT&T Ready2Go

Ready2Go helps you set up your device by using your computer.

- Configure email, contacts, and Wi-Fi®
- Customize your home screen, wallpaper, ringtones, and more.

### Get Started

- When your phone first starts up, you'll see the AT&T Ready2Go wizard.
- Tap **Get Started**. You will see a web address.
- On your computer's browser, go to the web page.
- Enter the information and choose the setup you want.
- Save your profile to update your device.

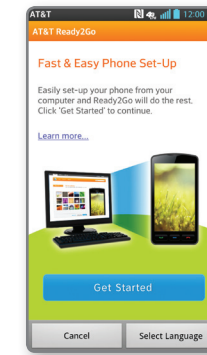


Note: To skip the wizard and update later, tap **Cancel** at the bottom of the screen. To return to the wizard from the home screen, tap **Apps** > **AT&T Ready2Go** and follow the steps above.

## Set Up Your Accounts

 Adding accounts will populate email, contacts, calendar, and other information on your device. You may want to set up accounts over Wi-Fi to save on your data plan usage.

- On any screen, swipe down from the top of the screen to bring down the Notifications Panel.
- Tap **Settings** > **General** > **Accounts & sync** > **Add Account**.
- Select the type of account you would like to add. Enter your information and follow any additional on-screen instructions.

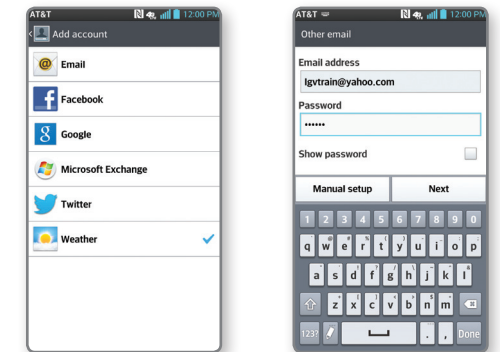

Note: Contact your IT administrator to help set up your corporate Microsoft® Exchange account.



## Find More Information

### On The Web:

- Find tutorials at [att.com/Tutorials](http://att.com/Tutorials).
- Find device specifications, user manuals, troubleshooting, and user forums at [att.com/DeviceSupport](http://att.com/DeviceSupport).
- Manage your wireless account, including suspending service if your phone is stolen, at [www.att.com/myatt](http://www.att.com/myatt).

### Apps on Your Phone:

- Access how-to videos for Optimus G Pro at **Apps** > **Device Help**.
- Access your account at **Apps** > **myAT&T**.

### Give Us a Call:

Call AT&T Customer Care at 1-800-331-0500 or dial 611 from any AT&T mobile phone for assistance with your service or device.

## Find Accessories


Accessories for your smartphone are available at [att.com/WirelessAccessories](http://att.com/WirelessAccessories) or visit your local AT&T store.

LG and the LG logo are registered trademarks of LG Corp. Optimus G Pro is a trademark of LG Electronics USA, Inc. © 2013 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks contained herein are the property of their respective owners.

## Download Apps with Google Play™

Once you have set up your Google™ account, you can download apps from the Play Store. You may want to download apps over Wi-Fi to save on your data plan usage.

 - From the home screen, tap **Apps** > **Play Store**.
- Tap a category to browse selections, or tap **Search** to search for an item. Enter a keyword and tap **Search** on the keypad.
- Tap an app and follow the on-screen installation instructions. Once the app has been downloaded and installed, you will see a notification in the Notifications Bar.
- To open the app, swipe down from the top of the screen and tap the notification. You can also find the app in **Apps**.

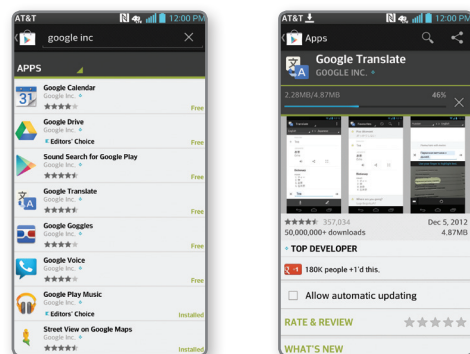

Note: To purchase a paid app, you will need to set up a payment method with Google Wallet™.

## Customize Your Phone

### Customize a Home Screen

- Press and hold an empty spot on a home screen and choose a category:
  - Apps:** Add application shortcuts from the app tray.
  - Downloads:** Add downloaded application shortcuts.
  - Widgets:** Add dynamically updating widgets.
  - Wallpapers:** Change your home screen wallpaper.
- To move an item, press and hold it and drag it to a new location. To delete it, drag it to **Remove**.

### Customize Your Sounds

- On any screen, swipe down from the top of the screen to bring down the Notifications Panel.
- Tap **Settings** > **Sound**. You can change your ringtones, set notification sounds, and adjust your touch feedback options.



Note: To customize the QuickButton press the **Menu Key** and tap **All settings** > **General** > **QuickButton**.

## Calling and Voicemail

### Make a Call

 
- From the home screen, tap **Phone**.
- Enter a phone number or spell the name of a contact. Tap the contact and then tap **Call** to place the call.

### Access Voicemail

- From the home screen, tap **Phone**.
- Tap **Voice**.
- Follow voice prompts to listen to messages.


### Access Call Logs

- From the home screen, tap **Phone**.
- Tap **Call logs**.
- Tap an entry to view it.
- Tap **Call** to call or **Message** to send a message. Tap **+** to create a new contact or add the number to an existing entry.

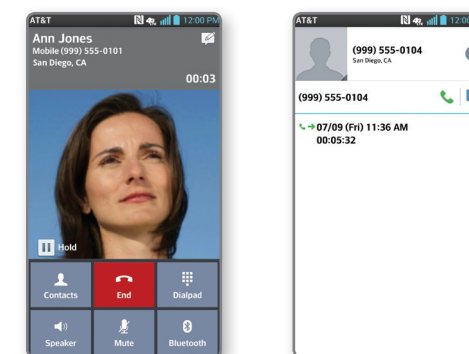

## Text and Picture Messaging

 - From the home screen, tap **Messaging**.
- Tap **Compose**.
- In the **To** field, enter a number or tap **+** to select a name from your contact list. You can enter several names to send your message to multiple people.
- Enter your message.
- Tap **Attach** to attach a file.
- Tap **Send** to send the message.

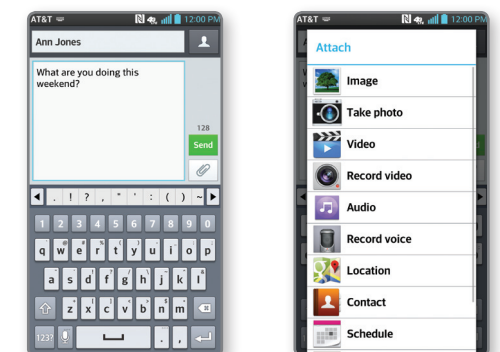

Please don't text and drive. Messaging rates apply.


## Browse the Web

 - 1 From the home screen, tap **Browser**.
- 2 Tap the address bar at the top of the page and enter an address. You may need to scroll to the top of the page to access the address bar.
- 3 Tap **Go** on the keyboard.

### Use the Browser Bar

Access Facebook® and news feeds, find related apps, share content, and more.

- 1 To reveal the Browser Bar, swipe up from the bottom of the browser screen.
- 2 To add a button, tap **Add More** and select a choice or create one of your own.
- 3 Go to **Settings** > **Disable Browser Bar** to remove the Browser Bar.

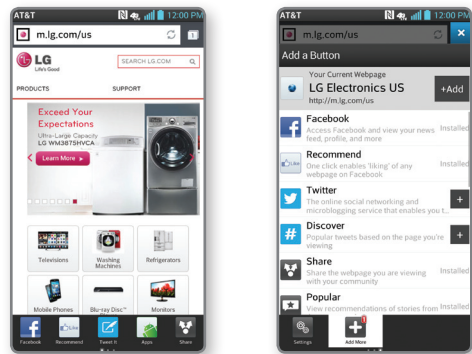

## Take a Picture/Record a Video

- 1 From the home screen, tap **Camera**.
- 2 Tap **Camera** to take a photo.
- 3 Tap **Video** to switch to the camcorder.
- 4 Tap **Record** to start recording. To take a still shot while recording, tap **Photo**.
- 5 Tap **Stop** to stop recording.

### Share Photos

- 1 From the home screen, tap **Apps** > **Gallery**.
- 2 Tap an album.
- 3 Tap **Share** and then tap the image(s) you wish to share.
- 4 Tap **Share**.
- 5 Select how to share and follow the on-screen instructions.



Note: To access the front-facing camera or camcorder, tap **Front**. Tap **Settings** to view and change camera/camcorder settings.

## Get Connected

### Use Bluetooth®

- 1 On any screen, swipe down from the top of the screen to bring down the Notifications Panel and tap **Settings** > **Networks** > **Bluetooth**.
- 2 If **Bluetooth** is off, tap **OFF** to enable it.
- 3 LG Optimus G Pro™ will automatically search for devices. Tap the name of the device you wish to pair with. See the *Bluetooth* device's user manual for more information on pairing.

### Connect to Wi-Fi

 
- 1 On any screen, swipe down from the top of the screen to bring down the Notifications Panel and tap **Settings** > **Networks** > **Wi-Fi**.
- 2 If **Wi-Fi** is off, tap **OFF** to enable it.
- 3 Tap a network name. Enter a password if required and then tap **Connect**.



Note: The Notifications Panel contains Quick Settings for **Bluetooth**, **Wi-Fi**, and more. Tap a button to toggle the setting on or off.

## Transfer Music and Pictures

- 1 Connect your Optimus G Pro to your computer with a USB cable. Steps may vary depending on your operating system.
- 2 You may be prompted to install PC programs. Tap **OK**.
- 3 Tap **Media sync (MTP)**.
- 4 On your PC, choose **Open device to view files** using Windows Explorer.
- 5 Your phone will appear as another hard drive on your computer. Click on the drive to view it.
- 6 Drag and drop your files\* into the corresponding folders, such as Music, Movies, or Pictures. You can also transfer files from your PC to your phone.
- 7 When you're finished transferring files, return to the USB connection type screen and choose **Charge only**. You may now safely unplug your device.

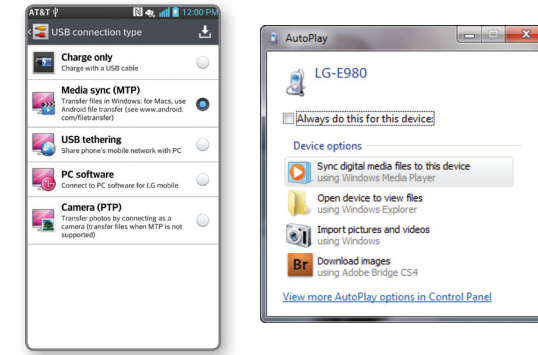


\*Files must be Digital Rights Management (DRM) free.

## Multitask with QSlide Function

 From any screen, bring up a notepad, calendar, or calculator as a window inside your screen.

- 1 From any screen, swipe down from the top of the screen to bring down the Notifications Panel.
- 2 Tap one of the QSlide apps: **Videos**, **Note Pad**, **Calendar**, or **Calculator**. The app will appear as a resizable, moveable window on the screen.
- 3 Drag the corner to enlarge the window and drag the top bar to move it. Tap **Full** to make the QSlide app full size. Tap **Small** to make the app smaller again. Use the slider to adjust the transparency of the window.
- 4 To exit the QSlide function, tap **X**.

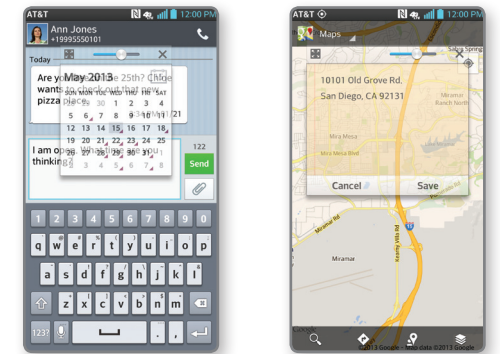

Note: The QSlide function is also available for **Note Pad**, **QuickMemo**, **Calculator**, **Calendar**, and user-generated videos.

## AT&T Services

 
- myAT&T:** Track your usage, review and pay your bill, and update your data plan services.
- AT&T DriveMode™:** Silence notifications, set an auto-reply so people will know you're driving, and more.
- AT&T Locker™:** Safely store and share all your photos, videos, and documents with up to 5 GB of free storage.
- AT&T Navigator®:** Get voice-guided, turn-by-turn driving directions and traffic updates.
- AT&T Smart Wi-Fi:** Maximize your battery performance and data plan, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data usage.
- Mobile TV:** Watch LIVE, on-demand, and downloadable mobile TV.
- Messages:** Manage your text messages, call history, voicemail, and more, all in one convenient place.
- Mobile Hotspot:** Share your mobile network data connection with other Wi-Fi devices.

Data rates may apply. Mobile TV and AT&T Navigator require a separate subscription. Mobile TV requires mobile broadband service. Service not available in all areas. Programming subject to blackout restrictions. Download and watch capability available for select content, requires Wi-Fi connection, and is available for viewing for limited time periods.

## Jot a QuickMemo™

Capture screens, draw on them, and share them with family and friends with QuickMemo.

- 1 To use QuickMemo, swipe down on the Notifications Bar and tap **QuickMemo**.
- 2 Use your fingertip to draw or write on the screen.
- 3 Tap **Pen** to change the pen type or color.
- 4 If you make a mistake, tap **Erase** to access the eraser, or tap **Undo** to undo your last pen stroke.
- 5 Tap **Touch** to interact with your phone while keeping the memo on top.
- 6 To return to your memo, tap **Home**. You will return to the screen where you were when you started QuickMemo.
- 7 To save your creation, tap **Save**. Tap **Share** and follow on-screen instructions to share it.
- 8 To exit QuickMemo at any time, press the **Back Key**.

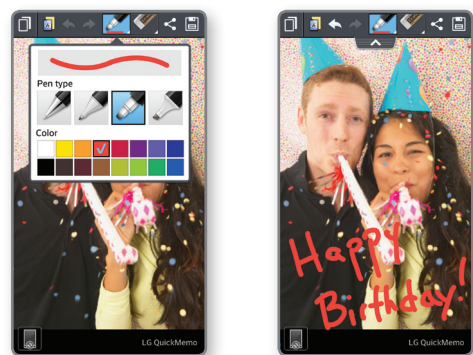

Note: You can also access QuickMemo by quickly pressing the **QuickButton**.

## Share Files with Android™ Beam

 
Android Beam uses Near Field Communication (NFC) to quickly and easily share files such as browser pages, contacts, images, and music with another NFC-capable device.

- 1 Before you begin, make sure **NFC** and **Direct/Android Beam** are enabled on your phone.
- 2 With the content you want to send on the screen, place your Optimus G Pro back to back with another NFC-capable device to activate data exchange.
- 3 Tap the content to send it. The other device may need to accept the transfer.

### Use NFC Tags

With NFC you can instantly change your phone settings to suit your environment.

- Touch the back of your phone to an NFC tag to automatically change your phone's settings.

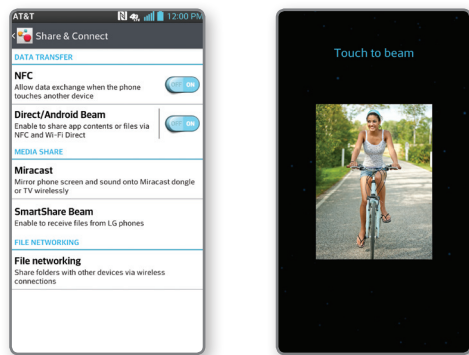


Note: To turn **NFC** and **Direct/Android Beam** on or off, swipe down from the top of the screen and tap **Settings** > **Networks** > **Share & Connect**.

NFC tags are sold separately.

## Make Your Battery Last

 - 1 From the home screen, press the **Menu Key**.
- 2 Tap **All settings** > **General** > **Battery**.
- 3 Tap **Battery saver** to select the features you'd like to turn off or change when Battery saver is enabled, such as Wi-Fi or screen brightness.
- 4 Tap **OFF** to turn on Battery saver.

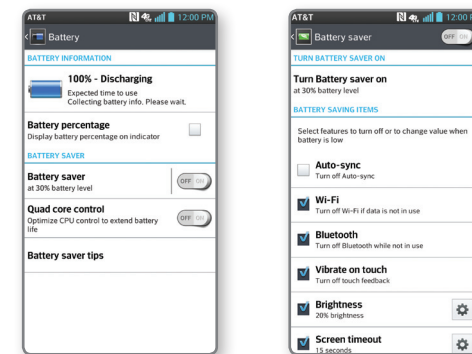

## Network Indicators

Your 4G LTE wireless device will indicate which of the AT&T wireless networks you are connected to. A network indicator does not necessarily mean that you will experience any particular upload or download data speeds.

- 4G LTE:** Connected to the AT&T 4G LTE network.
- 4G:** Connected to the AT&T HSPA+ network. The AT&T HSPA+ network is capable of delivering 4G speeds when combined with enhanced backhaul. 4G availability is increasing with ongoing backhaul deployment.

**E:** Connected to the AT&T EDGE/2G network. Actual data upload and download speeds depend on various factors, including the device, network utilization, file characteristics, terrain, etc. Learn more at: [wireless.att.com/learn/articles-resources/wireless-terms.jsp](http://wireless.att.com/learn/articles-resources/wireless-terms.jsp), your AT&T Wireless Customer Agreement, Section 3.2 "Where and How Does AT&T Service Work?" The AT&T HSPA+ network can deliver 4G speeds when combined with enhanced backhaul. Your wireless device can't distinguish between HSPA+ cell sites with enhanced backhaul and those without. Enhanced backhaul not available everywhere. Learn more at [att.com/network](http://att.com/network).

Limited 4G LTE availability in select markets. 4G speeds delivered by LTE, or HSPA+ with enhanced backhaul, where available. Deployment ongoing. Compatible device and data plan required. LTE is a trademark of ETSI.