

### User Manual

## Electric Vehicle Charger (Settings Guide)

After reading the user manual, store it in an accessible place for easy reference.

EVW011SK-SN EVW011SK-SR

### SYSTEM SETTING SCREEN

- 1 Launch the Charger Settings app. (Compatible version: iOS 15 or above, Android 10 or above)
- 2 When the password input window appears on the Charger Settings app, enter the set password. (The initial password is 000000, and you can change it through password change.)
- 3 Go to the charger settings system screen.

#### iOS





#### Android







l		EZ
		GL
		HSI
		_

No.	Category	Descriptions
0	[Charger Connection	This is the section for the Charger Settings app to connect to the charger.
	and Disconnection]	1) Turn on the Bluetooth feature on your mobile phone, and click Find Charger.
		2) Press the Bluetooth Pairing button on the charger.
		<ol> <li>Connect to a charger that matches the model name and serial number among the available chargers.</li> </ol>
		4) Connection successful pop-up will appear. Enter the password in the charger password input window that is displayed when you close the pop-up. (The initial password is 000000, and you can change it through password change.)
		<ul> <li>5) You can check the information of the connected charger.</li> <li>[Model name]: Displays the model name of the charger.</li> <li>[Serial number]: Displays the unique number of the charger.</li> <li>[HMI Version]: Displays the version information of the charging application.</li> <li>[Control Board Version]: Displays the firmware version information of the control board.</li> <li>[OCPP Software Version]: Displays the OCPP certification version information.</li> </ul>
		6) Once the charger settings are complete, press Disconnect Charger to end the connection with the charger.

	No.	Category	Descriptions
ENGLISH	0	[Charger Connection and Disconnection]	iOS
T			Connect to Charger
			Home > Connect to Charger Home > Connect to Charger > Search
			Charger is not connected. Select a charger to pair Search for charger to connect. with your mobile phone.
			Enable Bluetoxth on your mobile phone; check that the chargers powered; and
			Press the Bluetooth pairing button on the charger. Then, select Search. Model Serial Number Select
			EVW0115K SH         EVL0012F8           The charger cannot be found by or connected         EVW0115K SH           EVW0115K SH         EVW0115K SH
			to the mobile phone while changing. EW0115K-SN EW037521 ④
			EWW0115K-SN EVLC003813 3
			EWK0115K-SN EVIG056193 ③
			Charger Password
			Home > Connect to Charger > Search > Connecting Home > Connect to Charger
			> Charger Password
			Charger Password         Charger is connected.           Charger Password         If you connect another charger, select Disconnect.
			Charger Information
			Model
			EVW0115K-SN
			Serial Number EVLGX01789
			HMI Version EVW015K-SN_H0.0000
			Control Board Version
			EVW0115K-SNLMO.00.00 OCPP Software Version
			1.01
			Cancel Continue Disconnect
			NOTE
			• The software version may change depending on the product's performance

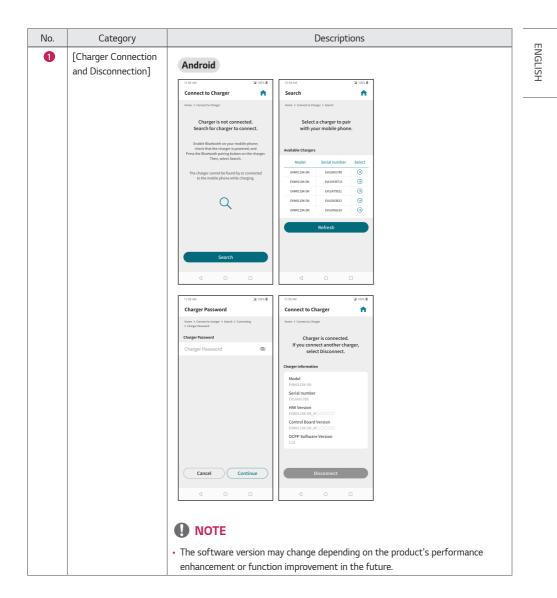

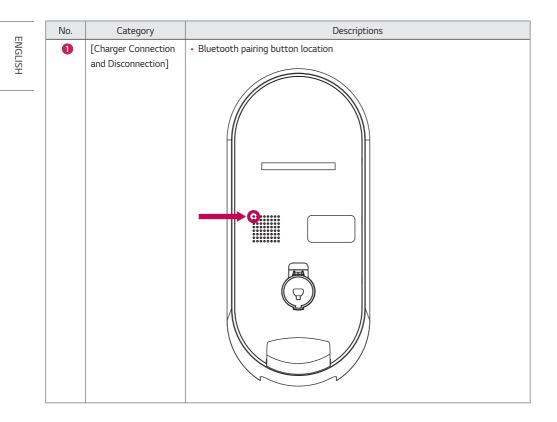


7

No.	Category		Descrip	otions	
2	[Charger Settings]	<ul> <li>When the charger setting:</li> <li>the settings screen.</li> <li>[Network]: Display the If wireless network.</li> <li>[Basic Settings]: Set the and the ID of the charge</li> <li>[Voice]: Set the volume a</li> <li>[Master Charger and Chasettings and the maximus</li> <li>[Change Charger Passweiter]: Reset Charger Data]: Reset Data]: Reset Charger Data]: Reset Data]: Reset Data]</li></ul>	P address inform URL of the char r. and language for arging Capacity um charging capa ord]: Change the	nation of the charger and rging control server (oper the charger. Settings]: Set up master acity. Password set on the char	set the ration server) charger
		iOS		Android	
		Charger Settings	<b>A</b>	12:58 AM	2100%
		Home > Charger Settings		Charger Settings Home > Charger Settings	•
		Network	>		
		Basic Settings	>	Network	>
		Voice	>	Basic Settings	>
		Master and Capacity Settings	>	Voice	>
		Change Charger Password	>	Master and Capacity Settings	>
		Reset Charger Data	>	Change Charger Password	>
				Reset Charger Data	•

	No.	Category	Descriptions
ENGLISH	8	[Network]	<ul> <li>Display the currently assigned IP address of the charger and set the wireless network.</li> <li>[Wi-Fi]: This is where you set the charger to use a wireless network. To set the charger's wireless network, enter the password of the AP router that the smartphone with the Charger Settings app installed is connected to.</li> <li>iOS</li> </ul>
			Network     Image: Status       Inver > Origentering > Status     Image: Status       Network Connection Type     W-Fit       We-Fit     Mode Status       192:168.0.2     W-Fit Settings       Wi-Fit Settings     Wi-Fit Settings
			OK Cancel Continue
			1200 AM     21 100 A       Network     21 100 A       Nonr > Groups Gentry, 3 Annuel     Password       Nonr > Groups Gentry, 3 Annuel     Nonr > Groups Gentry, 3 Annuel       Nonr > Groups Gentry, 3 Annuel     WirFi Kanne(SSID)       Wi-Fi     LG_Charger_Network       Network Paderess     Wi-Fi Password       132.168.0.2     Wi-Fi Password       Wi-Fi Fastings     Wi-Fi Password
			Wk-Fi Settings       OK       Cancel       Continue
			<ul> <li>NOTE</li> <li>The charger and the wireless Wi-Fi router should be located within 40 m (131.2 feets).</li> <li>Since the installation environment significantly affects wireless Wi-Fi communication, this distance may be reduced.</li> <li>The number of chargers that can be connected to a Wi-Fi router can vary depending on the performance of the Wi-Fi router.</li> </ul>

No.	Category	Descriptions	
4	[Basic Settings]	This is where you set the URL of the charging control s address) that the charger needs to connect to and the operating server address and charger ID, then press th	ID of the charger. Enter the
		iOS Android	
		Basic Settings	⊠ 100% ≜
		Home > Charger Settings > Basic Settings   Home > Charger Settings   H	
		Server address	
		wss://abccharger.com Server address wss://abccha	rger.com
		Charger ID	iger.com
		FF00000000001 S Charger ID	
		The charger ID is required to manage the load or set up the master charger.	s required to manage the load or
		Cancel	Continue

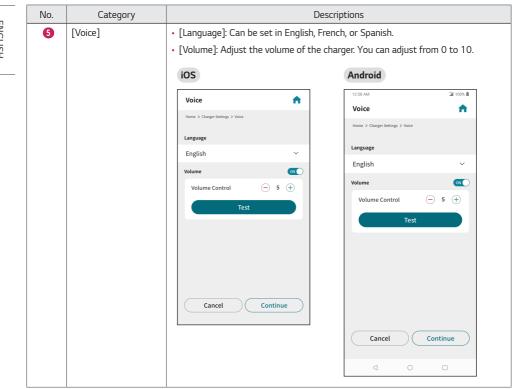

# ENGLISH

ENGLISH

No.	Category	Des	criptions
6	[Master Charger and Charging Capacity Settings]	You must set only one of the chargers of the master charger. You can select maximum charging capa 48 A.	
		IOS	Image: Setting and Capacity Setting and

No.	Category		Descrip	otions	
0	[Change Charger Password]	Change the password set o	n the charger.		
		iOS		Android	
		Change Charger Password	<b>^</b>	12:58 AM Change Charger Password	2 100%
		Home > Charger Settings > Change Charger Password		Home > Charger Settings > Change Charger Password	
		Enter a password between 10 and 20 character including alphanumeric characters and at leas special character (!@#\$%^&*()_+)). Existing Charger Password		Enter a password between 10 and 20 characc including alphanumeric characters and at le special character (!@#\$9%^&*()_+)).	
		Existing Charger Password	8	Existing Charger Password	
		New Charger Password		Existing Charger Password	Ø
		New Charger Password	8	New Charger Password	
		Confirm New Charger Password		New Charger Password	Ø
		Confirm New Charger Password	0	Confirm New Charger Password	
		Cancel Continu	e	Confirm New Charger Password	Ø
				Cancel Continu	Je

No.	Category	Descriptions	
8	[Reset Charger Data]	Reset the data stored in the charger, such as network settings information, charging control server (operating server) address and charger ID, voice settings information, and charger password.	ENGLISH
		IOS Charger Settings   Network   Basic Settings   Reset Charger Data   Reset the charger data?   No   Yes     No   Yes     No     Yes     No     Yes     No     Yes     No     Yes     No     Yes     No     Yes     No     Yes     Yes	

	No.	Category	D	Descriptions
ENGLISH	9	[Load Management]	<ul> <li>[Activate/Deactivate Load Manage management.</li> <li>[Load Management Settings]: Set</li> </ul>	the load management information.
			IOS	12.59 AM       24 100% III         Load Management       Imagement         Home > Load Management       >         Load Management Settings       >
				< ○ □

No.	Category	Descrip	otions	
0	[Activate/Deactivate Load Management]	Activate or deactivate load management a		ENGLISH
		iOS	Android	
		Load Management On/Off	12:58 AM 🖉 100% 🛙	
		Home > Load Management > Load Management On/Off	Load Management On/Off	
		Load		
			Load	
		Cacnel Continue		
			Cancel Continue	

	Category	Descriptions	
0	[Load Management Settings]	<ul> <li>Upon entering the menu, the currently operating load mana- is displayed. Press the [Settings] button to change the load information.</li> <li>[Settings]: Select the chargers to include in load manager displayed charger list and set the maximum load value to of management information.</li> </ul>	management nent from the
		Load Management Settings	
		Home > Load Management > Load Management Settings Home > Load Management > Load Management Settings > Set	
		LM Group Information LM Group Chargers Seleted : 1   Tota LM Group Chargers Total : 10 No. Charger D Limit (A) Note	1:4
		No. Charger ID Current Limit (A) Note 1 LG12345601 48 Master	
		2 LG12345602 48 Slave	
		4 LG12345605 48 Slave	
		5         L61224506         32         Slave           6         L61224500         24         Slave           7         L61224501         48         Ethna	
		Current Limit of LM Group(A) Sum of Current Limits	
		280 0	
		Settings Current Limit of LM Group(A)	
		Current Limit of LM Group(A)	
		* Allowed max current should be lower than sum of current limits.	
		Cancel Next	
		Android	
		1250.MM     20100.00       Load Management Settings     ▲       Nore > Load Management Settings     ▲       Load Management Settings     ▲       M Group Information     ■       M Group Chargers Convert 1 (L02246666 44) Silve 2 (L022246666 44) Silve 3 (L02224666 44) Silve 2 (L02224666 44) Silve 3 (L0224666 44) Silve 3 (L022466 44) Silve	•
		12:50.00     20:00.00       Load Management Seturits       Iver > Load Management Seturits       Load Group Chargers     Fotal : 10       10:60:00 Charger 0: Convert     Total : 10       10:00:00 Charger 0: Conv	•
		1250.MM     24 100.43       Load Management Settings     Image: Settings       Hors - S. Lad Management Settings     Image: Settings       LM Group Chargers     Total: 10       No     Charger ID       1010000     Image: Settings       L012206600     44       Statings     Settings	•



Model

Serial number

Temporary noise is normal when powering ON or OFF this device.