



**LG**

Life's Good

ENGLISH

# U-Series Installation Manual

## N195WU

This manual describes how to install the LG U-Series network monitor in WMS 2011 OS Environment.

Please read the safety information carefully before using the product.

# CONTENTS

## 3 SOFTWARE INSTALLATION PREREQUISITES

---

## 4 SYSTEM REQUIREMENTS:

---

## 4 INSTALLING WMS 2011 SERVER

---

4 Installing MultiPoint Server 2011

## 5 INSTALLING PRIMARY STATION AND STANDARD STATIONS

---

- 5 1. Connecting the Server PC to the Main Monitor
- 6 2. Connecting the Server PC to Standard Monitors
- 7 3. Linking U-Series Monitors by Daisy Chaining

## 8 MULTIPPOINT MANAGER

---

8 Using MultiPoint Manager

## 9 OPERATING ENVIRONMENT

---



### DEFINITIONS

**y** Primary Station

A monitor that is connected through the video port of the server PC.  
You can use a monitor other than an LG U-Series monitor.

**y** Standard Station

LG U-Series monitor that is connected through the USB port of the server PC.

**y** Station

A monitor.

















