



GLIMMER™ by LG



Quick Start Guide



Touch
Screen



Transferring
Music



Playing
Music



Bluetooth®
Pairing



Taking a Picture/
Recording a Video

www.LGUSA.com

Getting to Know Your Phone



*Customizable.

Touch Screen

Touch Protection


The touch screen is automatically locked when the phone is closed or after the phone is inactive for 14 seconds (default).

Unlocking the Touch Screen





- Press the **HOLD** Key on the left side of the phone twice.
– or –
- Open the slider.

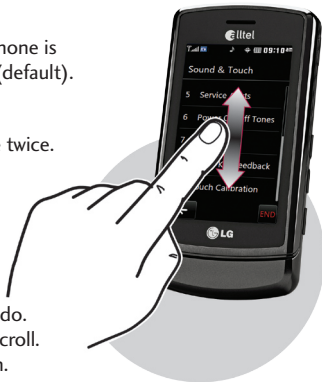Using the Touch Screen

- Use the tip of your finger or the stylus to touch the center of a touch key.
- It's not necessary to press hard. A light touch will do.
- Press and *drag* your finger/stylus **up** or **down** to scroll.
- Touch **End** at any time to return to the idle screen.






Touch Screen Settings

- Touch **Menu**  > **Settings**  > **Sound & Touch**. Then scroll down and select **Touch Key Feedback (8)** to adjust the touch screen's sound and vibration.
- If the touch screen is not responding as you expect, calibrate the screen for touch accuracy. Touch **Menu**  > **Settings**  > **Sound & Touch** > **Touch Calibration (9)**.

Transferring Music

Make a soundtrack for your life! Using an optional 4GB microSD card, you can store up to approximately 960 songs on Glimmer. Transfer music from your PC in a flash.*

1. Insert your microSD card (gold contacts facing down) into the memory port underneath the battery cover.
2. Press the **HOLD** **Key** twice on the left side of the phone to unlock the touch screen.
3. The first time you transfer music, you must format the card. Touch **Menu**  > **Settings**  > **Phone Information**. Scroll down and touch **Memory (6)**.
4. Touch **Card Memory (3)** > **Format** > **Yes (1)**. Then touch **End** to exit.
5. Connect a USB cable* from the phone to your PC.
6. The PC will recognize the phone as a **Removable Disk** and a screen will appear. Drag and drop music files on your PC into the **My_Music** folder.
7. When done, disconnect the phone.

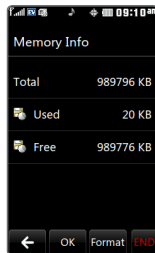

**microSD card and USB cable required. Sold separately.*

Playing Music

Add some sparkle to your Glimmer by listening to crystal-clear music. You'll always have your favorite tunes on hand – and in your pocket – with this all-in-one device.*

1. Insert a microSD card containing music.
2. Press the **HOLD** Key twice on the left side of the phone to unlock the touch screen.
3. Touch **Quick Menu** ➡, then **Music**.[†]
4. Select a song from one of the categories, then touch **Play**.

*microSD card required. Sold separately.



[†]Based on default Quick Menu.

Note: You can play music in the background while doing other tasks. Once you have exited the music player with background music enabled, touch the song shown at the top of the idle screen to return to the player.





Bluetooth® Pairing

With the convenience of Bluetooth technology, you can wirelessly connect your Glimmer to headsets, speakers, phones, and much more. Say goodbye to that tangled mess of cables and cords.

1. Set your Bluetooth accessory into pairing mode.*
2. Press the **HOLD** **Key** twice on the left side of the phone to unlock the touch screen.
3. Touch **Menu**  > **Settings**  > **Bluetooth** > **Add New** (2).
4. When prompted to turn on Bluetooth, touch **Yes** (1).
5. Touch **Search** (1) to begin a new search.
6. Once the Bluetooth device has been found, highlight it and touch **Pair**.
7. Enter the PIN code* (typically “0000” – 4 zeroes) and touch **Pair**.
8. Touch **Yes** (1) to connect with the device.

**Refer to your Bluetooth accessory's user manual for information about initiating pairing mode and the PIN code.*

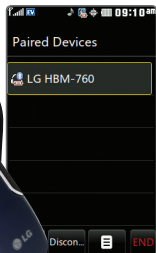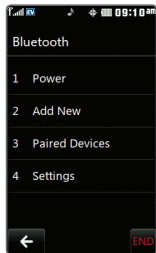

Taking a Picture/Recording a Video

Capture the action right as it happens. Glimmer features a 2.0 megapixel camera/camcorder that is sure to give you the flexibility you need to never miss a moment!

Taking a Picture

1. Press the **HOLD** Key twice on the left side of the phone to unlock the touch screen.
2. Rotate the phone horizontally and press and *hold* the side **Camera** Key.
3. Refer to the callouts below for options.
4. Press **Camera** to take the picture. Touch **Send** to send it to someone.

Recording a Video

1. Press **HOLD** twice on the left side of the phone to unlock the touch screen.
2. Rotate the phone horizontally and press and *hold* **Camera**.
3. Touch **Record Video**, then press the side **Camera** Key to start or stop recording.

Camera setting of 1600x1200 pixels does not support zoom function.



Optional Accessories

Maximize your phone with these cutting-edge accessories at www.LGUSA.com.



Bluetooth Stereo Speakers



Bluetooth Headset (HBM-750)



Bluetooth Headset (HBM-760)



Portable Stereo Speakers



Stereo Headset



Vehicle Power Charger

©2008 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.