



[www.LGUSA.com](http://www.LGUSA.com)

**Fusic™** by LG

## Quick Start Guide



microSD™ Memory Card



Media Player with External Controls



Built-In FM Transmitter



Bluetooth® Capable



1.3 Megapixel Camera/  
Camcorder with Flash





# Getting to Know Your Phone



# Using the Memory Card

Pack up to 64MB of your favorite music into your phone so you can play your tunes anywhere. Or store extra pictures and video for easy transfer to your PC.

1. Insert your microSD card into the memory port with the gold contacts facing up.
2. Connect the USB cable from the phone to the PC.
3. Press  , select **Tools (9)**, scroll **up** and select **USB Flash Drive (#)**, then choose **Yes**.
4. The PC will recognize the phone as a **Removable Disk** under **My Computer**.
5. Drag and drop music and video files into the **Media** folder\* or photos into the **DCIM** folder.\*
6. When done, press **END**  and disconnect the cable.

\*Media and DCIM folders are created the first time you access the memory card.

**Note:** To access multimedia files, select **Tools (9)**, **Memory Card (1)**, then choose the folder containing the appropriate files.



# Playing Music


The Fusic looks like a music player, and for good reason. Now you can kick back and chill to your own mixes or buy new tunes through Sprint — all with great stereo sound.

1. With the flip closed, press and *hold* the >|| Key.
2. Press <<< or >>> to select **Music** (Sprint Music Player) or **Memory Card** (Media Player) and press >||.
3. Press ▲ or ▼ to select the song you want, then press >|| to start the music.
4. Press >|| to pause/play the music. To exit the Media Player or Sprint Music Player, open the flip and press **END**.

## Downloading Songs from the Sprint Music Store:



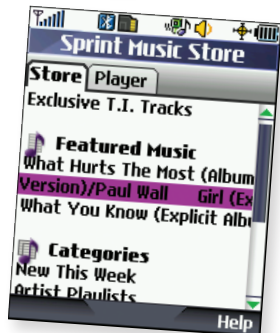

1. From standby mode, press **MENU**, then **Music (6)**.
2. You'll be connected to the Sprint Music Store<sup>SM</sup> where you can download full songs to play on your phone. You must use the Sprint Music Player to listen to these songs.

**Note:** The microSD card must be inserted in order to download songs from the Sprint Music Store.





# Transmitting Music to FM Radio

Got the ultimate sound system in your car or home? Play the Fusic right through your FM radio and see how much power you can get out of this tiny package.

1. From standby mode, press , select **Media Player (3)**, then **Memory Card (2)**, and press .
2. Select a song, press  to play, then press the **Right Soft Key** for **Options**.
3. Scroll **up** and select **Music Transmitter On (0)** and press . Set your radio to 88.1 FM (default setting) to listen.






## Changing the FM Transmitter Frequency:

1. From standby mode, press , select **Tools (9)**, then **Music Transmitter (3)**, and press .
2. Select a channel and press the **Right Soft Key** for **Channel Edit**, then press **left** or **right** on the Navigation Key to edit. Press the **Left Soft Key** to save the frequency.



# Bluetooth® Connectivity

Say goodbye to cord hassles with Bluetooth connectivity to a headset, speakerphone, portable speakers, or laptop. Great for hands-free talk, music, or exchanging contacts.

1. From standby mode, press , select **Tools (9)**, then **Bluetooth (6)**.
2. Select **Add Device (1)** and press  to **Search**. Press  when prompted to turn on Bluetooth. The phone will now search for Bluetooth enabled devices (in pairing mode) that are within range.
3. Once the Bluetooth device has been found, highlight it and press .
4. Enter the pin code (typically “0000” – 4 zeroes) and press  to **Pair**. If you don’t know the code, consult the user manual of the device you are trying to pair.





**Note:** When connecting to a Bluetooth stereo headset, you can listen to AAC, WMA and MP3 music files, but streaming audio, M3U, MP4, M4A, AAC+ and Sprint TV are not supported.



The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

# Taking Photos/Recording Video

Snap rich 1.3 megapixel photos or record long video clips so you can savor your favorite moments the instant they happen. Share the best ones immediately with friends.

1. To take a picture, press and *hold* either  **Key**.  
To record a video, short press , then choose **Camcorder (2)**.
2. Press **left** or **right** on the Navigation Key to adjust brightness and **up** or **down** for zoom\*. Press the **Right Soft Key** to adjust other camera/camcorder settings. Press the **Voice Services Key** on the left side of the phone to turn on the flash/video light.
3. Press  to take the picture or start recording. (Press  again to stop recording.)
4. To send your picture/video, press the **Right Soft Key** for **Options**, then **Send (1/2)**.

\* Camera setting of 1280 x 960 does not support zoom function.

**Note:** To take photos with flip closed, press and *hold* the side  **Key**.  
To view pictures/videos, short press , then select **My Albums (4)**.



# Optional Accessories

Accessories for productivity, convenience and fashion are available at [www.LGUSA.com](http://www.LGUSA.com).



Bluetooth Headset



Bluetooth Speakerphone



Extended Li-Ion Battery



Portable Stereo Speakers



Mobile Charger



Carrying Case

©2006 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated.