

T-Mobile®

Want to set up instant messaging?
Having Fun
Listening to music?
What's a SIM card?
text messaging?
How do I check my voicemail?
tips

Start Guide

LG  Lite™

OVERVIEW

This guide provides you with everything you need to get started. For more information and support, please visit **www.t-mobile.com/support** where you can:

- Register for **my.t-mobile.com** to check your minutes, pay your bill, upgrade your phone, and change your rate plan.
- Review the User Manual and troubleshooting FAQs.
- View the latest troubleshooting solutions in the Support Forums or ask a question of your own.

You can also access Help information on your phone by selecting **Menu > Help**.

To access My Account, select **Menu > Settings > My Account**.

TABLE OF CONTENTS

Service Activation.....	1
Introducing Your Phone.....	2
SIM Card	3
Memory Card	4
Battery	5
Power	5
Call Functions	6
Voicemail.....	7
Contacts	9
Faves Gallery™	11
Text Messaging	13
Instant Messaging	15

Email	15
Social Buzz	17
Camera & Video	20
Music Player.....	22
Location	23
Bluetooth®	24
Web Browsing.....	25
Accessories for Your Phone	27
Emergency Dialing	28
Caring for Your Phone	29
Tips for Safety	30
Additional Information.....	32



SERVICE ACTIVATION

If you are a new T-Mobile customer and your service has not been activated, simply call Customer Care at **1-800-937-8997** from your landline phone and a T-Mobile Activations representative will assist you. You will need the following information when activating service:

- Service Agreement and agent code on your Agreement
- Your name, home address, home phone, and billing address
NOTE: For business and government accounts, please provide the name of your company or government agency, address, and tax ID.
- Your Social Security number, current driver's license number, and date of birth for credit check purposes
- Your choice of T-Mobile rate plan and services (see www.t-mobile.com for latest plan information)
- SIM serial number and IMEI number (located on the box bar code label)

By activating service, you acknowledge that you have read, understand, and agree to be bound by each of T-Mobile's Terms and Conditions and your Service Agreement.

INTRODUCING YOUR PHONE

LG dLite™



- Left Soft key
- Volume key
- Browser key
- Send key
- Back key
- Navigation and OK key
- Right Soft key
- Charger/USB port
- Home key
- End key
- Camera key

SIM CARD

Your Subscriber Identity Module (SIM) card identifies you to the wireless network. Your phone will not work without the SIM card.

To insert the SIM card and battery:

1. Detach your SIM card from its packaging.



2. Press down on the battery cover and slide it away. Remove the battery.



3. Slide the SIM card into the SIM card slot as shown.



4. Align the gold contacts on the battery with the contacts in the battery compartment. Push the battery into place and replace the battery cover.



MEMORY CARD

Your phone does not come with a microSD memory card, but you can purchase one to store multimedia files, such as video clips, music tracks, sound files, and images.

Install the memory card

1. Remove the battery cover.
2. Insert the memory card with the gold contacts facing up and press it in until the card clicks into place.
3. Replace the battery cover.

Remove the memory card

Important: Do not remove the memory card when an application is using it.

1. Remove the battery cover.
2. Gently press the card into the slot and release. The card will pop out.
3. Remove the card and replace the battery cover.

BATTERY

Lift the charger port cover on the right side of your phone. Insert the small end of charger into the charging port on your phone. Plug the other end of the charger into a wall outlet.



POWER

To turn on the phone, open the flip and press and hold the red **End** key.

To turn it off, press and hold the red **End** key again.

CALL FUNCTIONS

Make a call

1. From the main screen, enter the phone number.
2. Press the green **Send** key.

Answer and end calls

To answer a call, open the flip or press the **Send** key if the flip is already open.

To end the call, press the red **End** key or close the flip.

Adjust call volume

While on an active call, press the **Volume** key up or down to adjust the call volume.

Adjust ring volume

Press the **Volume** key up or down to adjust ring volume.

Adjust multimedia volume

1. From the main screen, select **Menu**.
2. Scroll to and select **Settings**.
3. Select **Sound**.

4. Scroll to and select **Volume**.
5. Scroll to and select **Multimedia**.
6. Press the **Navigation** key up or down to adjust the volume level.
7. Select **Set**.

VOICEMAIL

Use voicemail

To call and set up voicemail:

1. From the main screen, press and hold **1** to call voicemail.
2. Follow the tutorial to set up your voicemail account.

To reset the voicemail password to the last four digits of your phone number:

1. From the main screen, enter **#793#**.
2. Press the green **Send** key.

Use Visual Voicemail

Visual Voicemail allows you to play and replay messages in any order, save voice messages to your phone, choose how you want to respond to messages, share special audio messages via e-mail, and create personalized greetings.

To set up Visual Voicemail:

 
1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Scroll to and select **Voicemail**.
4. Select **Yes** to activate Visual Voicemail.

To check Visual Voicemail:

1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Scroll to and select **Voicemail**.
4. Scroll to the voicemail message and select **Open**.
5. Select **Play**.

To reply to a Visual Voicemail:

1. While in the voicemail message, select **Options**.
2. Select **Reply As**.
3. Select **Call** or **Text Message** to reply with a phone call or to send a text message.

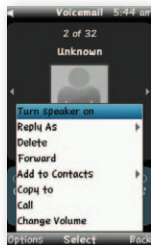

CONTACTS

 
About Mobile Backup

Mobile Backup is a free service that lets you store contact information on your phone and on **my.t-mobile.com**. You can manage contacts on your phone or on the Web and the changes are automatically synchronized. With Mobile Backup, you don't have to worry about losing your contact information if you lose your phone.

You may choose not to use this feature but your address book may be backed up in order to deliver certain services. See the FAQ section on **my.t-mobile.com** for details.

Add new contact

1. From the main screen, enter the phone number.
2. Select **Save**.
3. Select **As New Contact**.
4. Enter the first name, last name, additional phone number, e-mail address and more.

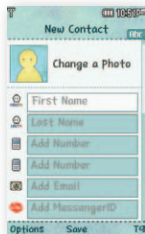

5. To set lighting effects for your contact, scroll down to **Secret lighting** and select **Change**.
6. At **Secret Lighting**, press the **Navigation** key right or left to select **On**.
7. Scroll down to **Pattern** and press the **Navigation** key right or left to select the desired light pattern.
8. Scroll down to **Color** and press the **Navigation** key right or left to select the desired color.
9. Select **Set**.
10. Select **Save** when done entering contact information.

Call contact from the contact list

 
1. From the main screen, select **Contacts**.
2. If this is the first time accessing your phone book, select **OK**.
3. Scroll to the desired contact and press the green **Send** key to initiate the call.

FAVES GALLERY™

Faves Gallery provides you easy access to cut through the clutter of communications from many people and effortlessly communicate with the people who matter most. You can add up to 20 Faves® contacts to the Faves Gallery, either by selecting from your contact list or by creating a new Fave. With just one touch or click, you can send messages, e-mails, pictures, Audio PostcardsSM, and make phone calls to the most important people in your life.

Add a Fave

1. From the main screen, press the **OK** key to open Faves Gallery.
2. Select **Add Fave**.
3. Read the Welcome message and select **OK**.
4. Select **Create New**.

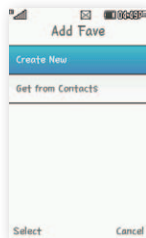


Note: You can also select **Get from Contacts** to add a contact already saved in your contact list.

5. Enter the contact's information.
6. Select **Save**.


Edit a Fave

 1. From the main screen, press the **OK** key to open Faves Gallery.
2. Scroll to and select the Fave.
3. Select **Options**.
4. Select **Edit this Fave**.
5. Edit the desired fields.
6. Select **Save**.

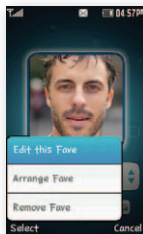

Contact a Fave

 1. From the main screen, press the **OK** key to open Faves Gallery.
2. Scroll to and select the Fave.
3. Press the green **Send** key to call or press the **Navigation** key right or left to select the following icons:
 - **Send: Text**
 - **Compose: Email**
 - **Timeline**
 - **Share: Photo**

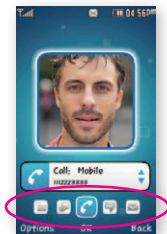

Remove a Fave

1. From the main screen, press the **OK** key to open Faves Gallery.
2. Scroll to and select the Fave.
3. Select **Options**.
4. Select **Remove Fave**.
5. Select **Remove Fave** or **Remove from Faves and delete from contacts**.
6. Select **Yes**.

TEXT MESSAGING

Your phone supports the following text input modes:

- **T9® Predictive Mode**
T9 mode predicts as you type. To enter **run**, press **7**, **8**, and **6**. If the highlighted word is not the one that you are looking for, select **Next** to display the next matching word.
- **ABC Mode**
With this mode, you press the key until the desired letter appears. For example, to enter **run**, press **7** three times, **8** twice, and **6** twice.

- **Numbers and Symbols Modes**
These modes allow you to enter numbers and symbols. While in the text entry screen, press the **Right Soft** key until you see 123 or the Symbol screen appears. Enter the number or select the symbol.

To switch between modes, press the **Right Soft** key.

 
Read a message

Your phone notifies you when it receives a new message. Select **View** or

1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Scroll to and select **Conversations**.
4. Scroll to and select the message to view.

Send a message

1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Select **Create Message**.
4. Enter your message.
5. Select **Send To**.

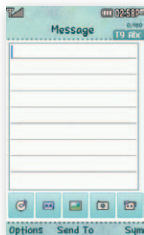

6. Scroll to and select the contact.
7. When finished adding contacts, select **Send**.

INSTANT MESSAGING

Access and send instant messages

1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Scroll to and select **IM**.
4. Scroll to and select the instant messaging provider.
5. Sign in to your account to send IM messages to your contacts.

E-MAIL

You can access your e-mail from AOL®, Yahoo!®, Windows Live™, Gmail™, and other popular e-mail providers.

Set up e-mail

1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Scroll to and select **Email**.
4. Select **Yes** to set up e-mail.
5. Select the e-mail provider.

6. Enter your e-mail address and password.
7. Select **Continue**.
8. Select **Yes** to update your inbox.
9. Select **OK**.

Add more e-mail accounts

1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Scroll to and select **Email**.
4. Select **Options**.
5. Select **Add New**.
6. Select the e-mail provider.
7. Enter your e-mail address and password.
8. Select **Continue**.
9. Select **Yes** to update your inbox.
10. Select **OK**.

Send e-mail

1. While in your e-mail inbox, select **Create new Email**.
2. At **To**, select **Contacts**.
3. Scroll to and select the contact.
4. Enter your subject and message.
5. Select **Send**.

SOCIAL BUZZ

View your social networking applications in one place. Use Social Buzz to view and update your Facebook®, MySpace®, and Twitter™ social networking applications.

Set up Social Buzz

1. From the main screen, select **Menu**.
2. Select **Messaging**.
3. Scroll to and select **Social Buzz**.
4. Read the data message and select **Continue**.
5. Read the License Agreement and select **Accept**.

Facebook

To sign in:

1. While in Social Buzz, press the **Navigation** key left to the **Facebook** icon at the top of the screen.
2. Scroll to the **Email address** field and press the **OK** key to open the text entry screen.
3. Enter your e-mail address and select **OK**.
4. Scroll to the **Password** field and press the **OK** key to open the text entry screen.

5. Enter your password.
6. Select **OK**.
7. Select **Sign in**.

To update status:

1. Log in to your Facebook account.
2. While on the **Stream** tab, scroll to the **What's on your mind?** field near the top of the screen and press the **OK** key.
3. Enter your status and select **OK**.

MySpace

To sign in:

1. While in Social Buzz, press the **Navigation** key left to the **MySpace** icon at the top of the screen.
2. Scroll to the **Email address** field and press the **OK** key to open the text entry screen.
3. Enter your e-mail address and select **OK**.
4. Scroll to the **Password** field and press the **OK** key to open the text entry screen.
5. Enter your password and select **OK**.
6. Select **Sign in**.

To update status:

1. Log in to your MySpace account.
2. While on the **Profile** tab, scroll to the **What are you doing?** field and select **Set Status**.
3. At the **Status** field, press the **OK** key.
4. Enter your status and select **OK**.

Twitter

To sign in:

1. While in Social Buzz, press the **Navigation** key right to the **Twitter** icon at the top of the screen.
2. Scroll to the **Username or email address** field and press the **OK** key to open the text entry screen.
3. Enter your username or e-mail address and select **OK**.
4. Scroll to the **Password** field and press the **OK** key to open the text entry screen.
5. Enter your password and select **OK**.
6. Select **Sign in**.

To update status:

1. Log in to your Twitter account.
2. While on the **Compose** tab, scroll to the **What are you doing?** field and select **Tweet**.
3. Enter your tweet and select **OK**.

CAMERA & VIDEO

Take picture

Pictures are saved to **Menu > Media > Photos**.

1. Press the **Camera** key on the right side of the phone.
2. Frame your subject.
3. Press the **OK** key to capture the picture.



Send picture

1. Take a picture.
2. Press the **Navigation** key left to the **Send** icon.
3. Press the **OK** key.
4. Enter your message.
5. Select **Send To**.
6. Scroll to and select the contact(s).
7. Select **Send**.

Record video

Videos are saved to **Menu > Media > Video**.

1. Press the **Camera** key on the right side of the phone.
2. Press the **Navigation** key left to go to the **Video** icon.
3. Press the **OK** key.
4. Frame your subject.
5. Press the **OK** key to record.
6. Press the **OK** key again to stop recording.

Send video

1. Record the video.
2. Press the **Navigation** key left to the **Send** icon.
3. Press the **OK** key.
4. Enter your message.
5. Select **Send To**.
6. Scroll to and select the contact(s).
7. Select **Send**.

MUSIC PLAYER

 
Transfer music

Note: You must have a memory card inserted in the phone before you can transfer music between your computer and your phone.

1. Connect your phone to your computer using the USB cable.
2. On your phone, scroll to and select **Mass Storage**.
3. On your computer, click **Open folder to view files using Windows Explorer** and click **OK**.
4. Locate the music file on your computer.
5. Copy the file and paste it into the desired folder on your phone's memory card.
6. When finished, click the **Safely Remove Hardware** icon in your computer system tray.

Play music

1. From the main screen, select **Menu**.
2. Scroll to and select **Media**.
3. Scroll to and select **Music Player**.
4. Select **All Songs**.
5. Scroll to the song and select **Play**.

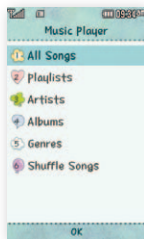

LOCATION

TeleNav GPS Navigator™

To sign up:

 
1. From the main screen, select **Menu**.
2. Scroll to and select **Organizer**.
3. Scroll to and select **TeleNav GPS Navigator**.
4. Continue on to complete the sign up process.

To find a location:

1. While in TeleNav, scroll to and select **Search**.
2. Enter your search term in the **What** field.
3. Select **Go**.

To get directions:

1. While in TeleNav, select **Drive To**.
2. Select the desired category.
3. If necessary, select **Type it**.
4. Enter your search.
5. Select **Go**.

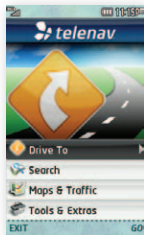

BLUETOOTH®

 
Your phone comes with Bluetooth technology, a wireless technology that enables a data connection between your phone and a Bluetooth wireless headset and other Bluetooth devices (sold separately).

Prepare Bluetooth headset

To pair your phone with a Bluetooth headset, make sure that your headset is fully charged and that you set the headset into pairing mode. See your Bluetooth headset's manual for more information.

Turn on Bluetooth and pair with headset

1. From the main screen, select **Menu**.
2. Scroll to and select **Settings**.
3. Scroll to and select **Bluetooth**.
4. Scroll to and select **Search New Device**.
5. Select **Yes** to turn on Bluetooth.
6. Select the headset.
7. Enter the PIN or passcode if requested.
8. Select **OK**.

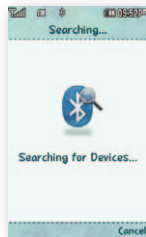

WEB BROWSING

Experience the mobile Web like never before with T-Mobile's web2goSM experience. Features include a phone browser optimized for the Web, a customizable start page for easy, one-click access to information, a powerful built-in Web search engine, and the ability to manage your account right from your phone.

For more information about these services visit www.t-mobile.com/shop/addons.

Visit a Web site

1. From the main screen, select **Menu**.
2. Scroll to and select **web2go**.
3. Scroll to and select **Enter URL**.
4. Enter the desired Web address.
5. Select **Connect**.

Bookmark a favorite

1. In the Web browser, go to the Web address that you want to bookmark.
2. Select **Options**.
3. Scroll to and select **Bookmarks**.
4. Select **This Page**.
5. Enter a new name for the bookmark if desired.
6. Select **Save**.

Full access to Web requires the purchase of a qualifying data plan. Separate additional charges may apply for downloads; actual content available for download may vary.

ACCESSORIES FOR YOUR PHONE

Whether you are looking for a charger, a fashionable carrying case, a Bluetooth® headset or just want to browse for fun extras for your phone, T-Mobile is the place to shop for accessories.

Here are a few examples...



microSD Card



Car Charger

To purchase accessories for your phone, visit T-Mobile.com, call 1.800.204.2449 or visit your nearest T-Mobile store.

Accessory selection subject to change and may vary by location.

EMERGENCY DIALING

While all phones are equipped with 911 emergency calling, this phone may or may not permit its location to be approximated during a 911 call.*

* Availability of this feature depends on upgrades to the (a) wireless network and (b) 911 calling system that are required to be installed by the local 911 response agency or public safety answering point (PSAP); these upgrades may not be available everywhere within our wireless coverage area or your roaming area. This approximation of the phone's location and the transmittal of location information are subject to emergency situations, transmission limits, network problems/limitations, interconnecting carrier problems, your phone, buildings/tunnels, signal strength and atmospheric/topographical conditions, and may be curtailed, interrupted, dropped or refused. The phone's approximate location is transmitted to the local 911 response agency or PSAP while the call is in progress; this approximation is intended solely to aid the PSAP in dispatching emergency assistance or to limit the search area for emergency services personnel. You should not rely solely on a phone for essential communications (such as a medical or other emergency). Please see T-Mobile's Terms and Conditions and Privacy Policy for additional service restrictions and details.

CARING FOR YOUR PHONE

MAKING IT LAST

Your phone is a complex electronic device; think of it as a mini-computer. Here are some hints that should help you extend the life of your new phone.

Store your phone in a protective case.
The touch screen of your phone is delicate and should be protected from scratches.

Phones aren't cheap, so keep yours in a safe place—away from children who may find it fun to see if the phone sinks or floats, and away from dogs that find plastic-coated products to be irresistible chew toys.

Water will damage your phone and accessories—even a small amount such as water droplets from a soda in your car cup-holder, melting snowflakes, tears of joy, squirt-gun crossfire or steam from hot water in the kitchen or bathroom.

Use only batteries and accessories from the original manufacturer of your phone.
Non-approved accessories can cause damage to you or your phone and shorten the phone's life. Hint: If it's being sold out of someone's car trunk, walk away.

If your charger or any other accessory is damaged, replace it or take it to a qualified service dealer. Do not attempt to operate your phone charger if it has received a sharp blow, been dropped, thrown from a speeding motorcycle or is otherwise damaged; doing so may damage your phone.

TIPS FOR SAFETY

Check with your doctor if you have a pacemaker or hearing aid in order to ensure that cell phone usage is safe with your phone. If you have questions about the interaction of cellular radio frequency and any other electronic equipment, ask the manufacturer of the equipment if cell phone radio frequencies will disrupt the equipment's performance.

When you are driving, T-Mobile encourages you to use your phone in a safe and sensible manner. Here are a few tips:

- Assess road conditions before answering. Your safety is more important than any call.

- Prepare your hands-free headset, if you have one, or turn on your speakerphone option before you start moving.
- Keep your phone close. If it rings and you discover it's in the back seat, do NOT crawl over the seat to answer it while driving.
- Program frequently used numbers into your speed dial for easy one-touch dialing.
- Remember that laws prohibiting or restricting the use of a mobile phone while driving may apply in your area.

ADDITIONAL INFORMATION

Use of some features or services may incur separate, additional charges and/or require a qualifying data plan.

Messaging/Data: You will be charged for all data sent by or to you through the network, regardless of whether received. Character length/file size of messages/attachments may be limited. T-Mobile is not liable for content of messages/attachments or for any failures, delays or errors in any T-Mobile generated alerts or notifications.

Downloads: Additional charges apply; not all downloads available on all phones. You obtain no rights in downloads; duration of use may be limited; may be stored solely for use with your phone. T-Mobile is not responsible for any download lost due to your error; T-Mobile is not responsible for any third party content or Web site you may be able to access using your phone. See brochures and **Terms and Conditions (including arbitration provision)** at T-Mobile.com, for additional information. The Bluetooth® word mark and logo are owned by the Bluetooth SIG, Inc. and are used by T-Mobile under license. T-Mobile and the magenta color are registered trademarks of Deutsche Telekom AG. Faves is a registered trademark, and web2go and Audio Postcard are service marks, of T-Mobile USA, Inc. © 2010 T-Mobile USA, Inc.

Get CallerTunes Now!

Choose from the hottest songs, movie lines, and sound effects – over 50,000 ways to please your callers.

Sign up for CallerTunes with the first month of service FREE and a low monthly charge for the service thereafter. You'll also get a Bonus CallerTune at no additional charge! Separate charges apply for each additional CallerTune.

Subscription options:

- Text **CTUNES4** to **7368**
- Select CallerTunes from the Downloads section of web2goSM on your T-Mobile phone
- Dial ***TUNE** (*8863) from your T-Mobile phone

Personalize CallerTunes

Once active, access your CallerTunes from the Downloads section of your phone's browser or go to My.T-Mobile.com to personalize your CallerTunes settings and shop for CallerTunes.

Limited-time offer; subject to change. Taxes and fees additional. Free month applies to monthly service fee only; each CallerTune you download is an additional charge. After first thirty days, you will be charged a set amount per month for the CallerTunes service, plus a separate charge per CallerTune purchased. CallerTunes will expire 12 months from the date of purchase. Compatible device and qualifying voice/data plan required; not available for Prepaid. Content and Applications are licensed to you for personal, lawful, non-commercial use on your device only; nontransferable. Additional terms apply. See your plan terms and **T-Mobile's Terms & Conditions (including arbitration provision)** at www.t-mobile.com for additional information, restrictions and details.

CallerTunes[♪]

T-Mobile

Let 'em rock before you talk!

YOU decide what your friends hear when they call you. Sign up today – your first month of service is FREE, and a low monthly charge applies thereafter. Text **CTUNES4** to **7368** to start now. Look inside to learn more.

Lady Gaga



Lil' Wayne



Trey Songz

