2016 Magic Remote AN-MR600

NOTE: 2016 Magic Remotes use "Blue-Tooth" for communication. 2016 Magic Remotes are not backwards compatible with previous models.

RESET: To reset the Magic Remote, press and hold Smarthome and Back simultaneously for 5 seconds. The Power LED blinks 5 times.

*Mic: (See below).

STB / STB Power You can turn your set-top box on or off by adding the set-top box to the universal remote control for your TV.

(Screen Remote) Displays the Screen Remote. Accesses the Universal Control Menu in some regions.

Search for content such as channels, movies and other videos, or perform a web search by entering your search terms in the search box.

Displays the set-top box Home menu.(When you are not watching with a set-top box: the set-top box screen is displayed.)

Navigation buttons (up/down/left/right)

Press the up, down, left or right button to scroll the menu. If you press $\triangle \nabla \triangleleft \triangleright$ buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.

CAPTION Activates or deactivates the subtitles.

(Q. Settings) Accesses the quick settings.

* Pressing and holding the (Q. Settings) button displays the All Settings menu.


(INPUT): Changes the input source.

* (INPUT): Displays all the lists of external.

FOCUS: You can zoom in on the area where the remote control is pointed.

LIVE ZOOM: * By zooming in on the selected area, you can view it in full screen.

*: To use the button, press and hold for more than 3 seconds.

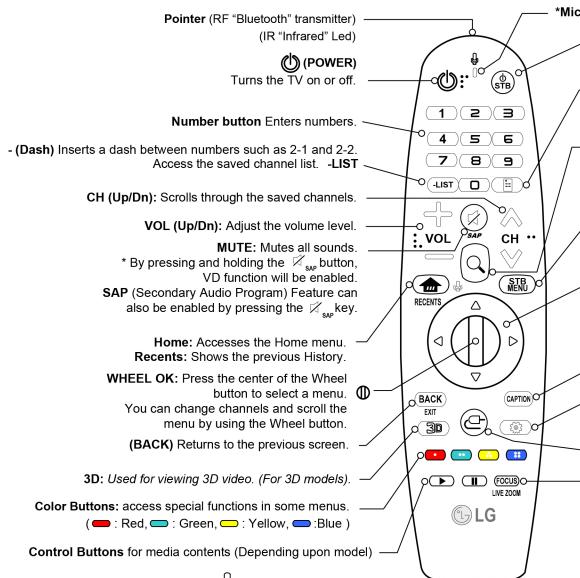

Mic (Voice recognition)

Network connection is required to use the voice recognition function.

- 1. Press the voice recognition button.
- 2. Speak when the voice display window appears on the left of the TV screen.

