

2020 MR20 Magic Remote Button Functions

IR and (RF "Bluetooth" transmitter)

MIC

POWER

Power: Turns the TV Off and On



MUTE

Mute: Mutes all Sound

Mute: Accesses Accessibility Menu

- / LIST

- **(Dash):** Inserts a dash between numbers such as 2-1 and 2-2.

List: Accesses the saved channel list.

VOLUME UP/DOWN

Volume: Turns Volume Up or Down

VOICE RECOGNITION

Network connection is required to use the voice recognition function. Check for recommended content. (Some recommended services may not be available in so countries.

Speak while pressing and holding the button to use the Voice recognition feature.

HOME

Home: Accesses the Home menu.

Home Hold: Shows the Previous History.

WHEEL (OK) / CURSOR UP/DOWN/LEFT/RIGHT

Wheel (OK): Press the center of the Wheel button to select a menu. You can change channels by using the Wheel button. Press the Up, Down, Left or Right button to scroll the menu. If you press buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.

BACK

Back: Returns to the previous level.

Back Hold: Clears on-screen displays and returns to last input viewing.

NETFLIX

Netflix: Direct access to the Netflix App Streaming Service.

INPUT

INPUT: Changes the input source.

INPUT Hold: Displays all the lists of external.

MOVIES

Direct access to Streaming Service.

PAIRING: Press the Wheel OK button. 1st, Initializing, 2nd, Paired.

UNPAIRING: Press BACK and HOME together and hold for 5 seconds. LED Blinks 5 times indicating "Unpaired".

UNPAIRING and REPAIRING AT THE SAME TIME:

Press and hold GUIDE button for more than 5 seconds.

REPAIRING: (See Pairing).

STB PWR

STB PWR: You can turn your set-top box on or off by adding the settop box to the Universal Remote control for your TV.

NUMBERS

Numbers: Enters numbers.

9 # : Launch Quick Help.

MORE ACTIONS

Displays more remote control functions.

AD/SAP SAP (Secondary Audio Program) Feature can be enabled by pressing the ... key.

CHANNELS

Channels Up/Dn: Scrolls through the saved channels.

Q SETTINGS

Q Settings: Accesses the Quick Settings.

Q Settings Hold: Displays the All Settings menu.

QUICK ACCESS

Edits QUICK ACCESS

Is a feature that allows you to enter a specific app or Live TV directly by pressing and holding the number buttons.

GUIDE

Guide: Displays the program event according to time scheduler.

Amazon

Amazon: Direct access to the Amazon App Streaming Service.

RED, GREEN, YELLOW, BLUE

Red, Green, Yellow, Blue Buttons: These access special functions in some menus.

PLAY PAUSE

Play and Pause: Control buttons for media contents

2020 Bluetooth Magic Remote: Is not Backward compatible.

2 AA Batteries required.

