

2021 Magic Remote MR21GA

NOTE: 2021 Magic Remotes use “Blue-Tooth” for communication. 2021 M-Remotes ARE backwards compatible with many previous year models.

NOTE BATTERIES:

2021 Magic Remote uses two “AA” batteries.

(POWER)
Power: Turns the TV Off and On

IR and (RF
“Bluetooth”) Transmitter

MIC

Other p/n: AGF30136002

Using the Magic Remote:

01: If you shake the Magic Remote left and right or turn its wheel while pointing it at the TV, a pointer will appear on the TV screen. If you move the remote control in the direction you want, the pointer follows the movement.

02: Move the pointer to the location you want and press the **Wheel (OK)** button to execute the function.

03: If the pointer has not been used for a certain period of time, it will disappear. When the pointer disappears from the screen, shake the Magic Remote right and left. It will then re-appear. The pointer will disappear if you press the up, down, left, or right buttons, and the remote will work as a conventional remote.

-- If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen.

-- Use the remote control within the specified range (within 10 meters or 33 feet). The device may not function properly when outside the working distance or when an obstacle blocks the line of sight.

-- Depending on the peripherals (wireless router, microwave oven, etc.), communication failures may occur.


-- Impacts can cause the Magic Remote to malfunction.

-- Take care not to bump into nearby furniture, electronic equipment, or other people when using the Magic Remote.


-- For details on configuring the pointer of the Magic Remote, see

User Guide → Settings → System → Pointer Options.

Access voice recognition using Google Assistant

01: Press and hold the  button on the remote control and speak out the function you want to launch or the keyword you want to use for your search.

02: Once you release the  button after your speech input, the corresponding function is launched.

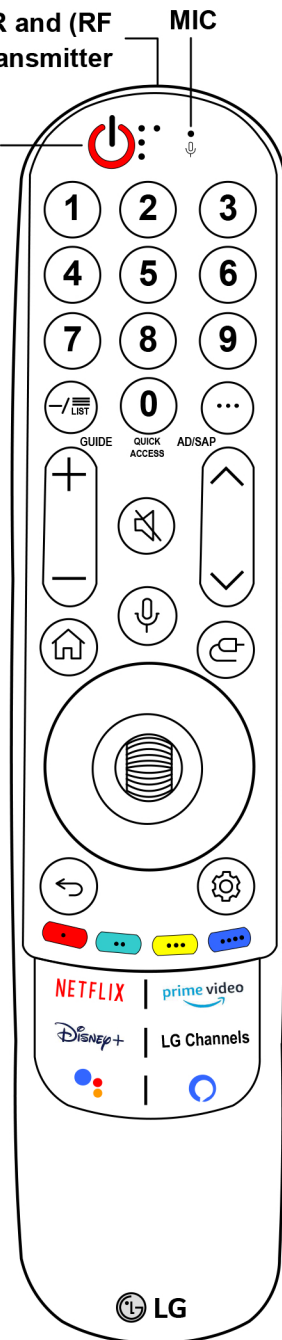

PAIRING: Press the Wheel OK button. 1st, Initializing, 2nd, Paired.

UN-PAIRING and REPAIRING AT THE SAME TIME: Press **HOME** and **SETTINGS** together and hold for 5 seconds. Instructions appear. Any previous paired remote is unregistered and pairing process begins.

9 # : Launch **Quick Help**.

0 # : The **QUICK ACCESS** edit screen appears.

... : It displays the additional buttons on the remote control.

 
... # : Configures SAP.

+ - : It adjusts the volume level.

 : Select to turn off the sound from the TV.

 # : Enter the **Accessibility** menu.

 : You can change the channel.

 : Check out the recommended contents. (Recommendation service may not be available depending on the countries you are in.) Push and hold the button while speaking to use the voice recognition function.

 : Displays the Home menu.

 # : Launches the last used app.

 : Selects an input source.

 # : Entering into the **Home Dashboard**.

 : Move to the previous step.

 # : Closes the menu.

 : Enters the Quick Settings menu.

 # : Enters the All Settings menu.

 # : Launch **Record**. (Not for US models.)

For Greater details, see the 55NANO85APA Owner's Manual