My Verizon

You're now part of a growing movement that's about speed, signal and strength. So go ahead, make vourself heard.

REGISTER at verizonwireless.com/ myverizon, to learn how to use your phone

- Go to My Verizon
- Click on Support
- Click on Get Help with Your
- Click on Select Another Device My Verizon allows you to manage vour account, pay your bill, purchase accessories & more
- Assistance is at your fingertips anytime at verizonwireless.com.

Customer Service is at your disposal at 1-800-922-0204 or at any Verizon Wireless Store.

A User Guide is available on demand simply download at support.vzw.com/ phones or call 1-877-268-7589 to order а сору.

Phone Features

Earpiece Main I CD Screen verizon 12 1111 -OK Kev / Contacts Directional Kevs 4 Left Soft Key Recent 6 Speakerphone Mobil Kev 6 Send Key International LG Call Prefix Key 8 Right Soft Key Clear/Voice Commands Kev Power/End Key Alphanumeric Kevpad Vibrate Mode Kev Microphone
 Microphone

0--0 ▲ Camera Lens 1:00 PM 0

Setting Up Your Phone

Step 1. Remove the Back Cover

- Hold the phone securely with both hands
- 2. Use your thumb to press down on the indentation near the bottom of the back cover and slide the cover upwards to remove it.



Step 2. Insert the Battery

Align the battery contacts with the terminals near the top of the battery compartment and press down until the battery clicks into place.



Step 3. Replace the Back Cover

Align the back cover over the battery compartment and slide it downwards until it clicks into place.



Port of your phone.

Powering your phone On/Off

- lights up.
- turns off.

NOTE: Devices and software are constantly evolving—the screen images and icons you see here are for reference only.

WARNING! Please use only an approved charging accessor to charge your device. Improper handling of the Accessory Charger Port, as well as the use of an incompatible charger may cause damage to your device and void the warranty.

Headset lack

2 Volume Kevs

Camera Key

Back Cover

Battery

Charger Port

G Front I CD Screen

Accessory /

Step 4. Charge the Phone

Your device comes with a Wall/USB charger and a USB cable which connect together to charge your phone. To charge your phone:

. Before turning on your phone, charge it fully. Be sure to use the charger that came with your phone.



NOTICE: Please make sure that the 'B' side faces up before inserting a charger or USB cable into the Accessorv/Charger

. To turn the phone on, press and hold the Power/End Key 🔊 until the screen

2. To turn the phone off. press and hold the Power/End Key Japan until the display

Making a Call

- Open the flip and enter the phone number using the keypad.
- 2. Press the Send Key I to dial the numher
- 3. Press the Power/End Key Jap to end the call

NOTE: Your phone has a Voice Commands feature that also lets you make calls by saying a phone number or Contact name To access it open the flip and press the Clear/Voice Commands Key and say Call followed by the name or numher

Receiving a Call

- 1. When the phone rings or vibrates, you can answer the call by simply opening the flip.
- Open the flip and press the Left Soft Key \bigcirc [Ouiet] to mute the ringing or vibration for that call
- Open the flip and press the Right Soft Key 🕞 [Ignore] to end the call and send the caller directly to Voicemail.
- Open the flip and press 🐼 [TXT] to end the call and send a quick text message.
- 2. Press the Power/End Key 🔊 to end the call, or simply close the flip.

Set Up Voice Mail

Dial *86 (*VM) and press the Send Key Then follow the setup tutorial.

Access Voice Mail

From your phone—Dial *86 and press the Send Key . When you hear the greeting. press # to interrupt. follow the prompts.

From any phone—Dial your wireless number. When you hear the greeting, press # to interrupt, then then follow the prompts.

NOTE: Voice mailboxes not set up within 45 days will be canceled. Your voice mailbox is not password protected until you create a password by following the setup tutorial.

Ringtones

Personalize your phone with ringtones. A wide variety of choices are available.

- Open the flip and press

 MENU

 .
- 2. Press **S** Media Center.
- 3. Press 🕬 Tunes & Tones.
- 4. Press **Bed** My Ringtones.
- 5. Use the Directional Key 🗂 to highlight a ringtone and press the Left Soft Key 🥏 [Set As]. You can press 📧 [PLAY] to preview the ringtone.

Bluetooth®

Allows you to turn Bluetooth on or off and connect to other Bluetooth devices

- 1. Open the flip and press @ MENU.
- 2. Press Settings & Tools.
- 3. Press 🖛 Bluetooth Menu.
- 4. Press the Left Soft Key ← [Turn On]

NOTE By default your device's Bluetooth® functionality is turned off

Text Messaging

Talk with your fingers. Make a bold statement with the touch of a button. For rates and complete information go to verizonwireless.com/messaging.

- . Open the flip and press the Left Soft Key [Message].
- 2. Press **I SI New Message**.
- 3. Press TXT Message.
- 4. Enter the phone number of the recipient or the email address for an email message. You can enter up to 20 addresses for a single message.

NOTE: If you enter a phone number or email address saved in your contacts, the contact name will appear in the To field.

5 Press the Directional Key C downward to access the text field

Backup Assistant[™]

com/hanlus for details

You can save your phone's address book

to a secure server. If your phone is lost or

Go to verizonwireless.com/baplus.

damaged, or if you upgrade to a new phone,

Backup Assistant will restore your contacts.

NOTE: Subject to specific terms of use. See verizonwireless.

- 6. Type your message in the text field.
- 7. Press @ [SEND] to send your message.

Camera

Take pictures that you can send to virtually any wireless number or email address. Snap a photo and send as a picture message.

- Open the flip and press the Camera Key 9.
- 2. Choose from the following options:
- Set the brightness by pressing the Directional Key 🗇 up and down.
- Zoom by pressing the Directional Key left and right.
- Press the Right Soft Key
 Options
 to set various camera settings.
- 3. Press @ [TAKE] or the Camera Key I to take the picture.
- 4. After taking the picture, select from the following options.
- Press the Left Soft Key
 Save to save the picture.
- Press
 SEND to send the picture to others.
- Press the Right Soft Key 🕞 Erase to erase the picture.

Apps & More

Play it up with music, ringtones, wallpapers. apps and games. For details and pricing, go to verizonwireless com

Data charges may apply.

Verizon Tones

Search, preview, purchase and manage ringback tones and ringtones from your favorite artists all in one place. Go to verizonwireless.com/mediastore.

Media Store

Find apps for entertainment, travel productivity, navigation, ringback tones, ringtones, games, wallpaper and more. Go to verizonwireless.com/mediastore.

Mobile Email

Check email on the go with popular internetbased email accounts, including Yahoo!" Mail AOI "Mail Gmail" Windows Live" Hotmail" and Verizon.net.

Mobile Web

Take the Internet with you on the go. You can reach the latest news, get the weather and follow your stocks. Open the flip and press (MENU). Press 4. [Mobile Web].

This phone can determine its location, which is useful for services such as navigation shopping and weather. For your safety, it's defaulted to only acquire your location when vou dial 911. To use Location Based Services. open the flip and press @ [MENU] > = Settings & Tools > 7 Phone Settings > 5 Location

This booklet is made from 60% post-consumer recycled paper This booklet is printed with soy ink

MBM63878701 (1.0) MW

©2013 Verizon Wireless, All Rights Reserved verizonwireless.com Printed in Mexico



Verizon SafeGuards

Family and Safety Apps & Services, Get the most robust parental controls. Go to verizonwirelss.com/safeguards.

Location Based Services

Your wireless device can determine its (and your) physical, geographical location ("Location Information") and can associate Location Information with other data. Additionally, certain applications, services and programs are capable of accessing, collecting, storing and using Location Information and disclosing Location Information to others. You should use caution when determining whether or not Location Information should be made available to others and you should review any applicable third party policies before providing access. To limit potential unauthorized access to your Location Information, Verizon Wireless offers various mechanisms and settings to manage access to location data. By enabling location settings you are permitting third party access to Location Information through software, widgets or peripheral components you choose to download, add or attach to your wireless device or through web access, messaging capabilities or other means and you are authorizing Verizon Wireless to collect, use and disclose your Location Information as appropriate to provide you with any location services that you enabled.

Customer Information

VZ Navigator[®]

Get premium GPS voice navigations and 3D maps with spoken real-time traffic alerts. Find movie times, event info and gas stations. Go to verizonwireless.com/navigator.

Your Wireless Device and Third Party Services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this wireless device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this wireless device or any non-Verizon Wireless applications, services and products including any personal information you choose to use. submit or share with others. Specific third party terms and conditions, terms of use, and privacy policies shall apply. Please review carefully all applicable terms and conditions and policies prior to using this wireless device and any associated application, product or service.

Hearing Aid Compatibility Information

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant. to determine if you hear any interfering noise. Consult vour service provider or the manufacturer of this phone for information on heawwaid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.



Start Here

