# LG Optimus G<sup>™</sup> Tips and Tricks

### NAVIGATION

- Gesture 1. You can use simple motion gestures to perform tasks with Optimus G. To access, from the Home screen, press **Menu Key** > **All settings** > General > Gestures.
  - 2. Tap an option to enable or disable it.

### CALLS and VOICEMAIL SETUP

- Make a Call 1. From the Home screen, touch 🤇
  - 2. From here, you have several options for placing a call:
    - Enter the number you wish to dial on the keypad.
    - Press and hold **1** to dial voicemail.
    - Touch **Call logs** and then touch **Call logs** and then touch number you wish to dial.
    - Touch Contacts to select a number from your contact list.
  - 3. To end the call, touch

Tip: From the Home screen, touch 🖳 in the Google™ Search bar. Say "Call [contact name]" or "Call [business name]" to place a call using Google Voice Actions.

- Answer When you receive an incoming call, touch **Answer**. a Call (You can also choose to **Decline** the call.)
  - 1. From the Home screen, touch 🥾
- and Check 2. Press and hold **1** and follow the voice prompts to set up voicemail.
  - 3. Once you have set up voicemail, repeat steps 1 and 2 anytime you wish to check voicemail.

Send a

Set Up

Voicemail

- Text or Multimedia
- Message
  - 3. Touch the Enter message field and enter your message.

1. From the Home screen, touch  $\subseteq$  >  $\square$ .

Contact list, Groups, or Favorites.

4. Touch 🖉 to attach a photo or other file. Select your attachment and touch OK.

2. In the To field, enter a number or a contact name

or touch 👤 to select a name from your Call log,

5. Touch send the message.

**Tip:** From the Home screen, touch  $\bigcup$  in the Google Search bar. Say "Send text to [contact name] [message]" to compose a message with Google Voice Actions.

### Please don't text and drive.

### PERSONALIZE

- Change the 1. From the Home screen, press the **Menu Key**
- **Ringtone and** and touch All settings > Sound. Sounds
  - 2. Touch Volumes to adjust settings, or touch Sound profile to change to Vibrate only or Silent modes.
  - 3. Touch **Phone ringtone** to view a list. Touch a ringtone to preview. Touch **OK** to select it.
  - 4. Touch **Notification sound** and follow the same procedure as in step 3 to change the alert for all notifications.
  - 1. From the Home screen, touch + > **Wallpapers**.
    - 2. Choose from your Gallery or Live wallpapers, or swipe to scroll through the wallpaper options. Touch a wallpaper to select it.
      - 3. Touch OK. You can also choose to set the wallpaper on the lock screen.
  - You can add widgets, apps, downloads, and more to your Home screen. Touch +, and then touch the category and item you wish to add.

3.5mm 🔪		
headset		Microphone
jack		
Proximity —		Camera lens
sensor	C LG	
Earpiece		Power/lock
Volume up/ down keys		key
	SUNDAY 2012 NOVEMBER	🕒 LG
MicroSIM ——		
card slot		Touch
microSD <sup>™</sup> ——		screen
card slot		
Back key 🔍		Menu key
Home key		
	Micro USB	Microphone
	charging port	

### ADD and ACCESS CONTACTS

- Add a 1. From the Home screen, touch **1**. 2. Touch  $\bigoplus$  and then touch each category to enter Contact information. Touch Next when finished with a category. 3. After entering all information, touch Save.
  - 1. From the Home screen, touch 🔼
  - 2. All of your contacts will be displayed. Touch a contact name to view details.

Tip: Enter a contact name in the Search contacts field to jump to that contact.

### EMAIL

Use Split

Inbox View

Access

Contacts

- Set Up Email
- 1. From the Home screen touch . (If you've already set up an account, press the **Menu** Key > Accounts to access the Email overview screen. Press the **Menu Key** and touch Add **account** to add an account.)
- 2. Touch the desired account type.
- 3. Enter your email address and password, and then touch Next.
- 4. Follow on-screen instructions and then touch Done.

Note: To set up corporate email, you may need information from your IT department.

- Create and 1. From an email account inbox, touch
- Send Email 2. Enter an email address or touch I to select a contact.
  - 3. Touch the **Subject** field and enter a subject.
  - 4. Touch the message field and compose your message.
  - 5. If desired, touch Attach to attach a photo. video, or audio file.
  - 6. Touch Send.

**Tip:** From the Home screen, touch **Q** in the Google Search bar. Say "Send email to [contact name] [message]" to compose an email with Google Voice Actions.

- 1. From the Home screen touch .
- 2. Rotate your phone to landscape view.
- 3. Your inbox will split into two screens.
- 4. Touch an email you would like to view.
- 5. A preview of the email you selected will appear to the right of your inbox.



- Add Items

## Wallpaper

to the Home Screen

- Change the

## LG Optimus G<sup>™</sup> Tips and Tricks (continued)

### SET UP BLUETOOTH® and WI-FI®

- Pair with a 1. From the Home screen, press the **Menu** Key and touch All settings > Networks > Device Bluetooth.
  - 2. Touch ( ) or to enable Bluetooth.
  - 3. Touch Search for devices to initiate a device search
  - 4. Touch the desired device to pair and connect with it. (If asked to enter a PIN or passcode, consult the Bluetooth device manual for more information.)
  - 5. To turn Bluetooth power off, touch .
  - 1. From the Home screen, press the **Menu** Key and then touch All settings > Networks
- Connect to a Wi-Fi Network

an App

- 2. Touch 🕢 🖙 to enable Wi-Fi.
- 3. Touch a network.

> Wi-Fi.

4. If required, enter a password. Touch Connect.

### **GOOGLE PLAY**

- 1. From the Home screen, touch  $\parallel \parallel > 1$  and then Download accept the Terms of Service. (You will need to sign into a Google account first if you have not already done so.)
  - 2. Touch Apps, Music, Magazines, Games, Books, or Movies & TV to see a category overview of available entertainment. Touch  $\mathbb{Q}$ to search for a specific app.
  - 3. Touch an app to view details. Touch Download or **Install** (free apps) or the price (paid apps) to download it.
  - 4. Touch Accept & download to continue.
  - 5. To view your downloads, touch i > **Downloads**.

### **QSLIDE FUNCTION**

- 1. While watching an on-device video, touch . The video continues to play as an overlay on your phone.
- 2. Use the slider to adjust the transparency of the overlay.
- 3. Touch 😐 to send a text while in QSlide mode. You can also make a call, browse the web, or choose other phone options.
- 4. Touch 🗔 to exit the QSlide function.

Tip: You can also access the QSlide function from QuickMemo<sup>™</sup>.

### Visit att.com/tutorials for more information.

### **USE THE CAMERA and CAMCORDER**

Take a Picture	<ol> <li>From the Home screen, touch 10.</li> <li>When ready, touch          <ul> <li>to take the picture.</li> </ul> </li> </ol>
Take a Panoramic Picture	<ol> <li>From the Home screen, touch .</li> <li>Touch &gt; Panorama.</li> <li>Touch to take the first shot.</li> <li>Move the phone to the left or right until the blue scroll bar fills. Optimus G will create a panoramic picture.</li> </ol>
Record a High- Definition Video	<ol> <li>From the Home screen, touch .</li> <li>Touch .</li> <li>to toggle to the camcorder.</li> <li>Touch .</li> <li>to start recording.</li> <li>Touch .</li> <li>to stop recording video.</li> </ol>
Share a Picture or Video	<ol> <li>From the Home screen, touch I &gt; .</li> <li>Touch an album.</li> <li>Touch ≤ and then touch the image(s) you wish to share.</li> <li>Touch Share.</li> <li>Select a destination and follow the on-screen instructions.</li> </ol>
Timestamp View	<ol> <li>From the Home screen, touch is &gt; .</li> <li>Touch the Albums tab to view options.</li> <li>Touch Timestamp to view images by date.</li> <li>Touch a date to chow photos and videos taken</li> </ol>

Touch a date to show photos and videos taken on that day.

### SOCIAL NETWORKING

Set Up an Account	<ol> <li>From the Home screen, touch &gt; .</li> <li>Enter the email address and password associated with your account and touch Log In.</li> <li>Select a sync option and then touch Sync or Done.</li> </ol>	
Social Network Integration	When you sync your contacts with Facebook <sup>®</sup> , a link to your friends' Facebook profiles appears in their contact information.	
Social	The Social+ widget shows your friends' latest	

The Social+ widget shows your friends' latest Facebook and Twitter® updates right on your home Network screen. Touch to open the full application.

### **BROWSE THE WEB**

Go to a

Website

Add/Delete

**Bookmarks** 

Use the

Browser Bar

From the Home screen, touch

2. Touch the web address bar to enter a web address, and touch Go.

**Tip:** To zoom in or out, try double-tapping on the screen or use a spread/pinch gesture.

**Tip:** From the Home screen, touch  $\mathbb{Q}$  in the Google Search bar. Say "Go to [website name]" to open a webpage using Google Voice Actions.

- 1. To add a bookmark, from the webpage you want to bookmark, press the 📃 Menu Key and touch Save to bookmarks > OK.
- 3. To remove a bookmark, press the **Menu** Key and touch Bookmarks.
- 4. Press and hold the bookmark you want to remove, and then touch **Delete bookmark** > Yes.
- 1. To reveal the Browser Bar, swipe up from the bottom of the browser screen.
- 2. To add a button, touch Add More + and select a choice or create one of your own.
- 3. Go to Settings 🚳 to disable the Browser Bar, access the Tutorial, and more.

**Tip:** To open a new browser tab, touch  $\boxed{1} > +$ .

### QUICKMEMO

- 1. From any screen, swipe down on the Notifications Bar and touch QuickMemo.
- 2. Use your fingertip to draw or write on the screen.
- 3. Touch 🖉 to change the pen type or color.
- 4. If you make a mistake, touch it to access the eraser, or touch 🥿 to undo your last pen stroke.
- 5. To save your creation to the Gallery, touch 🗐. Touch < and follow on-screen instructions to share your memo.
- 6. To exit QuickMemo at any time, press the 🗲 Back Key.

IMPORTANT INFORMATION: Coverage not available in all areas. Some restrictions apply, see complete terms and conditions. © 2012 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. Nitro is a trademark of LG Electronics, Inc. Google and the Google logo are trademarks of Google Inc. Android is a trademark of Google Inc. The Éluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics MobileComm, U.S.A., Inc. is under license. All other marks contained herein are the property of their respective owners.

Widget

