

QUICK START GUIDE

LG Optimus F5

Your phone

Most of what you need can be accessed from the Home screen canvases and four simple keys on the front of the device:

- **Menu Key:** Open available menu options.
- **Home Key:** Go to the Home screen.
- **Back Key:** Go back one screen.
- **Recent App Key:** View a list of recently used applications.



Start

Let's get you up and running.

Caution

Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.



Initial setup

The first time you turn on your phone, a setup wizard guides you through configuring various settings and signing in to your Google account. If you don't have one, don't worry, the wizard will help you create one.


NOTE This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.



Touch tips

It's all in the touch:

- **Touch:** Choose an icon or option.
- **Touch & Hold:** Open available options.
- **Drag:** Scroll or move slowly.
- **Flick:** Scroll or move quickly.
- **Pinch-to-zoom:** Get a closer look at Google Maps™, web pages, or photos.

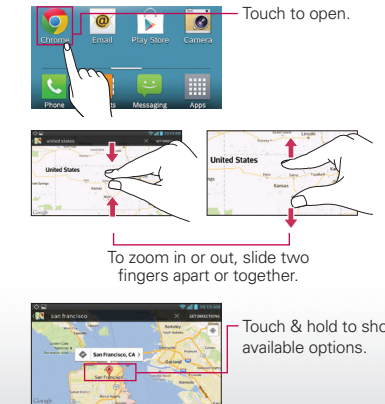

Home screen

The Home screen gives you all your latest information in one place. It's what you see when you turn on the phone or touch **Home**.


Use the widgets, shortcuts and canvases to see what's important to you. To make the Home screen yours, see the "Personalize" section.



Calls

Your dialer and call lists are just a touch or two away—no menus needed. Just touch **Phone**.


TIP During a call, touch **Home** or **Back** to hide the active call screen and use other apps. To reopen it, touch **Phone**.

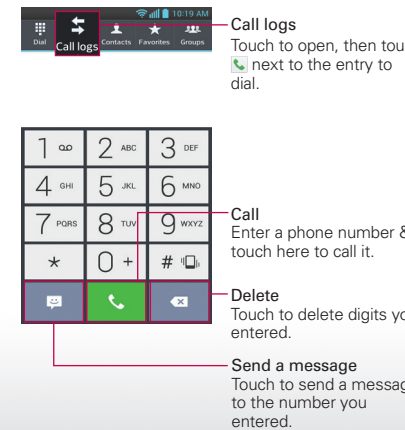


Personalize

Go ahead, add your personal touch. Change your widgets, wallpaper, ringtone, and more—make it yours.

• **Home screen:** To add widgets, app shortcuts, or change your wallpaper, touch and hold an empty spot on the Home screen until you see the Home screen menu.

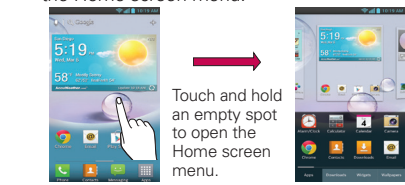

• **Ringtones & sounds:** From the Home screen, touch **Menu** > **System settings** > **Sound** > **Phone ringtone** or **Notification sound**.

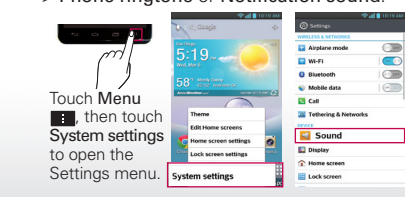


Messages

Your LG Optimus F5 combines text and multimedia messaging into one intuitive, easy-to-use application.

Sending a message

1. From the Home screen, touch **Messaging** in the Quick Keys bar, then touch to create a new message.
2. Enter a contact name or contact number in the **To** field. You can touch a suggested recipient and add multiple contacts.
3. Enter the desired text and touch **Send**.


NOTE You will be charged for a message for every person you send the message to.

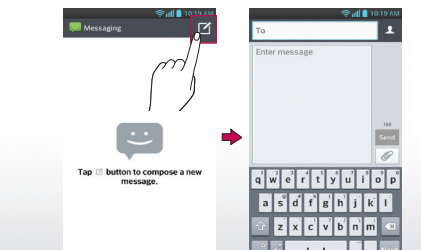

Contacts

Now you have contacts like you've never had before. View, search, and use them your way. From the Home screen, just touch **Contacts** in the Quick Keys bar.

TIP To quickly find a contact, use the alphabet letter list at the right of the contacts list. To search the list, just touch the **Search contacts** field and type a name.

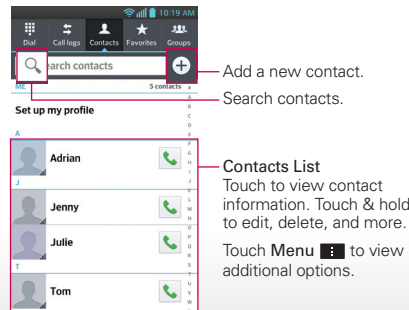


- Add a new contact.
- Search contacts.
- Contacts List: Touch to view contact information. Touch & hold to edit, delete, and more.
- Touch Menu to view additional options.

Email

To access the Email app, touch **Email** from the Home screen.

To add email accounts, choose **Microsoft Exchange** for Microsoft™ Exchange work email (for settings, ask your IT administrator) or **Other** for most other accounts (for settings, ask the account provider).

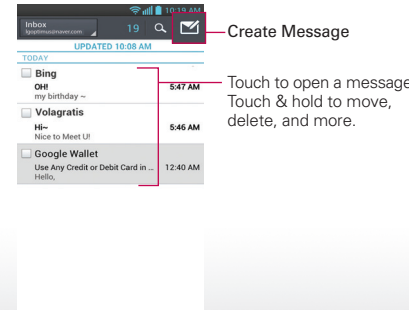


- Create Message
- Touch to open a message. Touch & hold to move, delete, and more.

Media

See it, capture it, share it! Then, relax with some music.

- Photos:** To take a photo, touch **Camera** from the Home screen.
- Videos:** From the Home screen, touch **Camera** > **Mode switch**. To record a video, touch **Mode switch**. To stop recording, touch **Mode switch**.
- To see the photos and videos you've taken, from the Home screen, touch **Apps** > **Gallery**.
- Music:** From the Home screen, touch **Apps** > **Music** to open your music library and select what you want to play.

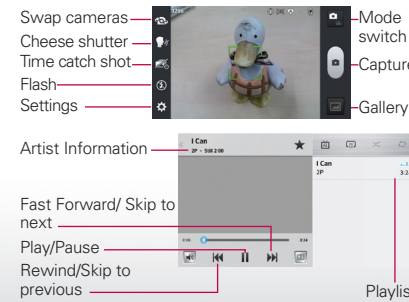


- Swap cameras
- Cheese shutter
- Time catch shot
- Flash
- Settings
- Mode switch
- Capture
- Gallery
- Artist Information
- Fast Forward/ Skip to next
- Play/Pause
- Rewind/Skip to previous
- Playlist

Web & maps

Browse, download, and search (of course). Find where you are or where you're going.

- Browser:** Touch **Chrome** from the Home screen and surf using the super fast 4G and Wi-Fi connections.
- Google Maps™:** From the Home screen, touch **Apps** > **Maps** to use the Google Maps you know and love.

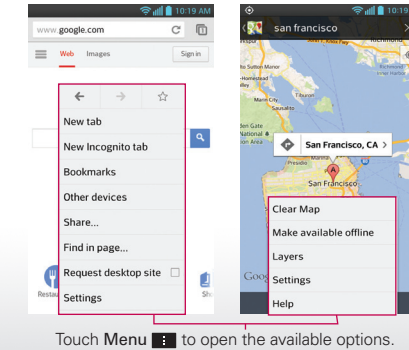


Touch Menu to open the available options.

Apps

All your apps, all together:

- Menu:** To open the Apps screen, touch **Menu** from the Home screen. To close the Apps screen, touch **Home**.
- Search:** Touch **Search** from the Home screen and enter the app name.
- More:** Touch **Play Store** from the Home screen to download your favorites.

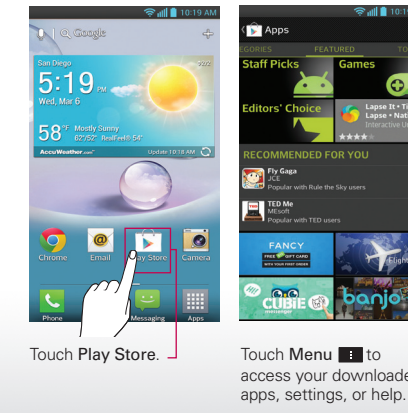


Touch Play Store. Touch Menu to access your downloaded apps, settings, or help.

Wireless

Lose the wires—from the Home screen, touch **Menu** > **System settings** > **WIRELESS & NETWORKS** section.

- Bluetooth™:** For handsfree calls and wireless music, touch **Bluetooth** and connect to your accessory.
- Wi-Fi:** For fast internet access, touch **Wi-Fi** and connect to a home, office, or hotspot network. For connection details, touch **Menu** > **Advanced**.

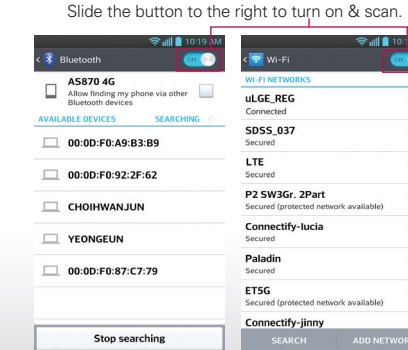


Slide the button to the right to turn on & scan.

QuickMemo™

Use QuickMemo to easily and efficiently create memos during a call, with a saved picture or on the current phone screen.

- Press both Volume Keys for one second on the screen you want to capture. Or, touch and slide the Status Bar downwards and touch **QuickMemo**.
 - Select the desired menu option from **Pen type**, **Color**, and **Eraser**. Then create a memo on the screen.
 - Touch **Save** in the Edit menu to save the memo.
- NOTE** Please use a fingertip while using the QuickMemo feature. Do not use your fingernail.

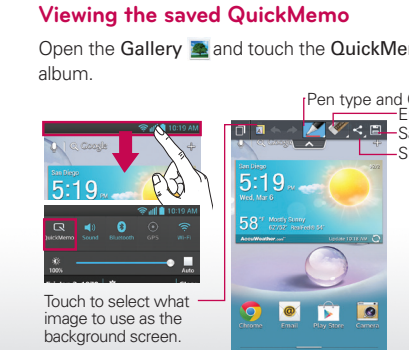

Viewing the saved QuickMemo: Open the Gallery and touch the QuickMemo album.


Touch to select what image to use as the background screen.

Tips

Here are some good things to know:

- Sleep/wake phone:** Press **Power/Lock**.
- Set screen timeout:** From the Home screen, touch **Menu** > **System settings** > **Display** > **Screen timeout**.
- See Recent Apps:** Touch **Recent Apps**.
- Turn Sound On/Off:** Press and hold **Power/Lock**, then touch **Speaker**.
- Search:** Touch **Search**.

From the Home screen:

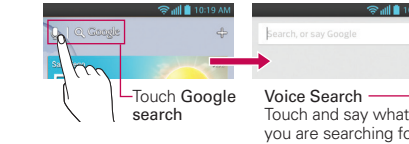

To access a notification, drag the Status Bar down and touch the desired notification.

