



OWNER'S MANUAL

Network Camera

Please read this manual carefully before operating your set and retain it for future reference.

MODELS

LNB5220

LND5220R

LNB5320



Contents

Introduction	3
Operation and settings	4
Before using the system	4
Recommended PC Requirements	4
Accessing the LG IP device.....	5
LG Smart Web Viewer Overview	6
Configuration menu overview	7
Configuring the LG Network Camera Device.....	7
Accessing the Configuration menu.....	7
System settings.....	8
Audio & Video settings.....	11
Network settings.....	19
User settings	23
Event settings.....	24
Reference	28
Troubleshooting	28
OPEN SOURCE SOFTWARE NOTICE	29
Specifications.....	30

Introduction

The LG Network Camera is designed to use on an Ethernet network and must be assigned an IP address to make it accessible.

This manual contains instructions on how to install and manage the LG Network Camera in your networking environment. Some knowledge of networking environments would be beneficial to the reader.

Note that design and specification of this unit may change from the manual as quality and improvement without prior notice. Should you require any technical assistance, please contact authorized service center.

Operation and settings

Before using the system

- Before using the LG IP device make sure the connections are correct and verify whether proper power supply is used.
- Check the connections of the LG IP device for the correct conditions.
- Check that the LG IP device is(are) connected to the network and that power is supplied.
- Once the connections are made you need to install the LG client program to the PC from which you want to access the device. The LG Smart Web Viewer program is automatically installed when you connect the LG IP device. The LVi510 and the LG Smart Web Viewer program are the network program of the LG Video Server and the LG IP cameras.
- To view streaming video in Internet Explorer, set your browser to allow ActiveX controls. If you find this message "This website wants to install the following add-on: 'IPCam_Streamer.cab' from 'LG ELECTRONICS INC'", Click the yellow bar and install LG Smart Web Viewer Program on your computer. Please set your browser zoom level to 100%.
- The Layouts and the Live view pages may differ with different OS (Operating Systems) and Web Browsers.
- Care needs to be taken not to run any other applications when the Client Program is running as it may cause memory shortage.

Recommended PC Requirements

The LG IP device can be used with most standard operating systems and browsers.

Items	Requirements
Operating System	Windows XP Professional, Windows VISTA, Windows 7
CPU	Intel Core2 Quad Q6700 (2.66 GHz) or above
Web Browser	Microsoft Internet Explorer (32 bit) above the version 8.0 and below the version 11.0.
DirectX	DirectX 9.0c (Windows XP), DirectX 11 (Windows Vista/7) or above
Memory	2 GB or above RAM
Graphics Card	256 MB or above Video RAM
Resolution	2048 x 1536 (with 32 bit color) or higher

Note:

For Windows 7, please download & install 'DirectX End-User Runtime Web Installer'.

"<http://www.microsoft.com/en-us/download/details.aspx?id=35>"

Accessing the LG IP device

You can access the LG IP device by following the below steps.

1. Install LVi510 Program

It recommended to use LVi510 surely.
Otherwise, it is required to install the IP Utility [Package>Tools>LG IP Utility Installer] to search the IP addresses of LG IP devices.

2. Discover the LG IP device using the IP Utility

The IP Utility can automatically discover and display LG IP devices on your network.

The IP Utility shows the MAC address, IP address, Model name and so on.


Note:

The computer running the IP Utility must be on the same network segment (physical subnet) as the LG IP device.

- 2.1 Run the IP Utility program.
- 2.2 Click the [Search] button or select the [Search] option in the Device search menu.
After a few seconds the found LG IP devices gets displayed in the IP Utility window.

3. Logging in to the LG Smart Web Viewer

- 3.1 Run the IP Utility and find the LG IP devices.
- 3.2 When the LG IP devices appear in the IP Utility window, double-click IP address or right click on the same IP address and select "Connect to Web Page" to start the LG Smart Web Viewer. When accessing the LG Smart Web Viewer, the window for login will be shown. Select the language in drop-down list on right top of the window.

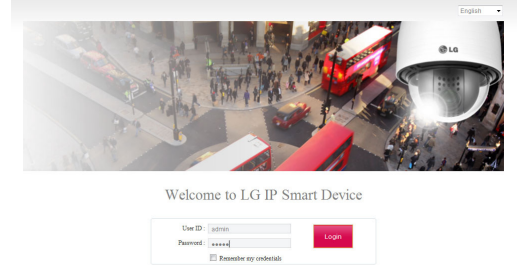

- 3.3 Enter the user name and password. (Note that the default administrator user name and password are "admin".)


Note:

Default password must be changed for security after initial connection.






Note:

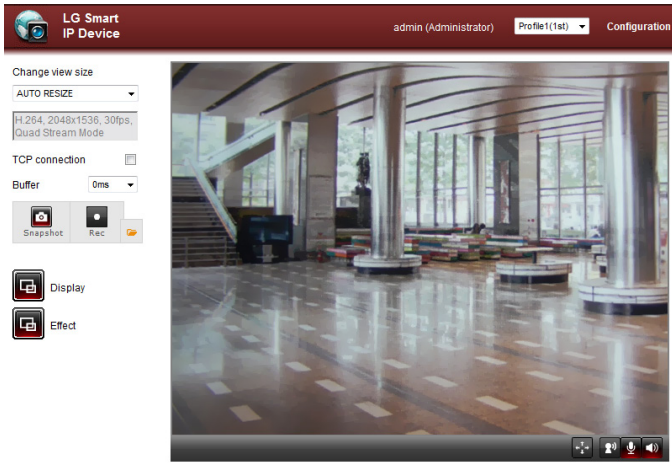




- You can also access the LG Smart Web Viewer as shown below.
 - 3.1 Start your Web browser.
 - 3.2 Enter the IP address of the LG IP device in the address bar of the browser.
 - 3.3 Enter the user name and password set by the administrator.
- Check the browser cookies settings to use the [Remember my credentials].
- If LG Smart Web Viewer is required to be updated, it needs more time to display according to the network conditions.
- If you connect the LG Smart Web Viewer for the first time, the Security Warning window is displayed to install the LG Smart Web Viewer program. You must install the LG Smart Web Viewer program for using the LG IP device.
- If your computer or network is protected by a proxy or firewall, the proxy or firewall settings can prevent the LG Smart Web Viewer program. Change the proxy or firewall settings to activate the LG Smart Web Viewer program.

LG Smart Web Viewer Overview



Item	Description
<p>Change view size</p> <p>AUTO RESIZE</p> <p>H.264, 2048x1536, 30fps, Quad Stream Mode</p> <p>TCP connection <input checked="" type="checkbox"/></p> <p>Buffer 0ms</p> <p>Snapshot</p> <p>Rec</p>	<p>Select the video image size from the drop-down list. (FULL SCREEN / AUTO RESIZE / x0.5 / x1 / x2 / D1 / CIF)</p> <p>Note:</p> <ul style="list-style-type: none"> Select [FULL SCREEN] to enlarge full screen of monitor. To return previous screen, press ESC key or double click. When you select [AUTO RESIZE], size of live view screen fit to window. Ratio imaging is fixed by width and height based. When you change view size option larger on high resolution image, browser function may not work smoothly.
H.264, 2048x1536, 30fps, Quad Stream Mode	It displays Video Codec, Resolution, FPS and Preset Mode of the selected video stream.
TCP connection <input checked="" type="checkbox"/>	Check this option as the network connection type (TCP or UDP). If you check it, the client connects to the server using TCP connection.
Buffer 0ms	Select buffering time of live stream.
Snapshot	Click to save the current image in JPEG format on your computer. Note: It is not displayed the area of MD and SVA in Snapshot file.
Rec	Click this button to record the video. To stop the recording, click this button again during recording. Note: If recording exceed the time (1 hour) or size limit (1 GB), recording is stopped automatically with warning.
	Click this button to change the folder to be stored the images and videos.

 Display	<p>Click to display the check box of [Hostname], [Framerate] and [Bitrate] options. Select the [Position] on [Display] menu. (Top Left / Top Right)</p> <p>Video Analysis</p> <ul style="list-style-type: none"> Hide: Video Analysis display function is not in use. SVA: Displays the Smart Video Analysis function to the live view window. MD: Displays the Motion Detection function to the live view window. <p>Note:</p> <ul style="list-style-type: none"> While the [Pivot] is activated, on Profile2, Profile3 and Profile4, MD is available when a profile is set to the same codec with Profile1. When you use the DPTZ function, all of Display function is deactivated for a while.
 Effect	<p>Click to effect and then check the check box of [Edge Enhancement] option. The user gets more sharp reception on the live view window. Check the check box of [Aspect ratio] option to display the image to fit the aspect ratio.</p> <p>Note: This feature only affects the live view window.</p>
 PTZ control	<p>Displays the PTZ (PAN / TILT / ZOOM) control window.</p> <p>Note:</p> <ul style="list-style-type: none"> The Zoom / Focus adjustment is recommended during installation only. If you adjust the Zoom / Focus after completed the install, the screen is changed and feature set may behave differently. LNB5220 / LNB5320 are not supported the PTZ control. LND5220R is supported the Zoom / Focus only.
	<p>Select the video stream. From the Live view drop-down list, select the desired video image source.</p> <p>Note: You can set the stream configurations independently. This would facilitate the user to set the live view at his comfort.</p>
	<p>Provides all the necessary tools for setting up the device to your requirements. The user will need administrator level to do this.</p> <p>Note: If you want to exit the Configuration menu, select one of the video stream in the Live view drop-down list or click LG Smart IP Device icon.</p>

	Displays the current surveillance live screen. You can monitor the camera image on the live view window of the LG Smart Web Viewer.
	Click this button and drag the area to use Digital PTZ function. Right-clicking the screen will bring up the previous magnification. (Color icon: On, Gray scale icon: Off.)
	Click this button to connect or disconnect the audio communication between the LG IP device and the connected PC. (Color icon: On, Gray scale icon: Off.)
	Click this button to switch the microphone off and on for the computer. Note: When the audio is enabled both In and Out, microphone can be available to select the On/Off. (Color icon: On, Gray scale icon: Off.)
	Click this button to switch the sound off and on, for the speaker of the computer. (Color icon: On, Gray scale icon: Off.)

Configuration menu overview

The following table shows the list of menu items.
The configuration images are different from each model.

Main Menu	Sub Menu	Note
System	Version	
	Date & Time	
	Maintenance	
	Storage	
	Text Overlay	
	Log & Report	
	Language	
Audio & Video	Camera	
	Stream	
	Audio	Option
	PTZ config	Option
	Preset	Option
Network	Basic	
	RTP stream	
	TCP/IP	
	DDNS	
	IP filtering	
	SNMP	
	QoS	
	802.1x	
User	Basic	
Event	Event server	
	Sensor & Relay	
	Motion Detect	
	Audio Detect	Option
	Smart Analytics	
	Triggered Event	
	Scheduled Event	

Configuring the LG Network Camera Device

The features and options of the LG IP camera are configured through the Configuration menu.

Only administrator-level users have permission to access the Configuration menu.

Accessing the Configuration menu

Click the [Configuration] button to display the LG Smart Web Viewer configuration window.

Warning

The Configuration setup should be made by qualified service personnel or system installers.

System settings

Version

Displays the current Model Name, Software, ISP and MCU version.

Menu	Version list
System	Version list
Version	Model Name: LNB5320
Date & Time	Software version: 2567.0.0.1506080
Maintenance	ISP Version: 150602
Storage	MCU Version: 150302130
Text Overlay	Copyright: Copyright 2009 LG Electronics. All Rights Reserved. (OSS)
Log & Report	
Language	
Audio & Video	
Network	
User	
Event	

Note:

Click OSS(Open source software) link to check the information about Open source software.
Refer to the [OPEN SOURCE SOFTWARE NOTICE] of [Reference].

Date & Time

Menu	Date & Time
System	Time zone: (GMT+0:00) GMT
Date & Time	Time mode
Maintenance	Synchronize with NTP server: pool.ntp.org
Storage	Time will be synchronized with NTP server every: 1 hour
Text Overlay	Click button to test this server: [Test]
Log & Report	Synchronize with personal computer: 2015-03-24 19:03:51
Language	Synchronize manually
Audio & Video	Date: 2015-03-24 Time: 19:03:50
Network	Server time: 2015-03-24 10:05:34
User	[Save]
Event	

Time zone

Set the time difference from GMT in the area where the IP device is installed. Select the time zone in the area where the IP device is installed from the drop down list.

Time mode

- > Synchronize with NTP Server: Select if you want to synchronize the IP device's date and time with those of the time server called NTP (Network Time Protocol). Specify the NTP server's name. Click the [Test] button for connection test to the server.
- > Synchronize with personal computer: Select if you want to synchronize the IP device's date and time with your computer.
- > Synchronize manually: Select if you want to set the IP device's date and time manually. Select the year, month and date by clicking the calendar button. Set hour, minutes and seconds in the edit boxes.

Note:

- When system reboot after time setting, time of system could be delayed. If you set the time correctly, set the [Synchronize with NTP server] option.
- Refer to NTP configuration as operation system of the Recording Server when the Recording Server use recording function and NTP server.

Server time

- > Server time: Displays the current date and time of the IP device.
- Save: Click this button to confirm the settings.

Maintenance

Menu	Maintenance
System	System reboot: Click button to reboot this system. [Reboot]
Version	
Date & Time	
Maintenance	Backup & Restore: Click button to backup current configuration. [Backup]
Storage	Click button to restore configuration from backup file. [Restore]
Text Overlay	[Browse...] [ex: c:\backup.config]
Log & Report	
Language	
Audio & Video	Firmware: Click button to upgrade firmware. [Upgrade]
Network	[Browse...] [ex: c:\firmware.dat]
User	
Event	Click button to initialize the system. [Initialize]

System reboot

Click the [Reboot] button to restart the IP device. It takes some minutes for the IP device to start again.

Backup and restore

- > Backup: To take a backup all of the settings. If necessary, it make possible to return to a backup configuration.
 1. Click the [Backup] button.
 2. Click the [Save] button.
 3. Follow the instructions on the browser to specify the folder.
 4. Click the [Save] button to save the settings.
- > Restore:
 1. Click the [Browse] button.
 2. Find and open the file in which the configuration setting data is stored.
 3. Click the [Restore] button and the system settings will be restored and reboot the system.

Note:

Backup and Restore can happen on IP device having the same version of firmware. This feature is not intended for multi-configurations or for firmware upgrades.

Firmware

- > Upgrade
 1. Click the [Browse] button.
 2. Find and open the firmware file.
 3. Click the [Upgrade] button to update the firmware.

Note:


When you upgrade the system, it may take some minutes to be done. Do not close the browser while the upgrade is in progress. If you close the browser, it may cause a malfunction. You should wait until the confirmation window is displayed. When the upgrade is finished, the confirmation window will be displayed.

- > Initialize: The [Initialize] button should be used with caution. Clicking it will return all of the IP device's settings to the factory default values. Except for the Network settings, PTZ Protocol and Preset settings. (The option depends on the model.)

Note:

Refer the "Clear browser's Cache" of Troubleshooting.

Storage

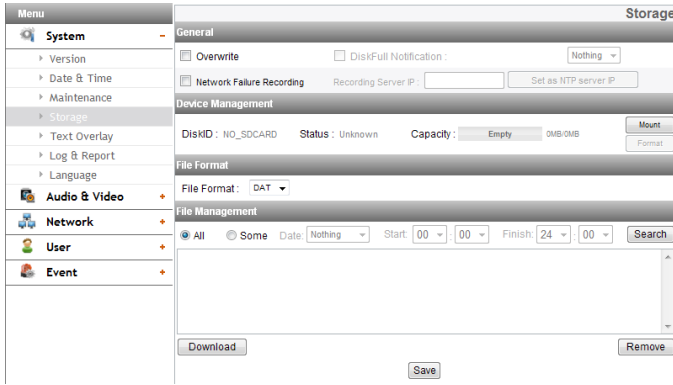

General

- > Overwrite: If the micro SD card has insufficient space and this option will be activated. It will overwrite the oldest data.
- > DiskFull Notification: Sends an warning e-mail to the SMTP server when the micro SD card has fully recorded. Select the SMTP server from the drop-down list. You should register the SMTP server on the Event server setting to set this function.
- > Network Failure Recording: Select the check box to activate the micro SD card recording function. If the system does not work with recording server, the system will record the data to the micro SD Card. When the system connect to the recording server again, the recorded data of the micro SD card will transfer to the recording server automatically.
- > Recording Server IP: Enter the recording server IP.
- > Set as NTP server IP: Click this button to use the entered Recording Server IP as the NTP server IP.

Note:

- The recorded file name is made automatically as the "[Created date of the file]_[GMT Recording Time].DAT" type.
- If the capacity of the SD card remains less than 200 MB, stop recording or overwrite new file after delete old one as [Overwrite] setting. The overwritten file can not play or may malfunction when you download.
- Recorded file on the SD card, is recording 1 frame per second when set video codec to MJPEG.

Device Management

- > Using the micro SD card
 1. Insert the micro SD card carefully to the micro SD card slot of the camera.
 2. Click the [Mount] button. If the micro SD card is mounted to the system correctly, the [Mount] button will be changed to the [Unmount] button.
 3. Displays the information of the [Disk ID], [Status], [Capacity] options.

Note:

- When the micro SD card is mounted, you should format the micro SD card. After the micro SD card format is finished, you should click the [Mount] button to use it.
- When you use the micro SD card format function, it may not progress immediately. In this case, you should try it again after waiting a few minutes.
- In the case of the [DiskID:SDCard] or [Status:Unknown], you can run the micro SD card by using the format function. (For example, initial insertion of micro SD Card over 64 GB)

- > Remove the micro SD card
 1. Click the [Unmount] button. If the micro SD card is unmounted from the system correctly, the [Unmount] button will be changed to the [Mount] button.
 2. Remove the micro SD card from the micro SD card slot of the camera.

Note:

When you use the Unmount function, it may not progress immediately. Operations such as recording of the system and reading of data are required stop time before the Unmount function is activated. You should try it again after waiting a few minutes.

File Format

- > File Format: You can select the Recording File Format (AVI or DAT). Recording, Search and Download are available according to the setting.

Note:

- SD Recording or FTP (Video) Sending Format are set according to the setting. When you select to AVI, [Auto Recording function] may not be activated in case of network error.
- IP Camera's time will be appeared in players based on DirectShow such as Windows Media Player and MPlayer.

File Management


Displays the recorded file of the micro SD card on the list. Click the [Search] button to display the recorded file. The list will be updated when you click the [Search] button.

- > To view the recorded file of the micro SD card
 1. Select the search option.
 - All: Search the all recorded files in the micro SD card.
 - Some: You can set the search condition by using the date and time options.
 2. Click the [Search] button and then the search result is displayed on the list.
- > Download: You can download the recorded data of the list to your PC. Select a recorded file on the list and click the [Download] button. The two confirmation window is displayed. You should download the all files that the recorded file (*.DAT) and information file (*.INFO). You can download as AVI file according to File format.


Note:

- It is recommended to deactivate the [Overwrite] function before you download the file. When [Overwrite] function is activated, the downloading file might be overwritten, if the micro SD card has insufficient space.
- The downloaded file can be played by using the LG File player.
- > Remove: Delete file from the SD card.
- Save: Click this button to confirm the settings.

Text Overlay

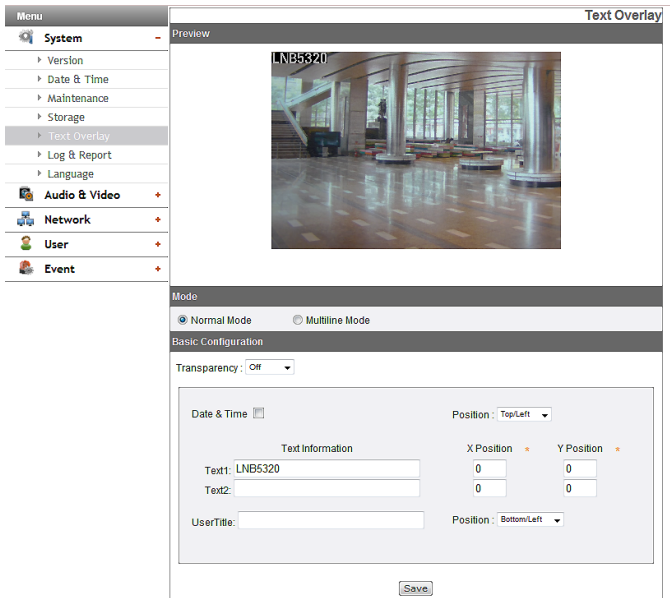

- > User Title: Enter the user title. The user title is displayed on the right bottom of screen.

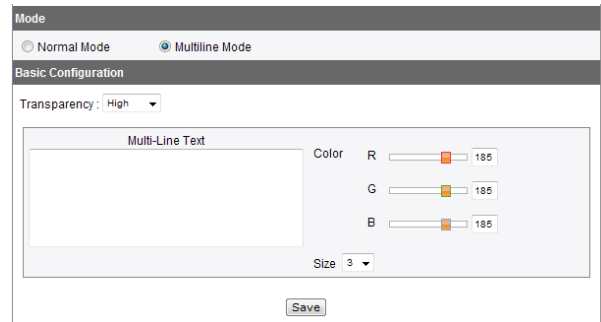

- > Multi-Line Text: Enter characters in the text field.
- > Color: You can make any color by adjusting R.G.B LEVEL.
- > Size: You can adjust the font size.

Note:

- The [Multi-Line Text] is an one off feature. When refresh a browser to connect this option again, the text input field of [Multi-Line Text] is cleared but contents of text overlay are remained on a live view screen.
- If you use below features, text overlay is changed [Normal Mode] :
[System>Maintenance>Reboot],
[Audio & Video>Camera>Install>Install Preset],
[Audio & Video>Camera>Install>Sensor Framerate]
- Text can be blurred depending on background scene and codec quality. In this case, you can set the text area as the Smart Codec.
- Save: Click this button to confirm the settings.

Preview

You can preview the camera image on the preview window.

Mode

- > Normal Mode: Follow the normal procedure of text overlay option by selecting the [Normal Mode].
- > Multiline Mode: Set more characters, color and size of the text overlay by selecting the [Multiline Mode]. The saved text overlay is displayed on the left top of screen.

Basic Configuration

When you select the [Normal Mode], you can adjust the [Date&Time], the [Text Information], the [X position], the [Y position] and the [User Title] function. And other functions are able to adjust by selecting the [Multiline Mode].

- > Transparency: You can adjust the background transparency of text .
- > Date&Time: Click the check box of [Date&Time] to display time and date of Client PC. ([Top/Right], [Top/Left])
- > Text Information: Enter characters in the text field. (From [Text1] to [Text2]) The number of maximum input character is unlimited. Refer to below recommendation.
 - Applicable model: LNB5220 / LND5220R


Resolution	Maximum X Position	Maximum Y Position
1920 x 1080	41	22
1280 x 720	28	15
D1	29	23
CIF	24	16

- Applicable model: LNB5320

Resolution	Maximum X Position	Maximum Y Position
2048 x 1536	21	15
1920 x 1080	28	15
1280 x 1024	32	25
1280 x 720	23	12
D1	21	16
CIF	18	12

- > X Position: Set the horizontal position of each text overlay.
- > Y Position: Set the vertical position of each text overlay.
- > Position: You can designate the position of text from drop down list.

Log & Report

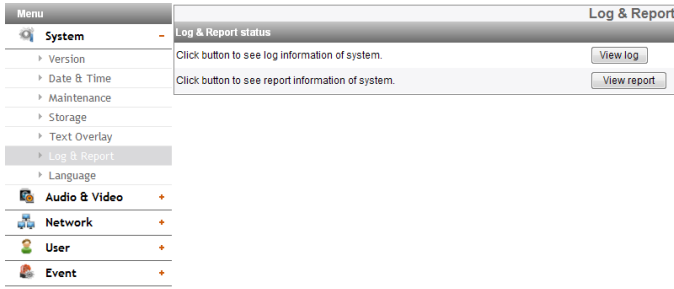

Log & Report status


The System log provides a summary of the status of the IP device. The unit records the data of the software activity in a file.

- > View Log: Click this button to display the system log information.
 - Download: Click this button to see the log information of system.
- > View report: Click this button to display the report of the system.
 - Download: Click this button to see the report information of system.

Note :

The downloaded file is a UNIX type. If you open the file in Microsoft Notepad, it will display the text as if the file contained no line breaks at all.

Language

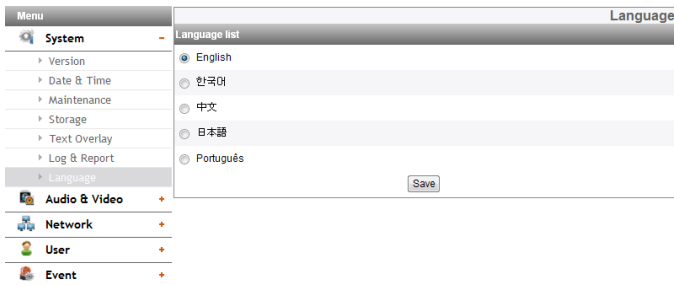

Language list

Select a language for the LG Smart Web Viewer configuration menu and information display.

- Save: Click this button to confirm the settings.

Audio & Video settings

Camera

Preview (Applicable model: LNB5220 / LNB5320)

You can preview the camera image on the preview window.

Note:

The preview screen may differ depending on models.


Preview (Applicable model: LND5220R)

1. Adjust the zoom, focus options.
2. Set the Zoom or Focus step options.

Note:

- Focus Push : To save the final location after the Auto Focus operation is performed.
- Except for [Focus Push], the location of the lens is not stored. If the power is turned off or restart the software, the lens may not move to the final location.

Install

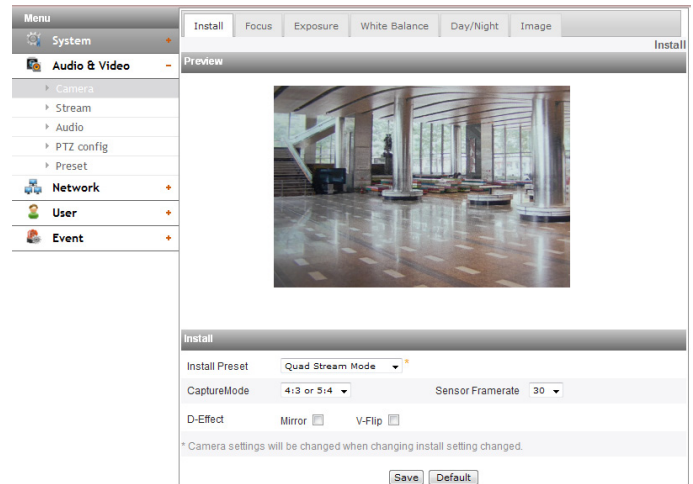

- > Install Preset: Select the Install Preset mode from the drop-down list.

Note:

- Privacy Mask settings are initialized every time Pivot Mode is selected or deselected.
- It is displayed the constraints according to preset settings by mouse-over at the right-top of the drop-down list box.

Install Preset	Sensor Framerate	Pivot	Video Out	Max Streams
Quad Stream	25 or 30	Off	Off	4
Pivot	25 or 30	On	Off	3 (1)

- > Capture Mode (Applicable model: LNB5320): Select the capture mode.

Capture Mode	Resolution
16:9	1920 x 1080, 1280 x 720
4:3 or 5:4	2048 x 1536, 1280 x 1024

Note:

If you change the Capture Mode option, the Privacy settings on the OSD menu is initialized.

- > Sensor Framerate: Select the Sensor Framerate value.

Note:

- FPS maximum value cannot exceed the value of Sensor Framerate.
- Pivot, Video out, Max Stream Count are limited, depending on the Install Preset setting.

- You need to reset the Motion Detect and Smart Analytics in Event menu every time Pivot Mode is selected or deselected.

> D-Effect: You can select the digital effect.


- Mirror: Turn on the mirror effect.
- V-Flip: Flip the picture vertically.

Note:


- Video codec settings should be set to H.264 or H.264_HIGH to operate the Pivot function.
- The [Mirror] and [V-Flip] function can be selected at once.
- In the [Pivot] mode, the Text Overlay is rotated 90 degrees counterclockwise to the output. It is not affected of the Mirror and V-Flip.
- Install settings will be updated at the time of entering the Install tab.

- Save: Click this button to confirm the settings.
- Default: Click this button to restore the IP device back to original factory settings.

Focus (Applicable model: LNB5220 / LNB5320)

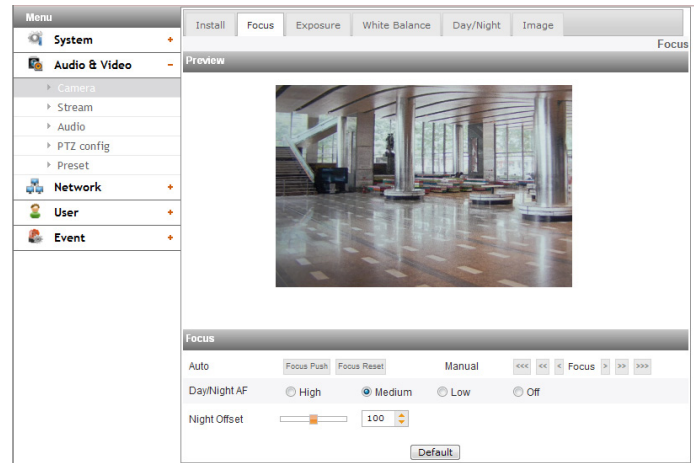

Focus (Applicable model: LND5220R)

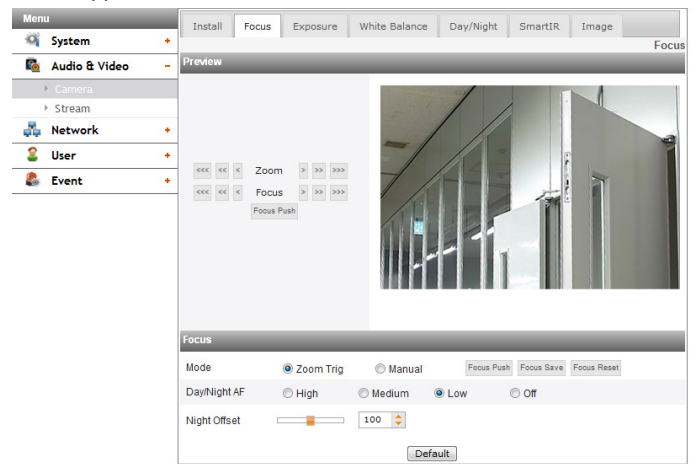

- > Auto (Applicable model: LNB5220 / LNB5320): Select [Auto] option on the [Focus] menu, then select the following mode.
 - Focus Push: This function will be activated automatically to adjust the focus.
 - Focus Reset: The focus position is located at factory default position.
 - Manual: Use <, <<, <<<, >, >> or >>> button to adjust the focus position manually.

Note:

- When you mount the lens, press [Focus Reset] button to reset your focus.
- After adjusting the focus approximately, press [Focus Push] button to adjust the lens sharply into focus.
- > Mode (Applicable model: LND5220R): Select [Mode] option on the [Focus] menu, then select the following mode.
 - Zoom Trig: After the change of the zoom position, camera is performed autofocus once. Also the manual-focusing is enable too.
 - Manual: Use <, <<, <<<, >, >> or >>> button to adjust the focus position manually.
 - Focus Push: This function will be activated automatically to adjust the focus.
 - Focus Save: Save the position of Zoom and Focus at the moment of click this button. The focus moves to the stored position even if the camera is reset.
 - Focus Reset: If the abnormal operating occurs or the camera is out of focus by external shocks or other reasons, click this button to initialize the lens and return to the current location.

Note:

- After installation, the focus may be twisted by external shocks. In this case, press the [Focus Reset] button to initialize the lens.
 - Click <, <<, <<<, >, >> or >>> button to move once within a narrow range. And the movement range depends on a shape of >, >>, >>> buttons.
- > Day/Night AF: You can set the AF function when the Day/Night mode is converted.
- High / Medium / Low : Select [High], [Medium] or [Low] of the AF operating range. When [High] is selected, the widest AF operating range is set.
 - OFF: Not used the AF function when the Day/Night mode is converted.


Note:

- While the autofocus is performed, in the following cases may not be able to focus.
 1. When the environment is too dark to distinguish the object.
 2. When the brightness of the surrounding is sharply changed.
 3. When the object is too away or a movement is severe.
 4. When the image contrast is low.
 5. When the strong light source is in the front and back.
 6. When the camera is shaken by external vibration or shock.
- If the camera is out of focus after autofocus, adjust the focus manually using <, <<, <<<, >, >> or >>> button.
- In the conditions as above, it may be out of focus when the Day / Night mode is converted. In this case, it is recommended to select [Low] or [Off].
- > Night Offset: Adjust the focus manually in the night mode of Day/Night function. Adjust the value by moving the handle or pushing the arrow button.

Note:

- 100 is the standard value. The closer the value is to 200, the further the focusing distance will be, and the closer to 0, the nearer.
 - When the Day/Night function is converted to day mode, the focus will be returned to previous position.
 - It will be highly efficient when it is hard to focus with [Day / Night AF] function.
- Default: Click this button to restore the IP device back to original factory settings.

Exposure

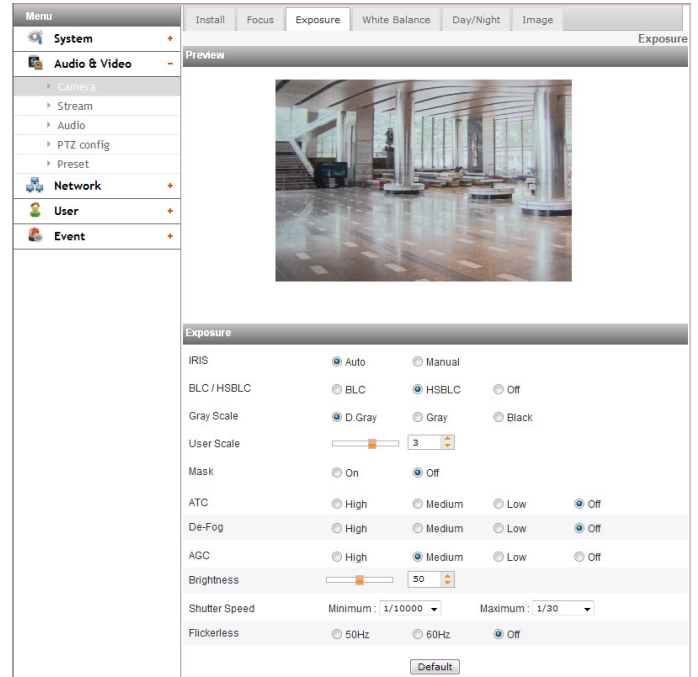

- > IRIS: Select the desired lens iris mode for camera exposure. Select [IRIS] option on the [Exposure] menu, then select a mode.
 - Auto: The lens iris is set automatically.
 - Manual: Select this option when use the lens for adjusting IRIS manually.

Note:

When the [Manual] is selected, IRIS is fixed on full open state. In this case, adjust the brightness by shutters.

- > BLC/HSBLC: Select the backlight compensation options. If you select the [HSBLC] option, the [Gray Scale], [User Scale], [Mask] options are displayed.
- > BLC: Camera's backlight compensation feature helps alleviate issues of visibility in high contrast areas.
- > HSBLC: You can see the object more clearly by covering the bright area more than specified brightness.
 - Gray Scale: Select the color to cover the bright area.
 - User Scale: Select the brightness level.
 - Mask: Set the function which the area more than specified brightness hides by certain color.

Note:

The HSBLC option is always operated regardless of AGC.

- > ATC: Adjusts the contrast of the image automatically to provides bright and clear images.
- > De-Fog: Select the value to remove the misty fog of image.
- > AGC: If the images are too dark, change the maximum [AGC] value to make the images bright.
- > Brightness: Adjust the brightness of images.
- > Shutter Speed: Select the desired shutter speed for camera exposure. You can change the shutter speed to higher speed to capture fast-moving subjects, though the image becomes darker.

Minimum Shutter	1/10 000	1/5 000	1/2 500	1/1 500	1/1 000
	1/700	1/500	1/480	1/400	1/360
	1/300	1/250	1/240	1/180	1/150
	1/120	1/100	1/60	1/50	1/30
	1/25				

Maximum Shutter	1/10 000	1/5 000	1/2 500	1/1 500	1/1 000
	1/700	1/500	1/480	1/400	1/360
	1/300	1/250	1/240	1/180	1/150
	1/120	1/100	1/60	1/50	1/30
	1/25	1/20	1/15	1/8	1/4
	1/2	2/3	1	1.5	2


- > Flickerless: Remove the band noise caused by fluorescent light.

Note:

When the [IRIS] is set to [Manual], if the surrounding area is bright, can be seen flicker even if the [Flickerless] is set. In this case, set the [IRIS] to the [Auto].

- Default: Click this button to restore the IP device back to original factory settings.

White Balance

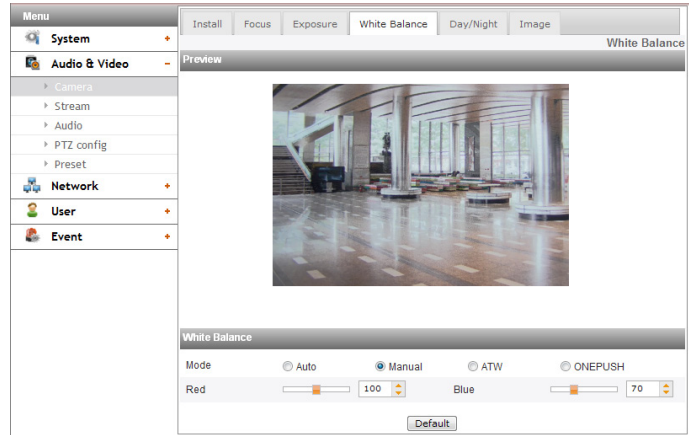


- > Mode: Select [Mode] option on the [White Balance] menu, then select the following mode.
 - Auto: Adjust the white balance of the full image area. Use this function in the environment by special lighting lamp.


Note:

When a monochromatic object is caught on camera, the object may seem faded. In case of this, it is recommended to set to [ATW] mode.
 - Manual: You can set the white balance options manually. If the [Mode] option set to [Manual], [Red] and [Blue] are displayed.
 - ATW (Auto-Tracing White Balance): Adjust the white balance by tracing the white area. In the following conditions, may not work properly:
 1. When the scene contains mostly high color temperature objects, such as a blue sky or sunset.
 2. When the scene is dim.
 - ONE PUSH: If you select the [ONE PUSH] mode, you will be able to set up the White Balance automatically.
- > Red: Set the desired red value.
- > Blue: Set the desired blue value.
- > Color Temp: If the [Mode] option set to [ATW], this option is displayed. Click to select the option.
 - Indoor: Adjust the white balance according to the indoor environment.
 - Outdoor: Adjust the white balance according to the outdoor environment.
- Default: Click this button to restore the IP device back to original factory settings.

Day/Night

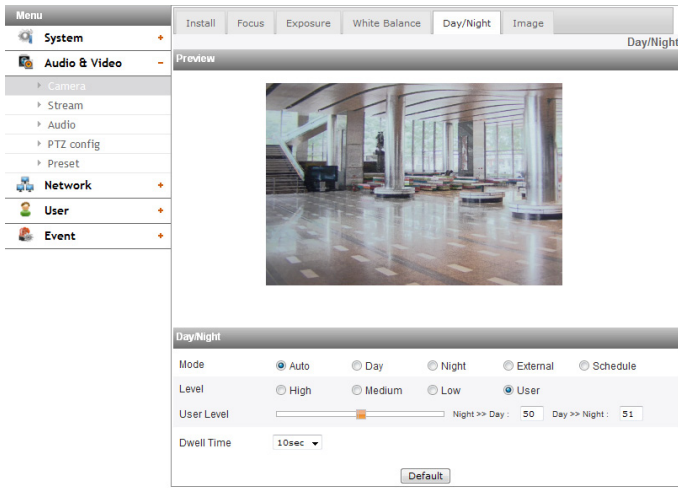

- > Mode: Select [Mode] option on the [Day/Night] menu, then select the following mode.
 - Auto: [Day/Night] mode can be changed to the [Auto] mode depending on the [Level] settings.
 - Day: Maintains the color mode always.
 - Night: Maintains the Black-and-white mode always.
 - External: The Day/Night mode is converted by using Alarm In Port.
 - Schedule: Operates as the [Day] mode during set time.
- > To set the schedule
 1. Select the [Schedule] option. The detail options are displayed.

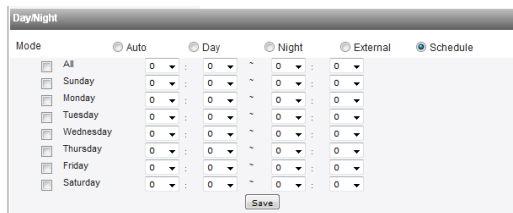

2. Select the check box of options.
 - All: Operates as the [Day] mode every day during set time.
 - Sunday - Saturday: You can set the time for each day of the week. For days of week which are not selected, it operates as [Auto] mode.
 - Save: Click this button to save the schedule setting.
- > Level: Adjust the automatic conversion time according to the ambient light. If you select the [High], conversion is made in the lowest illuminance.
 - > User Level: When you select the [Level] option to [User], you can adjust the automatic conversion time according to the ambient light. The left handle set the value of [Night >> Day] and the right handle set the value of [Day >> Night].
 - > Dwell Time: Set the time to maintain the brightness for the automatic conversion.


Note:

- When you set to [External] mode, the [Sensor] function of [Triggered Event] will be deactivated.
- In case of [External] mode, you should set to [Enable] from the [Sensor&Relay > Sensor] option.
- Set the type of [Sensor] according to External Sensor type. The Day/Night mode is converted as below table.

Sensor Type	Alarm	Mode
Normal Open	High	Day
	Low	Night
Normal Close	High	Night
	Low	Day

- If the difference of value between the [Day >> Night] and [Night >> Day] is not big enough, may occur the problem to convert the Day and Night.
- When the [AGC] set to [Off], the [Day/Night] is initialized to the [Day] mode. Other settings of [AGC] are initialized to the [Auto] mode.
- Default: Click this button to restore the IP device back to original factory settings.

SmartIR (Applicable model: LND5220R)

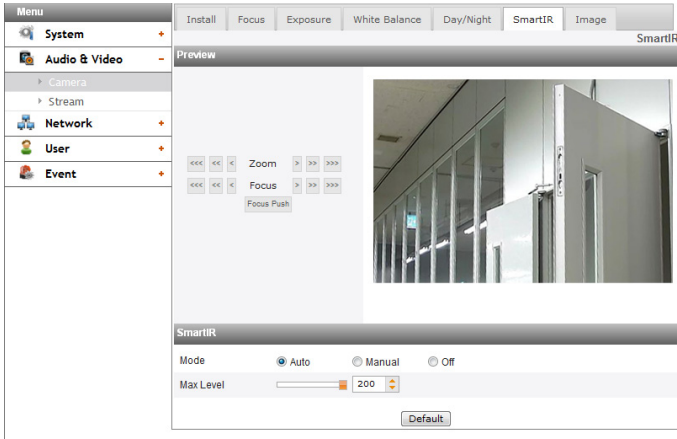

> Mode

- Auto: When the [Day/Night] menu set to [Night] mode, the brightness of the IR LED will be adjusted automatically. The [Max Level] is displayed.
- Manual: When the [Day/Night] menu set to [Night] mode, the brightness of the IR LED will be fixed.
- Off: When the [Day/Night] menu set to [Night] mode, IR LED will be turned off.


- > Max Level: If the [Mode] option set to [Auto], can be adjust the maximum brightness of IR LED.

Note:

When set the [IRIS] to the [Manual], the [Auto] mode is deactivated.

- > Level: If the [Mode] option set to [Manual], can be adjust the fixed brightness of IR LED.
- Default: Click this button to restore the IP device back to original factory settings.

Image

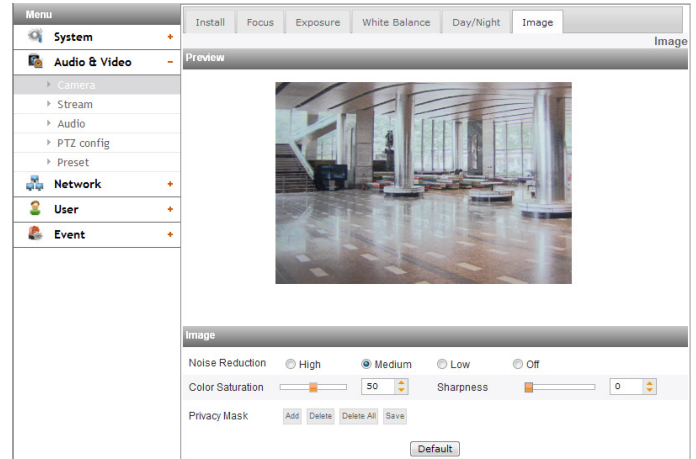

- > Noise Reduction: If pictures are not clear due to noise, this option would reduce the noise of picture. When you use this function, the afterimage may occur.

- > Color Saturation: Set the intensity of the color.

- > Sharpness: The degree to which the boundary of the two portions is clearly distinguished. If you set the sharpness value to higher, the image outline becomes sharp. If you set to lower value, the image outline becomes dim.

- > Privacy Mask

- Add: Click the [Add] button.

1. When you click on the preview screen, yellow cross point is displayed.
2. When you select all of 2 points, area is set automatically.

Note:


- You can cancel the point by click the mouse right button near the other point.
- Up to 4 zone is available to set.

- Delete: Delete the selected zone.
- Delete All: Delete all of the mask zone.
- Save: Save the settings of the Privacy Mask.

Note:

- If the privacy mask setting is changed , it is not applied immediately. You need to click the [Save] button to save the settings.
- When the [Image] tab is selected, the Privacy Mask area is displayed on the preview window.
- Set the [Privacy Mask] after complete the [Install] settings.
- Privacy Mask settings area is not maintained by the screen change by the operation of Pan / Tilt / Zoom. When reset the Pan / Tilt / Zoom, you need to reset the Privacy Mask settings area also.
- If the [D-Effect] is changed, the [Privacy Mask] settings will be initialized.
- Default: Click this button to restore the IP device back to original factory settings.

Stream

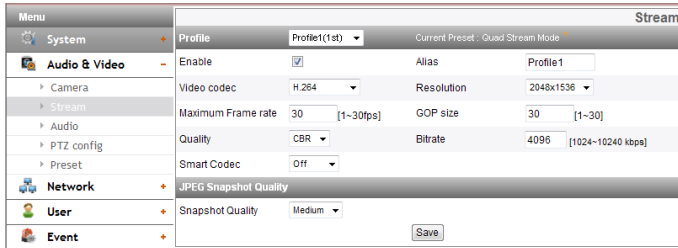

Profile

Select the stream [Profile1], [Profile2], [Profile3] or [Profile4] depending on Install Preset.

Note:

It is displayed the constraints according to the current preset settings by mouse-over at the right-top of the current Preset.

- Applicable model: LNB5220 / LND5220R

Profile	Profile1	Profile2	Profile3	Profile4
Quad Stream	1080p @ 30 fps	1080p @ 15 fps	720p @ 30 fps	CIF @ 30 fps
	1080p @ 30 fps	720p @ 30 fps	720p @ 30 fps	CIF @ 30 fps
Pivot	1080p @ 30 fps	N/A	N/A	N/A
	1080p @ 15 fps	720p @ 30 fps	CIF @ 30 fps	N/A
	720p @ 30 fps	720p @ 30 fps	CIF @ 30 fps	N/A

- Applicable model: LNB5320

Profile	Profile1	Profile2	Profile3	Profile4
Quad Stream	1536p / 1080p @ 30 fps	1536p / 1080p @ 15 fps	1024p / 720p @ 30 fps	CIF @ 30 fps
	1536p / 1080p @ 30 fps	1024p / 720p @ 30 fps	1024p / 720p @ 30 fps	CIF @ 30 fps
Pivot	1536p / 1080p @ 30 fps	N/A	N/A	N/A
	1536p / 1080p @ 15 fps	1024p / 720p @ 30 fps	CIF @ 30 fps	N/A

- > Enable: Click to activate the stream function.
- > Alias: Enter the profile name you want to use.
- > Video codec: Select the video mode (Codec) from the drop-down list. The viewer can choose among MJPEG, H.264 and H.264_HIGH.
- > Resolution: Select the resolution from the drop-down list.
- > Maximum frame rate: Set the frame rate of the image.

Note:

Refer to the table below for the supported Framerate.

If you enter the unsupported framerate, the less Encoding Framerate than the input is applied.

For example, when 17 fps is entered, 15 fps will be applied.

Encoding Framerate	Sensor Framerate	
	30	25
30	O	N/A
25	O	O
20	O	O
15	O	O
10	O	O
5	O	O
4	O	O
3	O	O
2	O	O
1	O	O

- > GOP size: It means "Group of Pictures". The higher the GOP, the better is the video quality of the camera. Set the value of GOP from 1 up to 30 depending on Install Preset settings. This setting is valid for H.264 video format only.
- > Quality: Select the Quality.
 - VBR: The bit rate may vary depending on the complexity of the video to meet the selected quality.
 - CBR: The video quality may vary in order to preserve a constant bit rate.
- > Smart Codec: You can improve the image of specific area to configure the Region. If you select the [Region] option, the [Smart Codec (Region)] window is activated.

Note :

- When the video codec is H.264 or H.264_HIGH, the Smart Codec can be selected.
- Two areas can overlap and the sum of the two areas have to be less than 30 % of the total area.
- Smart Codec settings area is not maintained by the screen change by the operation of Pan / Tilt / Zoom. When reset the Pan / Tilt / Zoom, you need to reset the Smart Codec settings area also.
- > Stream quality: If the [Quality] option set to VBR, this option is displayed. Select the stream quality from the drop down box, the camera supports five types. (Highest, High, Medium, Low and Lowest)
- > Bit rate: If the [Quality] option set to CBR, this option is displayed. If the Profile is set to [Profile1], can be set the Bitrate value from 1 024 kbps to 10 240 kbps. In case of [Profile2], [Profile3], [Profile4], can be set from 256 kbps to 10 240 kbps.

Note:

If the 'Bit rate' is configured too low with high resolution, the actual frame rate will decrease because of narrow bandwidth. So you need to set or change the 'Bit rate' to high value.

JPEG Snapshot Quality

- > Snapshot Quality: Select the quality of JPEG snapshot.
- Save: Click this button to confirm the settings.

Audio (Applicable model: LNB5320)

Audio In

- > Enable: Click the check box if you want to send the audio from the microphone input connector.

Note:

The Clients connected to the IP device remain unaffected with additional changes made in the setting.

- > Input: Select the type of audio input. (Line in, Microphone)
- > Audio type: Select the type of audio encoding. (G711 PCMA, G711 PCMU, G726 24K, G726 32K)

Audio Out

- > Enable: Click the check box to output the audio from the speaker.

Note:

Depending on the camera and Network condition, it may delay for a few seconds.

- Save: Click this button to confirm the settings.

PTZ config (Applicable model: LNB5220 / LNB5320)

PTZ protocol list

- > PTZ protocol: Displays the selected PTZ protocol.


PTZ configuration

- > Camera ID: Enter the PTZ device ID. Make the same ID as the PTZ Device.
- > Pan speed: Enter the panning speed of the PTZ device in the edit box.
- > Tilt speed: Enter the tilting speed of the PTZ device in the edit box.
- > Zoom speed: Enter the zoom speed of the PTZ device to view the object close or at a distance.
- > Focus speed: Enter the focus speed of the PTZ device to focus an object clearly near or far.

Port

- > Baud rate: Select the desired speed of communication between the IP device and the PTZ Device. Confirm selected parameter to the baud rate of the IP device.
- > Data bit: Set the number of the data bits for RS-485 communication.
- > Parity: Select the desired parameter. The parity bit, added to the data, to perform parity check.
- > Stop bit: Enter the desired parameter. The stop bit, added to the last of data, in asynchronous communication.
- Save: Click this button to confirm the settings.

Preset (Applicable model: LNB5220 / LNB5320)

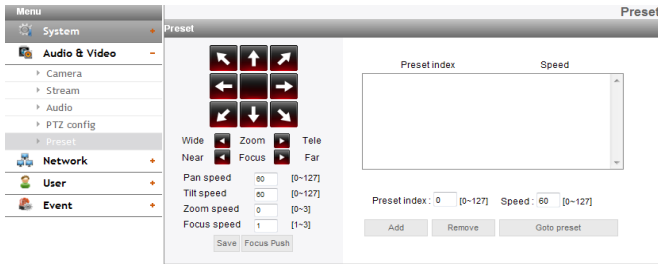

Preset

Displays the registered preset position.


1. Move the camera to the point you want by using the arrow buttons.
2. Set the Pan, Tilt, Zoom or Focus step options.
 - > Add: Click to add a preset position.
 1. Enter the preset index and speed.
 2. Click the [Add] button.
 - > Remove: Click to delete the preset position.
 1. Select the preset from the list.
 2. Click the [Remove] button. The preset will be deleted.
 - > Go to preset: Move to the preset position.
 1. Select the preset from the list.
 2. Click the [Go to preset]. The camera will be moved to the selected preset.

Note:

RS-485 is connected or not, [Focus Push] and [Save] function always work.

Network settings

Basic

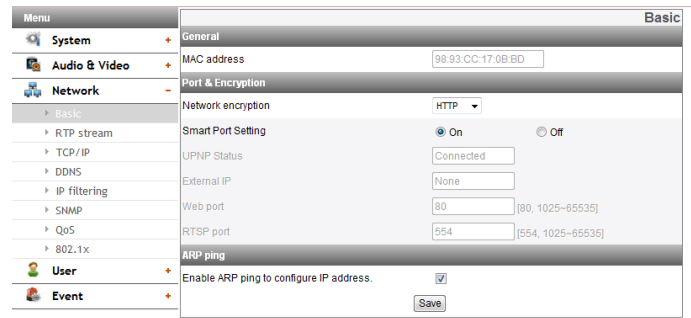

General

- > MAC address: Displays the MAC address.

Port & Encryption

- > Network encryption: Select the HTTP or HTTPS option for security.
- > Smart Port Setting: Select [On] to allocate a port number automatically.

Note:

If you select [On], [UPNP Status], [External IP], [Web Port] and [RTSP Port] options are deactivated.

- > UPNP Status: When you use the router that is supported UPNP function, you can set the port forwarding automatically by using the [Smart Port Setting]. [UPNP Status] shows connected status of router.
- > External IP: When you connect the router that is supported UPNP function, this option is displayed. Displays the external IP address allocated router.
- > Web port: The default HTTP port number (80) can be changed to any port within the range 1 025 to 65 535.
- > RTSP port: Check RTSP port. The default port is 554. Other ports can be selected within the range 1 025 to 65 535.

Note:

The RTSP port number should not be same with the web port number.

ARP ping

- > Enable ARP ping to configure IP address: Check to enable ARP ping.
- Save: Click this button to confirm the settings.

RTP stream

RTP (Real-time Transport Protocol) is an internet protocol that allows programs to manage the real-time transmission of multimedia data, via unicast or multicast.

Profile

- > RTP unicast: When enabled the transmission of the data to the specified equipment happens on a network specifying a single address.
- > RTP multicast: When enabled it reduces the transmission load on the camera by making the computer of the same segment network receive the same transmission data. When multicast option is checked then select Video Port number and Data port number.
 - IPv4 address: Set the IP address for RTP multicast.
 - Base RTP port: Enter the port number of even number used for the multicast streaming. Each profile uses successive 6 port number which starts from [Base RTP port]. It is initially set to 10 000 and you can edit this between 10 000 and 65 530.
- > Motion-Control FPS: If there is movement, the Framerate is adjusted automatically.

Note:

- Video codec settings should be set to H.264 or H.264_HIGH to operate the Motion-Control FPS.
- Each profile using multicast needs its own multicast IP address and port numbers to avoid address conflict. When more than 2 profiles use same multicast IP address, each [Base RTP port] number should be distinguished from the other port number more than 6 at least.

Multicast

- > Always Multicast: Check to enable multicast regardless of client connection.

TTL

- > TTL: This option indicates the Time-To-Live of multicast packets. The default setting is 7, and the allowed TTL range is from 1 to 255.

IP Fragmentation

- > IP Fragmentation: Check to enable IP fragmentation. When the VMS is not supported the IP Fragmentation, uncheck this feature.
- Save: Click this button to confirm the settings.

TCP/IP

IPv4 address status

- > Automatically set with DHCP: Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.
 - Notify to SMTP server, if IP address is changed: If you select this option, the user get a notification mail telling about changing of IP of the IP device.

Note:

- You should register the SMTP server on the Event server setting to set this function.
- If you select [Automatically set with DHCP], the camera obtain IP address from DHCP server after IP address is set "192.168.0.16".
- > Statically set: Select this option when you set a fixed IP address, with this setting, specify the IP address, Subnet mask and default gateway manually.
 - IPv4 address: Enter an IP address.
 - Subnet mask: Enter a subnet mask address.
 - Gateway: Enter the gateway address.

DNS server status


- > Primary DNS server: Enter the Primary domain name server that translates the hostnames into IP address.
- > Secondary DNS server: Enter the Secondary DNS server address that backups the Primary DNS.

IPv6 address status

- > Enable: Click the check box if you want to use the IPv6 address.
- > Mode
 - Manual: Select this option when you set a fixed IP address manually.
 - Basic: Select this option to allow IPv6 address assignment based on the Mac address. With this setting, the IP address is assigned automatically.
 - DHCPv6: Select this option when exist a DHCPv6 server in network. If DHCPv6 server is not existed or temporary disability, it requests assignment every 3 minutes.
- > IPv6 address: You can enter the IP address when you select the Manual mode. It alarms when you enter the invalid IP address.
- Save: Click this button to confirm the settings.

DDNS

This free service is very useful when combined with the LG DDNS Server. It allows the user to connect the IP device using the URL, rather than an IP Address. This also solves the problem of having a dynamic IP address.

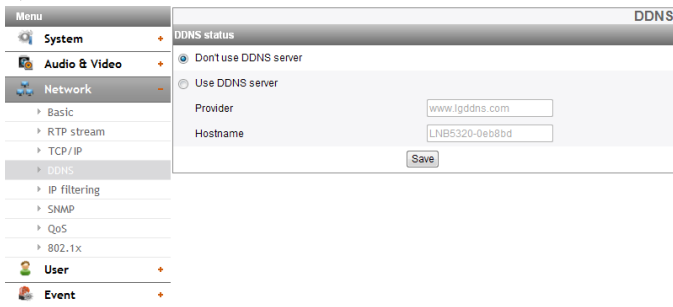


DDNS status

- > Don't use DDNS server: Disable the DDNS function.
- > Use DDNS server: Enable the DDNS function.
 - Provider: Displays the DDNS provider.
 - Hostname: Enter the hostname you want to use.
- Save: Click this button to confirm the settings.

IP filtering

The access of the IP addresses in the list are allowed or denied according to the choice made in the drop-down list of the Basic policy option. The administrator can add up to 10 IP address entries to the list (a single entry can contain multiple IP addresses). The users from these IP addresses need to be specified in the user list with the appropriate access rights. The IP list is to control the access permission of clients by checking the client IP address.

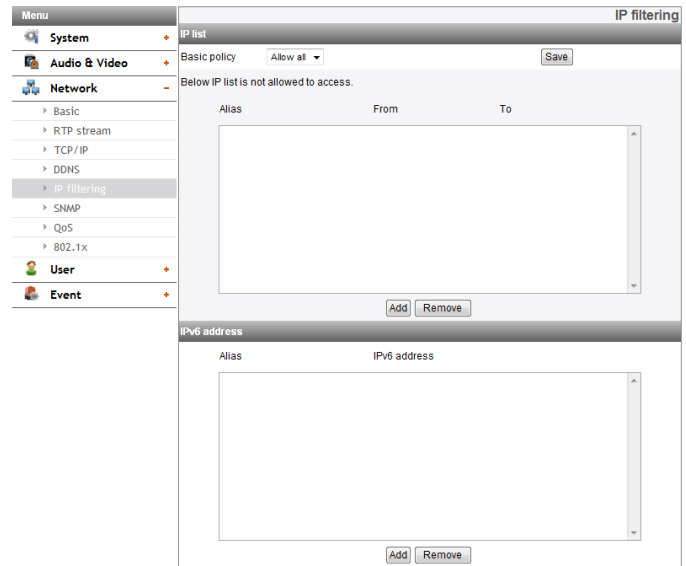

IP list


- > Basic policy: Select the basic policy type.
 - Allow all: Allow all the IP address basically, but the IP addresses in the list are denied.
 - Deny all: Deny all the IP address basically, but the IP addresses in the list are allowed. It needs at least one IP address to activate this function.
 - Save: Click this button to confirm the settings.
 - Add: Click this button to add the IP address.
 1. Click the [Add] button.
 2. Set the IP options.
 - Alias: Enter the alias.
 - From: Enter the start IP address for the IP filtering.
 - To: Enter the end IP address for the IP filtering.
- Note:**
- If you want to deny or to allow a range of IP addresses, enter the start IP address to "From" and the end IP address to "To". You can also add an IP address by entering the same IP address to "From" and "To".
3. Click the [Save] button.
 4. Repeat the steps 1 to 3 to add additional IP address.
- Remove: Click this button to delete the IP address.
 1. Select the alias from the list.
 2. Click the [Remove] button. The IP address will be deleted.

IPv6 address

- Add: Click this button to add the IP address.
 1. Click the [Add] button.
 2. Set the IP address option.
 - Alias: Enter the alias.
 - IPv6 address: Enter the IP address for IP filtering.
 3. Click the [Save] button.
 4. Repeat the steps 1 to 3 to add additional IPv6 address.
- Remove: Click this button to delete the IPv6 address.
 1. Select the alias from the list.
 2. Click the [Remove] button. The IPv6 address will be deleted.

SNMP

The Simple Network Management Protocol (SNMP) is an application protocol to exchange the management information of network devices.

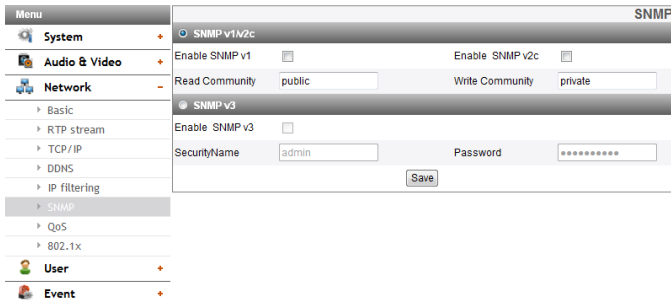

SNMP v1/v2c


- > Enable SNMP v1/v2c: Selects when SNMP is allowed access to this device.
- > Read Community: Specifies the SNMP management community in which you want to read this system.
- > Write Community: Specifies the SNMP management community in which you want to write this system.

SNMP v3

- > Enable SNMP v3: Selects when SNMP v3 is allowed access to this device. It supports authentication and encryption.
- > SecurityName: Type the security name for the SNMP.
- > Password: Type the password for the SNMP.
- Save: Click this button to confirm the settings.

QoS

You can specify network Quality of Service (QoS) settings.

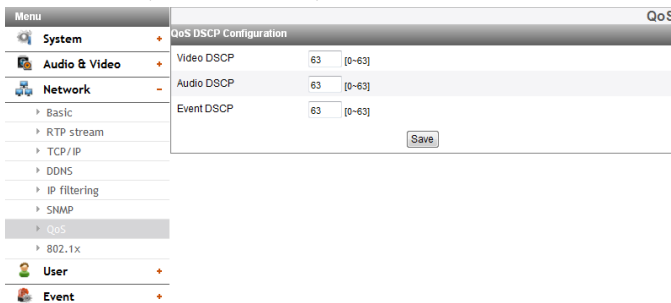


QoS DSCP Configuration

- > Video DSCP: Enter the priority of Video for DSCP (Differentiated Service Code Point) Quality of Service.
- > Audio DSCP: Enter the priority of Audio for DSCP Quality of Service.
- > Event DSCP: Enter the priority of Event for DSCP Quality of Service.
- Save: Click this button to confirm the settings.

802.1x

Specifies whether 802.1x network access is enabled.

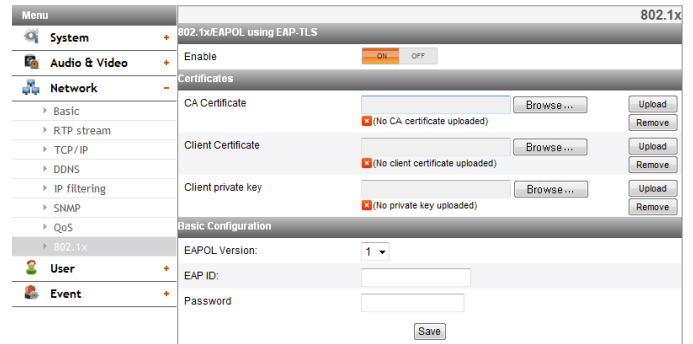

802.1x/EAPOL using EAP-TLS

- > Enable: Select on to enable the protocol. Current authorization status of 802.1x port is displayed on buttons right.

Certificates

- > To upload or remove the certificates
 1. Click the [Browse] Button.
 2. Find and open the certificates file.
 - CA Certificate: Upload the accredited certificate included public key.
 - Client Certificate: Upload the accredited certificate included client authentication key.
 - Client private key: Upload the accredited certificate included client private key.
 3. Click the [Upload] button to install certificates.
 4. Click the [Remove] button to delete certificates.


Basic Configuration

- > EAPOL Version: Select the EAPOL version.
- > EAP ID: Enter the ID of the client certificate using up to 16 characters.
- > Password: Enter the password of the client private key using up to 16 characters.
- Save: Click this button to confirm the settings.

User settings

Basic

The IP device is shipped with the login rights of administrator only. If others need to access the IP device excluding the configuration a login with viewer rights need to be created. A maximum of 50 users can be created.

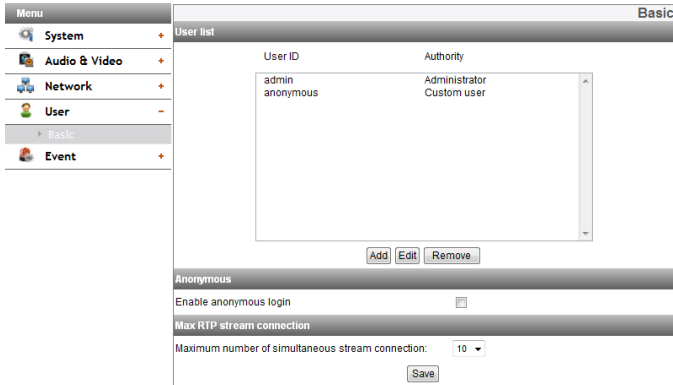

User list

> Add the User

You can register a new user with various access rights.

1. Click the [Add] button. User setting dialog is displayed.
2. Enter the new User ID and Password. (Should have a minimum of 4 characters and preferably a combination of alphanumeric.)
3. To confirm the password, retype the password that you typed in the Password box.
4. Select the authority from the drop down list to provide the access rights to each user and then click the [Save] to confirm your selection.
 - Administrator: Allows you to operate setup menus and to view live images.
 - Power user: Use of the limited functions of the system. (The Configuration menu is not allowed.)
 - Normal user: Provides the lowest level of access, Allows to view live images only.
 - Custom user: The user can login and view the live stream image only when the "Enable anonymous login" option is checked to enable it.

Note:

- Remember the password.
- Displayed Items according access authority are like below:

	Admin	Power User	Normal User / Custom User
PTZ	O	O	X
DPTZ	O	O	X
REC	O	O	X
BI-AUD	O	O	X
MIC	O	O	X
SPEAKER	O	O	X
SETTINGS	O	X	X

> Edit the registered user

You can change the password or authority.

1. Choose the user ID and then click the [Edit] button.
2. Change the Password or Authority, then click the [Save] button to confirm your selection.

> Delete the registered user

1. Choose the user ID you want to delete.

2. Click the [Remove] button.

Note:

The default administrator user ID 'admin' and 'anonymous' are permanent and cannot be deleted.

Anonymous

> Enable anonymous login

Check the box to enable anonymous user login - allows the user access for only viewing the live stream image.

Maximum RTP stream connection

> Maximum number of simultaneous stream connection:

Set this number to limit the number of simultaneous stream connections.

The connections depend on the stream configuration as shown in the following Maximum RTP stream connection by stream configuration.

- Applicable model: LNB5220 / LND5220R

Video Codec	Resolution	Frame Rate	Quality	Maximum RTP stream
H.264_HIGH	1920 x 1080	30	HIGHEST	Up to 20
H.264	1920 x 1080	30	HIGHEST	Up to 20
MJPEG	1920 x 1080	10	HIGHEST	Up to 14

- Applicable model: LNB5320

Video Codec	Resolution	Frame Rate	Quality	Maximum RTP stream
H.264_HIGH	2048 x 1536 / 1920 x 1080	30	HIGHEST	Up to 20
H.264	2048 x 1536 / 1920 x 1080	30	HIGHEST	Up to 20
MJPEG	2048 x 1536 / 1920 x 1080	10	HIGHEST	Up to 14

Note:


Preview window of the IP device setting and preset setting are affected by this setting.

- Save: Click this button to confirm the settings.

Event settings

Event server

Event Servers are used to receive the recorded video clip and/or notification messages.

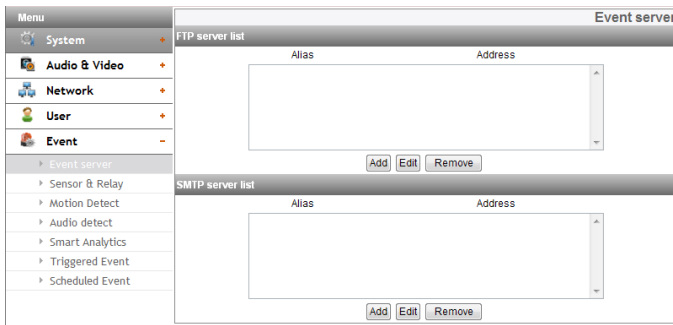

FTP server list

Image files can be transferred to the FTP server within the scheduled time. Image file that has been recorded linked to an external event is sent to the FTP server periodically.

- > To add the FTP server
 1. Click the [Add] button. FTP server setting window is displayed.
 2. Set the FTP server options.
 - Alias: Type the FTP Server name to upload the image files.
 - Address: Enter the FTP server's IP address.
 - Port: Enter the port number. The default FTP port is 21.
 - User ID: Type the user name for the Folder shared in the FTP server.
 - Password: Type the password for the folder shared in the FTP Server.
 - Folder: Type the path with the folder that is shared in the FTP server.
 - Test: Select [Test] to test the FTP server.
 3. Click the [Save] button to confirm the settings.
- > To edit the FTP server
 1. Choose the FTP server in the FTP server list.
 2. Click the [Edit] button.
You can check or edit the FTP server options.
- > To delete the FTP server
 1. Choose the FTP server in the FTP server list.
 2. Click the [Remove] button. This would remove the FTP server from the list.

SMTP server list

By selecting the e-mail option, a still image of the event is captured and an e-mail with the attached image file is sent to the specified mail address.

- > To add the SMTP server
 1. Click the [Add] button. SMTP server setting window is displayed.
 2. Set the SMTP server options.
 - Alias: Enter the SMTP server name.
 - User ID: Enter the user ID of the SMTP server. This would be the one who owns the mail account.
 - Password: Enter the password of the SMTP server.
 - Address: Enter the SMTP server address.
 - Port: Enter the port number. The default port is 25.
 - Enable SSL: Check when use the SSL (Secure Socket Layer) protocol. SSL protocol is cryptographic protocols that provide secure communication on a

network.

- Receiving address: Type the recipients e-mail address. You can specify only one recipient e-mail address.
 - Administrator address: Type the e-mail address of the administrator.
 - Subject: Enter the subject/title of the e-mail.
 - Message: This message can describe the information of the acquired IP address, etc.
 - Test: Select [Test] to test the SMTP server.
3. Click the [Save] button to confirm the settings.
- > To edit the SMTP server
 1. Choose the SMTP server in the SMTP server list.
 2. Click the [Edit] button.
You can check or edit the SMTP server options.
 - > To delete the SMTP server
 1. Choose the SMTP server in the SMTP server list.
 2. Click the [Remove] button.

Sensor & Relay

Sensor & Relay			
Sensor			
Enable	Alias	Type	
<input checked="" type="checkbox"/>	Sensor-0	Normal open	
Relay			
Control duration	Alias	Type	Control relay
[1-86400(24hour),second]	Relay-0	Normal open	Run Stop
5			Save


Sensor

- > Enable: Marks up when you want to activate the sensor.
- > Alias: Displays the sensor name.
- > Type: Select the sensor type.

Relay

- > Control duration: Enter the relay time.
- > Alias: Displays the relay name.
- > Type: Select the relay type.
- > Control relay
 - Run: Click to activate the relay.
 - Stop: Click to stop the relay.
- Save: Click this button to confirm the settings.

Motion Detect

Motion Detect	
Preview	
General	
Sensitivity(MD, SVA)	25
Add Save	

Preview

You can preview the motion detection window on the preview window.

General

- > Sensitivity: Enter the sensitivity to detect an object in motion.
- Save: Click this button to confirm the settings.


How to set the motion detect window

1. Click the [Add] button. The motion detect window is displayed. You can add the three windows maximum for motion detection area.
2. Set the [Sensitivity] option.
3. Click the edge or corner of the window box to adjust the window size for motion detection.
4. Click the [Save] button to save the settings.

Note:

- Created motion detection area window will be applied for the same sensitivity at once.
- Increase the sensitivity in the environment with a low lighting condition or a few motion. On the contrary, in the environment with a high lighting condition or a lot of motion, decrease the sensitivity.
- The Motion Detection function may not work depending on your installation environment.
- Motion Detection settings area is not maintained by the screen change by the operation of Pan / Tilt / Zoom. When reset the Pan / Tilt / Zoom, you need to reset the Motion Detection settings area also.
- You can reset the window size. Click one of the window edge or corner and drag & drop to reset the motion detection area.
- Motion Detection can be activated when at least one of channels is enabled, Video codec is set to H.264 and GOP size is more than 2.

Audio detect (Applicable model: LNB5320)

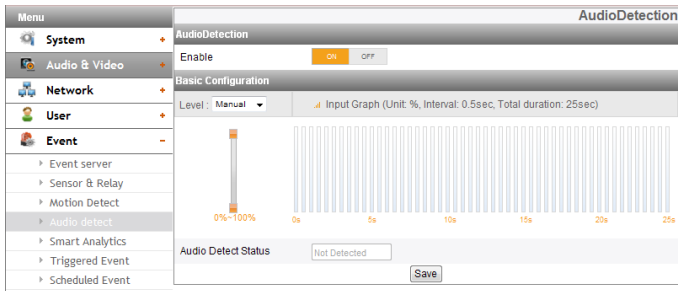


Audio Detection

- > Enable: Set to [ON] or [OFF]. The Basic Configuration menu is displayed when selects [ON].

Basic Configuration

- > Level: Select the level of audio detection from the drop-down list. You can set the level using by jog control. If you use jog control, the [Level] option is set to [Manual] automatically.
- > Input Graph: Displays at intervals 0.5 seconds within 25 seconds cumulative graph.
- > Audio Detect Status: Displays the audio is detected or not.
- Save: Click this button to confirm the settings.

Smart Analytics

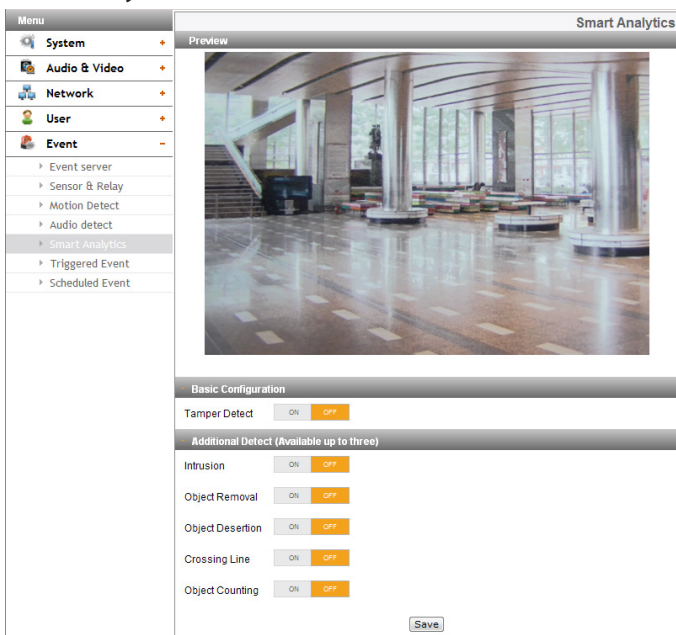

Preview

You can preview the camera image on the preview window.

Basic Configuration

- > Tamper Detect: Detect changes on the screen and operate in accordance with the registered Event.

Additional Detect (Available up to three)

- > To set the detect area
 1. Set to [ON] the desired algorithm.
 2. Click the [Set Zone] or [Set Line] button.
 3. Click the left mouse button on the screen to set the detect area.
 - Intrusion: When the perceived object is(are) move into the event area, the Intrusion Event is activated.
 - Object Removal: When the object is disappear from the setting area, the Object Removal Event is activated.
 - Object Desertion: When the object is placed in the

setting area, the Object Desertion Event is activated.

- Crossing Line: When the perceived object go through a setting lines, the Crossing Line Event is activated.
- Object Counting: When the perceived object go through a setting line, the Object Counting Event is activated.

4. Click the [Save] button to confirm the settings.

Note:

- You can select an algorithms up to 3.
- It is possible to set in area up to octagon from triangle, and can be set only convex polygon.
- To finish the area setting, click right mouse button. In case of octagon, it is finished to click the last point.
- While set an area, if you click the right mouse button over the point, the point is canceled.
- In case of [Intrusion], [Object Removal], [Object Desertion] algorithms can set the detect area and [Crossing Line], [Object Counting] algorithms can set the direction of detection.
- When detection occurs, the text is displayed at the right of detection configuration. ("Detected" or "Not Detected")
- When the area setting and activating of [Object Removal] and [Object Desertion] are finished, detection will start in 10 seconds to set the initial background.
- [Object Removal] and [Object Desertion] are activated when the detected object is being in same condition for 10 seconds.
- [Object Removal] and [Object Desertion] need up to 5 minutes to recognize the object as the background.
- Depending on your installation environment, it may occur detection error or performance degradation of image analysis.

Triggered Event

When an event (VA/ Motion detect/ Sensor Event) occurs, this unit records the live images and routes as configured.

Trigger	Relay	FTP(VIDEO)	SMTP	Preset	SD card Recording	FTP(JPEG)
<input type="radio"/> Sensor	Relay-0					
<input type="radio"/> Motion Detect						
<input type="radio"/> Object Counting						
<input type="radio"/> Tamper Detect						
<input type="radio"/> AudioDetection						
<input type="radio"/> Intrusion						
<input type="radio"/> Crossing Line						
<input type="radio"/> Object Removal						
<input type="radio"/> ObjectDesertion						

Event schedule list

- > To edit the Event Schedule
 1. Select the Trigger event and click the [Edit] button. Event schedule window is displayed.
 2. Set the options.
 - Trigger: Display the selected trigger event and the current state of trigger. Current state of trigger is Displayed to On or Off.
 - Time: Sets the weekday, Start, Finish, Pre alarm, Post alarm and Ignore interval time options.
 - Action: Selects the options. This occurs when the event runs.
 - FTP(Video) server/SMTP server: Uploading of images to an FTP server, or e-mail notification.
 - Control relay: The relay is activated or deactivated.
 - SD Card recording: Record on the SD card when the event runs.
 - Move camera to: Write the number of the preset, the camera would Move to this preset when the relay is activated.
 - FTP server(JPEG): Sends the JPEG Image to the FTP server. Image file and suffix setting is available. You can select Date/Time or Sequence of Suffix.
 - Stream: Selects the stream of the connected camera.
 3. Click the [Save] button to confirm the settings.

Note:

- You should register the SMTP and FTP server on the Event server setting to set this function.
- Recording of event(VA/ Motion detect/ Sensor Event) runs every 5 minutes split file.
- Used stream is profile1(1st) in case of FTP(JPEG) transmission.
- When the [External] mode in [Day/Night] menu is used, the [Sensor] is deactivated.

Scheduled Event

Activation Time

- > Always : You can use always by using the FTP server regardless of activation time.
- > Only scheduled time: Continuously record according to the set time and the selected weekday. Drag and drop with left button of the mouse to set the channel and time you want to record.

Action

Set the below option.

- > SD Card recording : Record to SD Card when event occurs. Selects the camera stream for SD card recording.
- > FTP server(JPEG) : Upload the image or send the e-mail to the FTP server. Send Image per, Base File Name and Suffix setting are available.

Note:

- You can select through drag of Activation Time table that is possible to select according to weekday and time.
- Used stream is profile1(1st) in case of FTP(JPEG) transmission. If always checkbox next to FTP(JPEG) is checked, FTP(JPEG) is always enable regardless of the activation time.
- Save: Click this button to confirm the settings.

Reference

Troubleshooting

This section provides useful information to help you to resolve any difficulty you might have with your LG IP device. Fault symptoms, possible causes and remedial actions are provided here.

IP Setting problems

- ARP/Ping: Disconnect and reconnect the power to the network camera. The device should get the IP within 2 minutes.
- Ping your camera: Open the command prompt on your computer, type ping with the IP address of the network device. The reply obtained by this command provides explanation for the cause of the problem.
 1. bytes = 32 time = 2 ms indicates that the IP address is already used and cannot reuse the same. A new IP address needs to be obtained.
 2. Destination host unreachable: indicates that the network device and your computer do not fall in the same subnet hence needs to get a new IP address. Contact the system administrator for the required help.
 3. Request timed out: Indicates that the IP is free as it is not used by anyone and the network device can obtain this.
- IP Conflicts: If the LG network device is set with a static IP address and if the DHCP option is set then there may be IP's same as the network device and other network partner. Hence set the static IP address to 0.0.0.0 to resolve this conflict.

Cannot access the camera from browser:

- Reconnect the network camera with power and check the ping operation to know if the IP is used by others.
- Disable the proxy setting in the Browser if you are using a proxy server.
- Check for proper cabling and network connections, try to ping after verifying the connectivity.
- Sometimes when HTTPS is enabled, we would be checking the URL with http, in this case manually change the URL to the http / https accordingly.
- Verify the DNS and Gateway settings if the IP address is assigned statically to the network device.
- If the browser you're using or a page you're viewing is displaying problems, try to clear the browser's cache. If that doesn't fix the problem, try to clear the browser's cookies.

Accessing camera external to the local network

- Firewall Protection: Check for the internet firewall with the system administrator, either he has to do port forwarding or modify the DMZ function on the router.
- Default router needed: Check if you need configure the router settings.

Sporadic network performance

- Network Switches or hubs used may be of the lower configuration and the load on this may not meet the required conditions of our network camera.
- Check for the RJ-45 cables that are used for the network connectivity.
- If PoE is used check if the power is got by the network camera when connected to it.

Login Password lost

- Reset the camera by pressing the Reset button for more than 3 seconds to restore default settings.
- After the factory settings login using the default user name and password.

Video Streaming problems

- If the video streaming does not start on the Web browser, install the LG Web Client ActiveX program on your computer following the instructions on the Web browser.
- Internet Explorer may not display the image normally depends on the ActiveX version. In this case, check the Internet Explorer settings for ActiveX.
- When Windows IE browsers are used always take care to allow pop ups, check this option before we run the web client.
- Check the quality of image by referring the video settings as described in the manual.
- Sometimes there would be intermittent or very slow video streaming, this may be because of the higher resolution and frame rate that are set for the video.
- The video streaming may appear poor at times, this may be because of the network traffic ,too many devices connected to the switch or hub, enabling motion detection to each of the video streams and because of other programs running on your computer.
- If the images appear to be blurred adjust the focus of the network camera to get a clear image.
- Video images if appear white and black adjust the settings in the OSD to get back the colorful image.
- Select the Night mode if the network camera is connected at a place where surrounding light is less or dark.
- If we obtain lower frame rate than set we need to check from the system administrator for sufficient bandwidth available or reduce the number of applications running on the client computer.

- If the client PC's are unable to access the multicast stream, check with the system administrator for the use of a valid multicast address or check if the router is supporting multicasting.
- If the images appear to have white or gray stripes on it, upgrade the Video graphics driver on the client PC to the latest version.
- Video images may be noisy if you are using the camera in a very low light environment or the bit rate / quality is set to very low values. Provide higher values for quality and support the surrounding environment with enough light.

Audio condition

The client computer that is interacting with the camera needs to have a sound card that is functional to support speaker and microphone.

The sound card needs to be checked for its support for full duplex communication.

Ensure that the mute button of the client computer is not set and all the audio settings are correct.

Speaker button on the web viewer should be enabled to listen the audio from the network camera.

Ensure that the bidirectional audio button is enabled on the Web viewer and the microphone is set.

Change the input and the output gain for microphone and the speaker respectively to set correct audio level.

Browser's problems

When you have a problem with browser, press the [Refresh] button on your browser window.

Clear browser's Cache

- If your browser is not working correctly after upgrade firmware. Please follow the below solution.
- Solution: Deleting your browser's cache may be resolved this issue.
 1. Open Internet Options in browser Tools menu and click the [Delete Files] button in the second entry (Internet temporary files).
 2. Check the other settings that should not be changed.
- If the browser you're using or a page you're viewing is displaying problems, try to clear the browser's cache. If that doesn't fix the problem, try to clear the browser's cookies.

OPEN SOURCE SOFTWARE NOTICE

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Specifications

Item		LNB5220
Camera	Image Device	6.4 mm (1/2.8 Type) CMOS
	Lens Type	CS mountable
	Day / Night	ICR (Auto / Day / Night / External / Schedule)
	Minimum Illumination	Color: 0.03 lx (F1.2, Gain : High, 1/30 sec, 50 IRE)
		B/W: 0.003 lx (F1.2, Gain : High, 1/30 sec, 50 IRE)
	WDR	Digital (Automatic Tone Control)
	Focus	ABF
Image Enhancement	Backlight Compensation, HSBL, 2D+3D-DNR, De-fog, Exposure Control, AGC, White Balance, Privacy Masking, Sharpness, Pivot	
Video / Audio	Video Compression	H.264, H.264_High, MJPEG
	Resolution	1920 x 1080 / 1280 x 720 / D1 (720x576) / CIF (352 x 240)
	Maximum Frame Rate	30 fps @ 1920 x 1080
	Multi-Streaming	Up to 4
	ROI (Region of Interest)	Smart codec (Up to 8)
	Video Analytics	Motion detection, Tampering alarm, Intrusion, Crossing line, Object counting, Object removal, Object desertion
	Text Overlay	Support
Event	Event Trigger	Video analytics, Alarm input
	Event Notification	Relay Out, Email, FTP
	Pre Event Buffering	Support
Interface	Alarm In / Out	1 In / 1 Out
	RS-485	Support
	SD Slot	micro SD (Up to 64 GB, FAT 32)
Network	Ethernet	RJ-45 10 / 100 BASE-T
	Security	Password protection, HTTPS (SSL, TLS), IP filtering, IEEE 802.1X
	Open Protocol	ONVIF 2.2 Profile S, PSIA 1.1
	Protocol	IPv4 and IPv6 : TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP, QoS, UPnP port forwarding
		IPv4 : FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)
	Integrated Software	LG Ipsolute VMS Suite / Mobile application (iPhone, iPad, Android)
Connections	Up to 20	
General	Power Source	DC 12 V, PoE
	Maximum Power Consumption	6.9 W
	Maximum Input Current	590 mA (DC 12 V), 150 mA (PoE)
	Operation Temperature / Humidity	-10 °C to 55 °C / 0 % RH to 80 % RH
	Dimension (W x H x D)	76.5 mm x 67 mm x 136.5 mm
	Weight	356 g

Item		LNB5320
Camera	Image Device	6.46 mm (1/2.8 Type) CMOS
	Lens Type	CS mountable
	Day / Night	ICR (Auto / Day / Night / External / Schedule)
	Minimum Illumination	Color: 0.05 lx @ F1.2 (1/30 sec, 50 IRE)
		B/W: 0.005 lx @F1.2 (1/30 sec, 50 IRE)
	WDR	Digital (Automatic Tone Control)
	Focus	ABF
Image Enhancement	Backlight Compensation, HSBLIC, 2D+3D-DNR, De-fog, Exposure Control, AGC, White Balance, Privacy Masking, Sharpness, Pivot	
Video / Audio	Video Compression	H.264, H.264_High, MJPEG
	Resolution	2048 x 1536 / 1920 x 1080 / 1280 x 1024 / 1280 x 720 / D1 (720 x 576) / CIF (352 x 240)
	Maximum Frame Rate	30 fps @ 2048 x 1536
	Multi-Streaming	Up to 4
	ROI (Region of Interest)	Smart codec (Up to 8)
	Video Analytics	Motion detection, Tampering alarm, Intrusion, Crossing line, Object counting, Object removal, Object desertion
	Text Overlay	Support
	Audio Compression	G.711, G.726
	2-way Audio	Support
	Audio Detection	Support
	Event	Event Trigger
Event Notification		Relay Out, Email, FTP
Pre Event Buffering		Support
Interface	Audio In / Out	1 In : Selectable (Microphone / Line IN), Recommended load impedance (2.2 kΩ), Plug-in-power supported (Voltage: DC 2.5 V)
		1 Out
	Alarm In / Out	1 In / 1 Out
	RS-485	Support
SD Slot	micro SD (Up to 64 GB, FAT 32)	
Network	Ethernet	RJ-45 10 / 100 BASE-T
	Security	Password protection, HTTPS (SSL, TLS), IP filtering, IEEE 802.1X
	Open Protocol	ONVIF 2.2 Profile S, PSIA 1.1
	Protocol	IPv4 and IPv6 : TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP, QoS, UPnP port forwarding
		IPv4 : FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)
	Integrated Software	LG Ipsolute VMS Suite / Mobile application (iPhone, iPad, Android)
	Connections	Up to 20
General	Power Source	DC 12 V, PoE
	Maximum Power Consumption	6.9 W
	Maximum Input Current	590 mA (DC 12 V), 150 mA (PoE)
	Operation Temperature / Humidity	-10 °C to 55 °C / 0 % RH to 80 % RH
	Dimension (W x H x D)	76.5 mm x 67 mm x 136.5 mm
	Weight	356 g

Item		LND5220R
Camera	Image Device	6.4 mm (1/2.8 Type) CMOS
	Lens Type	3 mm to 9 mm F1.2 (x3 Zoom)
	Day / Night	ICR (Auto / Day / Night / External / Schedule)
	Minimum Illumination	Color: 0.03 lx @ F1.2 (1/30 sec, 50 IRE)
		B/W: 0 lx @ IR LED on
	WDR	Digital (Automatic Tone Control)
	IR Distance	30 m
Image Enhancement	Backlight Compensation, HSBLIC, 2D+3D-DNR, De-fog, Exposure Control, AGC, White Balance, Privacy Masking, Sharpness, Pivot	
Video / Audio	Video Compression	H.264, H.264_High, MJPEG
	Resolution	1920 x 1080 / 1280 x 720 / D1 (720x576) / CIF (352 x 240)
	Maximum Frame Rate	30 fps @ 1920 x 1080
	Multi-Streaming	Up to 4
	ROI (Region of Interest)	Smart codec (Up to 8)
	Video Analytics	Motion detection, Tampering alarm, Intrusion, Crossing line, Object counting, Object removal, Object desertion
	Text Overlay	Support
Event	Event Trigger	Video analytics, Alarm input
	Event Notification	Relay Out, Email, FTP
	Pre Event Buffering	Support
Interface	Alarm In / Out	1 In / 1 Out
	SD Slot	micro SD (Up to 64 GB, FAT 32)
Network	Ethernet	RJ-45 10 / 100 BASE-T
	Security	Password protection, HTTPS (SSL, TLS), IP filtering, IEEE 802.1X
	Open Protocol	ONVIF 2.2 Profile S, PSIA 1.1
	Protocol	IPv4 and IPv6 : TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP, QoS, UPnP port forwarding
		IPv4 : FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)
	Integrated Software	LG Ipsolute VMS Suite / Mobile application (iPhone, iPad, Android)
Connections	Up to 20	
General	Power Source	DC 12 V, PoE
	Maximum Power Consumption	8.2 W
	Maximum Input Current	610 mA (DC 12 V), 170 mA (PoE)
	Operation Temperature / Humidity	-10 °C to 55 °C / 0 % RH to 80 % RH
	Dimension (Ø x H)	140 mm x 122 mm
	Weight	560 g

